Magellan® RoadMate™ 760

MAGELLAN®

Read Me First

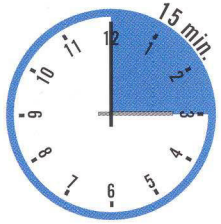

The first time you use your Magellan RoadMate, or if you travel over 500 miles with the unit off, there may be a delay in receiving the initial satellite fix; depending on your position and the position of the satellites, this could take 15 minutes or more. Normal usage will receive the satellite fix much faster, but still may take several minutes. It is important to have your antenna rotated upward and an unobstructed view of the sky to receive the best possible satellite signal. An external antenna (not included) provides faster satellite fix times and greater signal strength. Because it is mounted outside of the vehicle, it is not affected by reflective coatings on windows and has an unobstructed line of sight to the satellites. Please refer to the Documentation CD-ROM for more information on signal reception.

1 Make sure everything is included in the box...

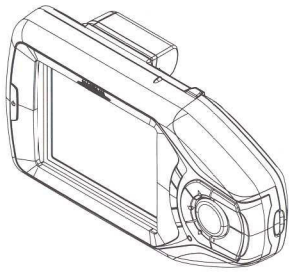

Magellan RoadMate 760

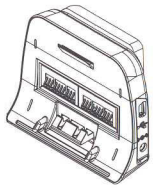

Cradle with Mounting Plate

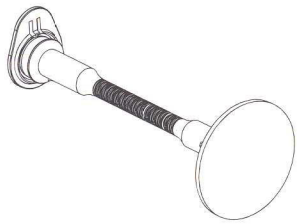

Windshield Mount

Basic User's Guide

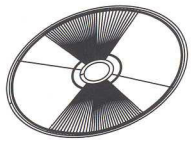

Magellan RoadMate POI Manager Software CD-ROM

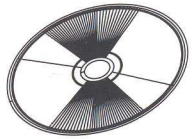

Documentation CD-ROM



USB (Data) Cable



Power Cable (home)

Power Cable (car)

2 Install it in your car...

Take care when mounting the unit in your vehicle that it does not obstruct the driver's view of the road, interfere with the operation of the vehicle's safety devices such as air bags, or present a hazard to occupants of the vehicle should the unit be dislodged while driving. You assume the risks associated with damage to your vehicle or vehicle occupants as the result of your choices in mounting the unit. It is your responsibility to ensure that your choice in mounting the unit complies with applicable motor vehicle regulations.

A>

Slide the cradle and plate assembly onto the windshield mount.

B>

Attach the Magellan RoadMate to the cradle.

C>

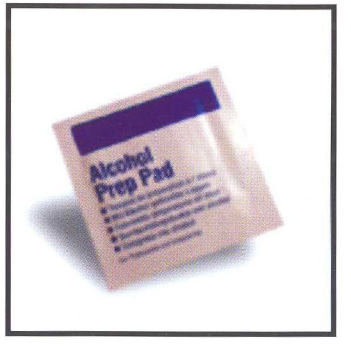

Clean the area of the windshield with the supplied alcohol swab.

D>

Press the windshield mount to the glass and turn the locking dial until it clicks into place.

E>

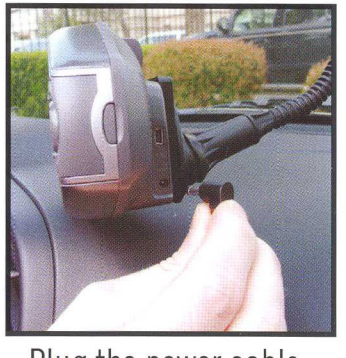

Plug the power cable into the cradle...

F>

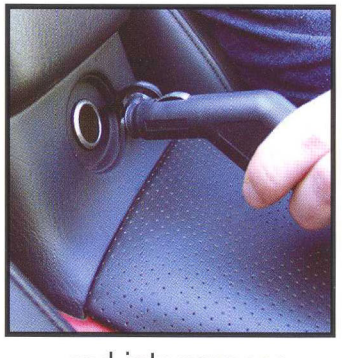

...and into your car.

G>

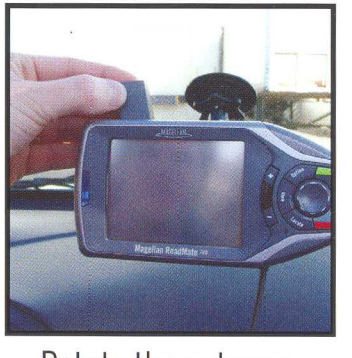

Rotate the antenna upward and...

3 Turn it on and go!™

Please visit our Web site at www.magellangps.com to register your Magellan RoadMate. While you are there, you can get information on updates and accessories.

©2005 Thales S.A. All rights reserved. The Magellan logo, Magellan, Magellan RoadMate, and Turn it on and go! are trademarks of Thales.

HF2AT001407 631237-98 A

MAGELLAN®

Magellan® RoadMate™

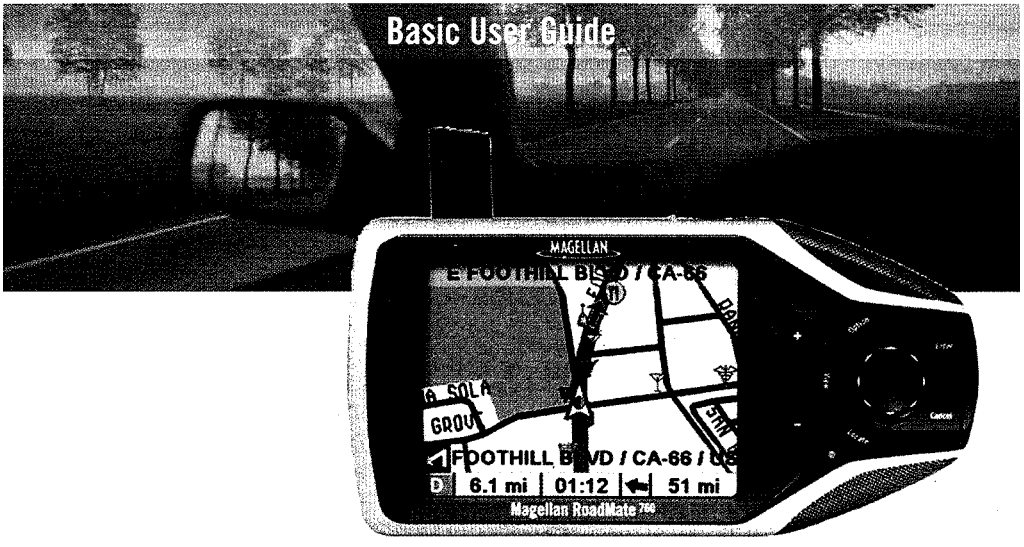

Basic Operation Instructions for the

Magellan RoadMate 760

This document covers the basic operation of the Magellan RoadMate 760 Vehicle-Navigation System. The information provided here is enough to give you all the normal operating features for using this product. If you need additional information or if you require details on other functions, refer to the Reference Manual found on the compact disc (CD-ROM) supplied with your Magellan RoadMate.

IMPORTANT SAFETY WARNINGS

The Magellan RoadMate is a vehicle navigation aid designed to guide you to your selected destinations. When using the Magellan RoadMate, these safety rules must be followed to prevent accidents that can result in injury or death to yourself or others:

- When driving, the need to view the display is minimal. Voice prompts will guide you to your destination. The driver should enter data or program the unit only when the vehicle is stopped. Only a vehicle passenger should enter data or program the unit while the vehicle is moving.
- It is your responsibility to comply with all traffic laws.
- While every attempt is made to ensure that the database is accurate, roadways, points of interest (POIs), and business and service locations may change over time. The database does not include, analyze, process, consider or reflect any of the following: legal restrictions (such as vehicular type, weight, height, width, load and speed restrictions); road slope or grade; bridge height, width, weight or other limits; population density; neighborhood quality or safety; availability or proximity of law-enforcement, emergency-rescue, medical or other assistance; construction work zones or hazards; road or lane closures; road, traffic or traffic facilities safety or condition; weather conditions; pavement characteristics or conditions; special events; traffic congestion. It is your responsibility to disregard any unsafe, hazardous or illegal route suggestions.
- Keep the Magellan RoadMate safe from extreme temperature conditions. For example, do not leave it exposed to direct sunlight for an extended period of time.
- Take care when mounting the unit in your vehicle, whether using the windshield mount or other mount or accessories, that it does not obstruct the driver's view of the road, interfere with the operation of the vehicle's safety devices such as air bags, or present a hazard to occupants of the vehicle should the unit be dislodged while driving. You assume the risks associated with damage to your vehicle or vehicle occupants as the result of your choices in mounting the unit.
- For installation instructions, please refer to the Read Me First document supplied with your Magellan RoadMate.

© 2005 Thales S.A. All rights reserved. The Magellan Logo, Magellan, Magellan RoadMate, Turn it on and go, TrueView, QuickSpell, SmartDetour, TrueFix, and SayWhere are trademarks of Thales. No part of this user manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose other than the purchaser's personal use, without the prior written permission of Thales.

Table of Contents

Registration iii
Magellan RoadMate 1
Traveling to Europe with your Magellan RoadMate 1
Magellan RoadMate (Front View) 2
Magellan RoadMate (Rear View) 3
Traveling with the Magellan RoadMate 4
- Tips on Signal Reception 4
- Where Is the Volume Control? 4
- Can the Voice Command be Repeated? 4
- How Do I Adjust the Contrast and Brightness? 5
- What About Driving at Night? 5
- Viewing the Guidance Screens 5
- How Do I Read the Map screen? 6
- Changing the Map Zoom Levels 6
- How Can I See the Entire Route? 6
- How Can I See What the Next Maneuver Will Be? 6
- What if I Am Not Looking at the Map? 7

Entering Information 7
- How Do I Enter Text? 7
- What is QuickSpell? 7
- Can I Transfer Addresses from a PDA or Smartphone? 7

Selecting a Destination 8
- How Do I Find a Street Address? 8
- How Do I select a Point of Interest as a Destination? 9
- How Do I Go To a Previous Destination? 11
- How Do I Go To an Address in My Address Book? 12
- Can I Route to Several Destinations in a Row? 12
- What About Finding Restaurants and Gas Stations along the Way? 14
- What if I Get Stuck In Traffic? 14
- Can I Have a Password? 15

Magellan RoadMate POI Manager Software 16
- Installation 16
- Creating Custom POIs 16
- Uploading POIs to Your Magellan RoadMate 17
- Viewing Custom POIs on your Magellan RoadMate 17

CONTACT INFORMATION 18
- Technical Support 18
- Warranty Service 18
- Customer Service 18

Registration

Registering your product will ensure prompt, effective technical assistance and customer service and allow you to receive notification of product updates, new products, and other valuable information to help you make the most of your Magellan RoadMate Vehicle-Navigation System.

To register your Magellan RoadMate, go to **www.magellangps.com** using your Web browser. Select the **Register/Login** option from the list of menu items. If you have already registered an account with Thales Navigation, enter your e-mail address and password. If you are not registered, you will need to create a personal profile by clicking on the **Create Your Profile** option.

Once you have logged in, select the **Your Products** menu option and use the **Register A Product** button to open the registration page. Fill out your information and click on the **Submit** button to finish the registration.

Thank you for registering your Magellan RoadMate.

Magellan RoadMate

Thank you for purchasing the Magellan RoadMate 760. We hope you will enjoy using your new vehicle-navigation system and encourage you to provide us with feedback.

The Magellan RoadMate is amazingly simple to use. The easiest way to learn is to go to your car and let it work for you. But to get you started, here is a simple step-by-step overview of using your Magellan RoadMate.

Raise Antenna

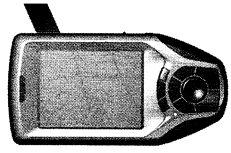

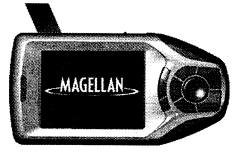

Turn it on...

Select User

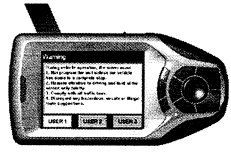

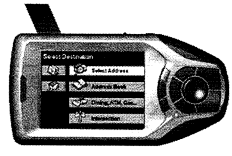

Select Destination

...and go.

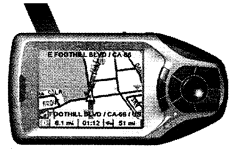

Traveling to Europe with your Magellan RoadMate

Your Magellan RoadMate also comes with European Map Data pre-installed which can be unlocked for a fee. Call Customer Service or go to our website at www.magellangps.com for information and pricing.

Magellan RoadMate (Front View)

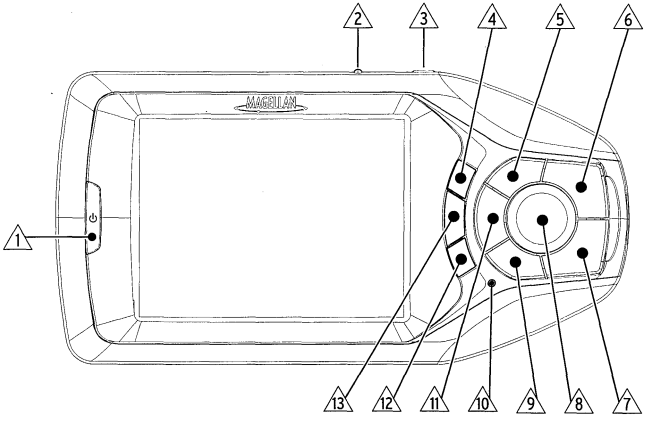

1	Power Button	Press to turn the Magellan RoadMate on or off.
2	Volume Control	Adjust to set the volume of the speaker.
3	Repeat Button	Press to repeat the last spoken prompt.
4	Zoom In Button	While viewing the map, press to zoom in on the center of the display.
5	Option Button	Press to access the User Options menu.
6	Enter Button	Press to confirm highlighted selections.
7	Cancel Button	Press to stop the current function.
8	Navigation Button	Press to move the cursor or to highlight other options.
9	Locate Button	Press to display current location details.
10	Light Sensor	Automatically changes the contrast and brightness of the display to adjust for changes in lighting.
11	View Button	Press to view Map screen, Maneuver List screen, or TrueView 3D display.
12	Zoom Out Button	While viewing the map, press to zoom out from the center of the display.
13	Infrared (IR) Port	Enables wireless infrared data transfer from a PDA or smartphone device.

Magellan RoadMate (Rear View)

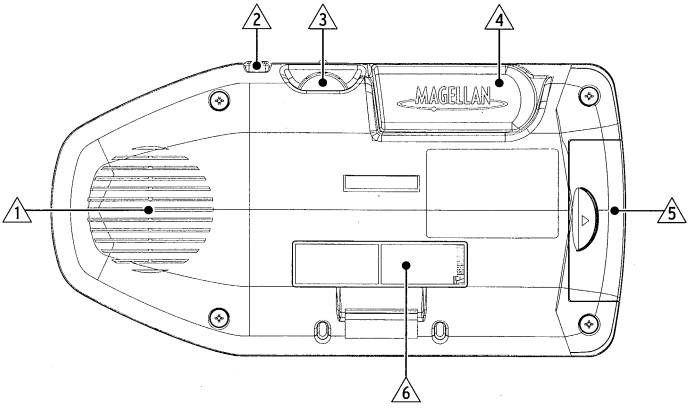

1	Speaker	For audible maneuvering instructions.
2	Repeat Button	Press to repeat the last spoken prompt.
3	Volume Control	Adjust to set the volume of the speaker.
4	Antenna	Rotate up when in use to receive signals from the GPS satellite network.
5	Compact Flash	This compartment stores the compact flash memory card (for future applications)
6	Power/Data Connection	Connection for power and data for the Magellan RoadMate.

Traveling with the Magellan RoadMate

Tips on Signal Reception

Your Magellan RoadMate receives signals from satellites to compute your location. The advanced technology used with the Magellan RoadMate allows it to receive these signals even in harsh conditions. However, there are a few things to keep in mind in order to get the strongest signal possible.

- Always raise the antenna unless using an external antenna (not included[1]).
- The Magellan RoadMate will not work indoors or in a garage. Also, navigating around tall buildings and canyons may interfere with the satellite signal.
- Tinted windows can interfere with satellite signal reception. To test this, hold the receiver outside your window and see whether it computes your location faster. If it does, you may need to relocate the receiver in your vehicle or use an external antenna.
- Depending on the configuration of your vehicle's interior, the Magellan RoadMate may not be able to receive the satellite signals while resting on the center console. It is recommended that you use the included windshield mount or an external antenna.

Where Is the Volume Control?

The volume control is located at the top of the Magellan RoadMate (see page 2). Use the wheel to set the volume of the speaker to the desired level. A volume-level bar will be displayed on the Map screen as you adjust the volume. In addition, the volume level can be increased automatically to a predetermined level by enabling **Automatic Volume** (Option Button > Configuration > Automatic Volume). With Automatic Volume enabled, when your vehicle exceeds 45 mph, the volume level will automatically increase to the level set in the menu.

Can the Voice Command be Repeated?

Yes. If you missed a voice prompt, press the **Repeat** button on the top of the Magellan RoadMate (see page 2) to repeat the last voice prompt.

---

1. Accessories can be purchased on the Internet at www.magellangps.com

How Do I Adjust the Contrast and Brightness?

The Magellan RoadMate has a light sensor on the front of the unit that detects changes in light levels and adjusts the brightness and contrast automatically. You also can adjust the brightness and contrast levels manually.

To access the Contrast and Brightness menus, press the **Option** button (see page 2) and select **Configuration**. Select either **Contrast** or **Brightness**. The adjustment procedure for both is identical.

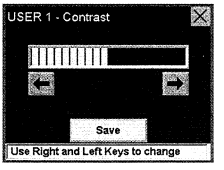

Press the left arrow to decrease or the right arrow to increase the level. When you have set the desired level, press **Save**.

What About Driving at Night?

The Magellan RoadMate 760 can be configured to automatically switch to a Night screen. The Night screen is designed to be less bright for nighttime driving conditions. Press the **Option** button and select **Select Map Color**. Enable **Auto Night Mode** and select **Save**. For more information, please refer to the Reference Manual found on the Documentation CD included with your Magellan RoadMate.

Viewing the Guidance Screens

You can view the different guidance screens by pressing the **View** button. Press the **View** button (see page 2) from the Select Destination menu to view the Map screen. Press the **View** button again to go to the Maneuver List screen, and again to go to the TrueView 3D screen.

How Do I Read the Map screen?

The Map screen is used most often when traveling and provides you with information about where you are and where you are going.

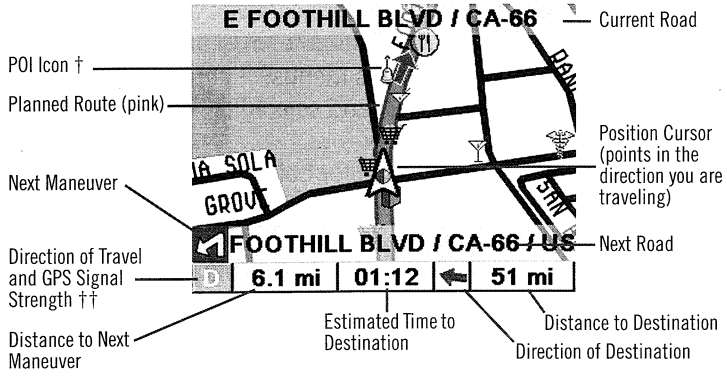

† By touching the POI icon on the screen, you can get information and route to it.

†† Blue = WASS Signal, Green = Strong Signal, Yellow = Average Signal, Red = Weak Signal, Black = No Signal

As you travel, the Guidance screen constantly updates your location and provides you with not only a map, but also a visual indication of where you are on the map.

Changing the Map Zoom Levels

You can increase or decrease the detail of the Map screen by pressing the **Zoom In** (+) or **Zoom Out** (-) button (see page 2).

How Can I See the Entire Route?

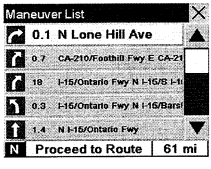
Maneuver List
0.1 N Lone Hill Ave
0.7 CA-210/Foothill Fwy E CA-21
1.8 I-15/Ontario Fwy N I-15/S I-1
0.3 I-15/Ontario Fwy N I-15/Barst
1.4 N I-15/Ontario Fwy
N Proceed to Route 61 mi

The Maneuver List screen can be viewed only after a route has been calculated. From the Map screen, press the **View** button to bring up a list of all of the maneuvers along the route. When you are done viewing the Maneuver List screen, press the **View** button twice to return to the Map screen, or wait a few moments and it will return automatically.

How Can I See What the Next Maneuver Will Be?

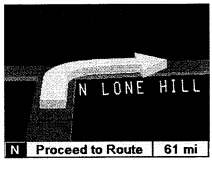

The Magellan RoadMate uses TrueView 3D technology to display a three-dimensional picture of the next maneuver. The TrueView 3D screen can be viewed only after a route has been calculated. From the Map screen, press the **View**

button twice to view the TrueView 3D screen. In split mode, the left half of the screen shows TrueView 3D, while the right half of the screen shows the map. You can also view TrueView 3D in full screen. For more information, please refer to the Reference Manual found on the Documentation CD included with your Magellan RoadMate. When you are done viewing the TrueView 3D screen, press the **View** button to return to the Map screen, or wait a few moments and it will return automatically.

What if I Am Not Looking at the Map?

The Magellan RoadMate 760 will give you audible voice prompts to let you know what your next instruction will be. In addition, the Magellan RoadMate 760 can be configured to speak the street name of the next maneuver. This feature can be enabled by selecting **Voice Options > Announce Street Name** in the **Configuration** menu.

Entering Information

How Do I Enter Text?

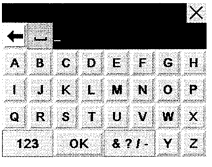

The Magellan RoadMate 760 has a touch screen, making it easy to input information and select menus. In addition, the Navigation button can also be used to move to the desired key on the screen, after which pressing the **Enter** button will input the information. For the examples in this book, we will use the touch-screen method.

What is QuickSpell?

The Magellan RoadMate uses QuickSpell technology to provide you with the fastest method possible to select information from the database. QuickSpell eliminates the possibility of a misspelling a word or entering a city or street that is not in the database. As you begin entering text, QuickSpell highlights only the characters that are available next in sequence, thereby accelerating the entry process.

Can I Transfer Addresses from a PDA or Smartphone?

You can transfer addresses from your PDA or smartphone by activating the address transfer function on your PDA or smartphone and aiming its IR port toward the IR window on the Magellan RoadMate (see page 2). A message will be displayed on your Magellan RoadMate to confirm that the address has been transferred successfully.

It is required that your PDA use the same IrDA protocol as the Magellan RoadMate. If an error occurs in transmission or protocol, an error message will be displayed. The Magellan RoadMate's IrDA protocol will work with PDAs using PocketPC® 2003, 2004, and Palm® OS Version 5 and above.

Selecting a Destination

The Magellan RoadMate has four different ways to select destinations: **Select Address** finds an address in the database; **Address Book** enables you to select addresses you have saved; **Dining, ATM, Gas...** searches the database for Points of Interest (POIs), and **Intersection** finds a location from two intersecting streets.

How Do I Find a Street Address?

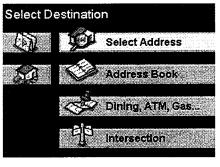

Select **Select Address** from the Select Destination menu.

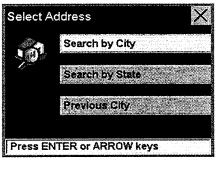

Select **Search By City, Search By State** or **Previous City**. Search By City is the most commonly used because you probably know the city that the street is in. If you do not know the city, **Search By State** will show you every city in the selected state that has a street that matches the one you will enter. **Previous City** shows you a list of the last 10 cities you have routed to. For this example we, will assume that you know the city, so select **Search By City**.

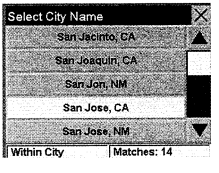

Enter the first few characters in the city name. In this example, we are looking for San Jose, CA. Using the keyboard, enter S-A-N-<space>-J and select **OK** (if you have entered enough characters, the Magellan RoadMate will display the list automatically). A list of possible cities from the database is displayed. Select the desired city by touching it on the screen.

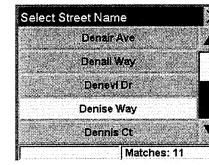

Next, enter the first few characters of the street name. In this example, we are looking for Denise Way. Using the keyboard, enter D-E-N and select **OK** (Do not enter prefixes such as "North" or "N", or suffixes such as "Ave" or "Road" in the street name). A list of possible streets from the database is displayed. Select the desired street name by touching it on the screen.

Note: Some streets have a prefix or suffix like North or South and will also appear in the list of possible street names.

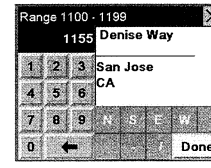

Next, enter the street number. At the top of the screen, the range of addresses that are within the selected street is displayed. If the desired address is not in this range, it may be new address that is not yet in the database. Entering a number higher or lower than the range will route you to the closest address. Press **Done** without entering a number and you will be routed to the lowest number in the range.

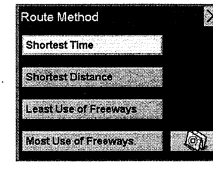

The last step is to enter which method by which you wish to calculate the route: **Shortest Time**, **Shortest Distance**, **Least Use Of Freeways,** or **Most Use Of Freeways**. If you would like to see your destination on the map, press the **Map** button. Select the desired method and the Magellan RoadMate will begin routing you to your destination.

How Do I select a Point of Interest as a Destination?

What is a point of interest?

Points of Interest (or POIs), are commercial or recreational locations, landmarks, or services that are preloaded into the Magellan RoadMate database. There are over six million POIs in the database that range from restaurants, parks, gas stations, and banks, to schools and police stations, and more. The purpose of the POI database (accessed through the Dining, ATM, Gas... menu option) is to provide you with a list of popular destinations without having to add them to your address book manually. In this example, we need to go to San Francisco International Airport in San Francisco, California.

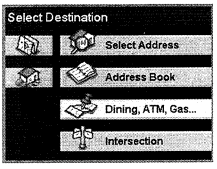

Select **Dining, ATM, Gas...** from the Select Destination menu.

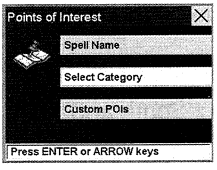

Next, you will need to indicate how you plan to access the name of the POI you are looking for. Spell Name: Use the keyboard to enter the first few characters of the name. After pressing **OK**, you will be given a list of all of the places stored in the database that begin with those characters. Select Category: This option enables you to select from a list of available POI categories. Custom POIs: These are POIs downloaded from other sources on the Internet, or created manually using the POI Manager Software and loaded into the Magellan RoadMate. For more information on Custom POIs, please refer to the Reference Manual found on the Documentation CD included with your Magellan RoadMate.

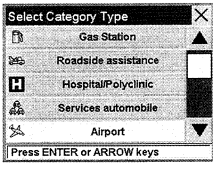

In this example, we will be looking for an airport in San Francisco. Select Category is selected; the Select Category Type screen is displayed. Scroll down the list and select **Airport**.

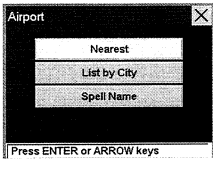

We now have three options to choose from: **Nearest** enables you to display a list of all of the POIs in the category closest to your present location, from closest to farthest; with **List By City**, you can use the keyboard to select the city that the POI is in, using **Spell Name**, you would use the keyboard to enter the name of the POI you are searching for.

In this example, the fastest way to find this airport is by using the **List by City** option. The keyboard is displayed; input S-A-N-<space>-F and select **OK**. A list of airport locations is displayed, select the desired location.

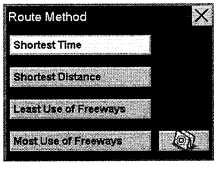

Select the Route Method for your trip. Once the Route Method is selected, the Magellan RoadMate begins computing the route. When the route is defined, the Map screen appears and you are ready to go.

How Do I Go To a Previous Destination?

Once the Magellan RoadMate has calculated a destination, it stores that destination in your Previous Destinations list. This list is stored in the Address Book menu and contains the last 50 destinations you have routed to.

Previous Destinations are not added to your Address Book automatically. For information on how to save Previous Destinations to your Address Book, please refer to the Reference Manual found on the Documentation CD included with your Magellan RoadMate.

From the Select Destination menu, select **Address Book**.

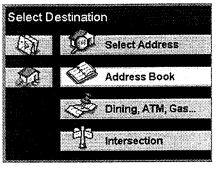

Select **Previous Destinations**.

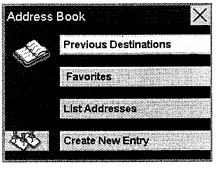

The list of your Previous Destinations is displayed. Select the destination that you wish to route to.

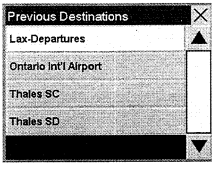

The information for the selected destination is displayed. Select **Route** to go to the selected destination. (Select **Edit** to customize the information and save it to your Address Book, select **Delete** to remove it from the list.)

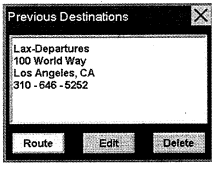

The final option is to select the Route Method you desire. The Magellan RoadMate will begin to calculate the route to the Previous Destination you selected and you are ready to go.

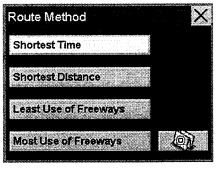

How Do I Go To an Address in My Address Book?

The Magellan RoadMate 760 stores up to 200 street addresses for each user for quick and easy access. In addition, you can designate an address as a Favorite for even quicker access to places traveled to most often. For more information on Favorites, please refer to the Reference Manual found on the Documentation CD included with your Magellan RoadMate.

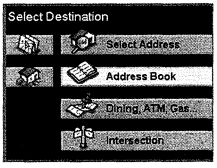

From the Select Destination menu, select **Address Book**.

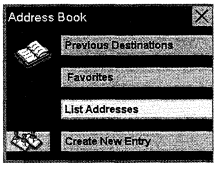

From the Address Book menu, select **List Addresses**. (Use **Create New Entry** to input an address into the Address Book and then use the new address as your destination.)

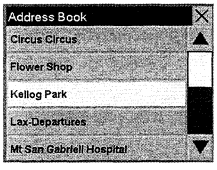

Select the address you wish to route to and select **Route**.

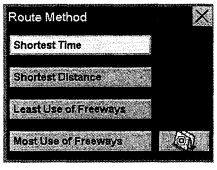

Finally, select the Route Method that you want the Magellan RoadMate to use in calculating the route.

Can I Route to Several Destinations in a Row?

Yes. The Magellan RoadMate includes a Trip Planner with Route Optimization. You can select two or more destinations and route to them in the order you enter them, or optimize the route to go to the next closest destination.

From the Select Destination menu, select **Address Book**.

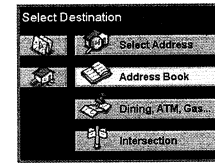

Select **Trip** (press the Trip button).

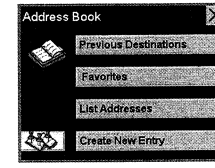

Select **New** and give your trip a name. Select **OK**.

Select **Add**.

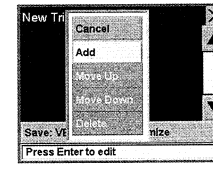

At this point you can add destinations using Select Address, Address Book, POIs (Dining, ATM, Gas...), or Intersection. For this example, we will use the Address Book. Select **Address Book**.

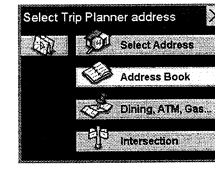

Next, select **List Addresses**. Select an address and then select **Save**. The address is added to your trip. To add additional destinations, select any destination in the trip and select **Add** from the pop-up menu. Follow the previous steps and continue to add as many destinations as you wish. When you are finished, select **Save: [Trip Name]**.

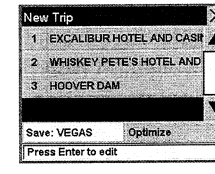

To optimize the route, select **Edit;** then, select the trip and select **Optimize**. This will sort your destinations from nearest to farthest from your current position.

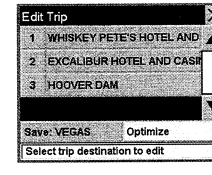

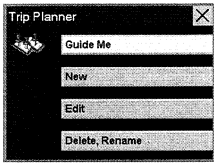

Select **Save: [Trip name]**. Then, press the **Cancel** button to be taken back to the Trip menu. Select **Guide Me** and then select the trip.

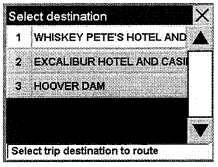

Select the first destination in the list you wish to route to.

Note: Selecting the second destination in the list will exclude the first destination, selecting the third destination in the list will exclude the first and second destinations, and so on.

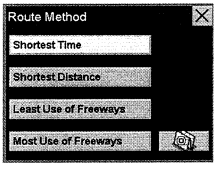

Finally, select the Route Method that you want the Magellan RoadMate to use in calculating the route. When you have arrived at your first destination, the Magellan RoadMate will prompt you to continue on your trip. If you turn the unit off, and turn it back on when you are ready to continue, the Magellan RoadMate will prompt you to continue your trip, as well.

Note: Destination added to the Trip Planner will not appear in the Previous Destinations List.

What About Finding Restaurants and Gas Stations along the Way?

As you are traveling along your route, press the **Enter** button. Select **Dining, ATM, Gas...**; then, select the category. A list of POIs within approximately 3.5 miles of your current position will appear. Choose a destination from the list and select **Route**. When you have arrived, the Magellan RoadMate will prompt you to continue with your original destination.

What if I Get Stuck In Traffic?

The Magellan RoadMate comes equipped with SmartDetour. With SmartDetour enabled, you can have the Magellan RoadMate re-route you around traffic if it detects your speed is under 15 miles per hour for a predetermined amount of time.

Press the **Option** key and select **Configuration**. Then select **Detour Options**.

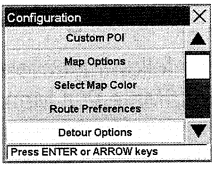

Select the distance of the detour form the pre-programmed options, or enter a custom distance.

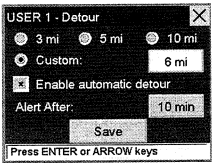

Select the amount of time to wait before alerting you.

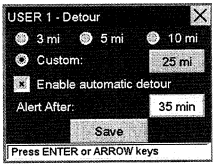

Select **Enable automatic detour** and select **Save**.

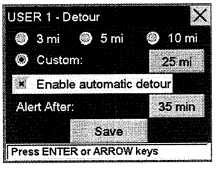

When traffic on the freeway slows down, the SmartDetour icon will flash on the Map screen. Touch the icon on the screen to re-calculate the route.

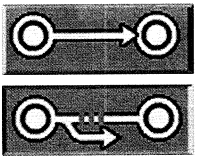

Can I Have a Password?

Yes you can. Each user can set a password. To set a password, press the **Option** button on the Magellan RoadMate and select **Configuration**, then, select **Password**. Select **Change** and enter the password you wish to use and select **OK**. Select **Activate** and then, select **Save**. Your password is now activated. If you forget your password, you must call Technical Support to get instructions on resetting the unit. Resetting the unit will erase all the information stored for all users, so it is important to remember your password.

Magellan RoadMate POI Manager Software

The following covers the basics of installing and using the Magellan RoadMate POI Manager software. For more information, please refer to the Reference Manual found on the Documentation CD included with your Magellan RoadMate.

Installation

Insert the Magellan RoadMate POI Manager CD into your computer's CD drive. The installation will begin automatically. Follow the on-screen instructions to install the POI Manager software.

Creating Custom POIs

To create a POI you must know the latitude and longitude of the item. This information can be found by pressing the **Locate** button on the Magellan RoadMate at the location you wish to save as a POI.

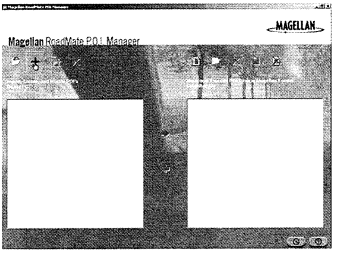

Click on the **Add New POI** + button.

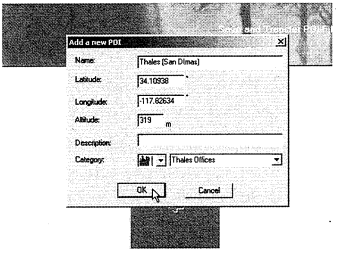

A dialog box will appear, asking you to enter the latitude, longitude, and altitude (optional) of the POI.

Next, enter a category name and then, choose an icon from the pull-down menu.

You can continue adding POIs to the same category or create as many others as you wish.

Uploading POIs to Your Magellan RoadMate

When you have finished creating your POIs, click on the right arrow to move the POI category into the transfer window.

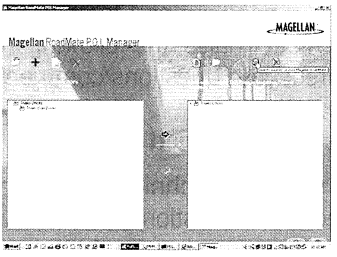

Click on the **Save POI** button. A dialog box will appear, prompting you to save the POIs to your hard drive or to your Magellan RoadMate. Select Magellan RoadMate and give the POI file a name. Click **Save**. The POIs have been transferred to your Magellan RoadMate.

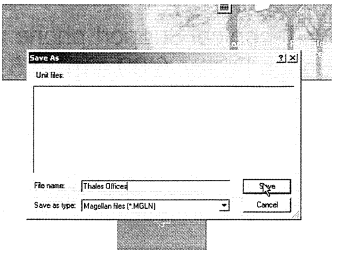

Viewing Custom POIs on your Magellan RoadMate

Press the **Option** button on your Magellan RoadMate and select Configuration.

Select **Custom POIs**.

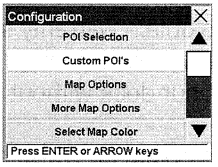

Select **Select a POI File** and select the POI file you uploaded.

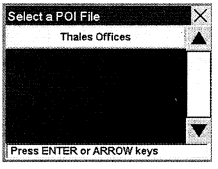

Select **Display Categories** and mark the categories you want to display on the Map screen.

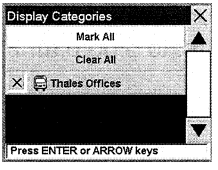

Return to the Map screen and your POIs will now be displayed on the Map screen. They will also function as regular POIs in that you can route to them, use them in Trips, touch them on the screen, etc.

CONTACT INFORMATION

If you need support for your Magellan RoadMate and you wish to contact Thales, the following information is provided so that you can direct your questions/comments to the proper person.

Technical Support

If you need technical assistance or "how-to" help, or if you have a technical question about the functionality of your Magellan product, please contact us on the Internet at **www.magellangps.com** or reach us by fax or by phone.

Our Technical Support phone representatives are available Monday through Friday, 6:00 a.m. to 5:00 p.m. PST/PDT. After hours you may leave a detailed voice mail message that will be returned within the next business day.

Telephone: (**866) 868-2259** or **(909) 394-5000** (Outside North America)

You may also reach Technical Support by Fax: **(909) 394-7050** [Attn: Tech. Support]; or E-Mail: **magellansupport@thalesnavigation.com**

Warranty Service

To obtain warranty service on your unit, you must contact us for a return authorization prior to shipping the product. Packages arriving at our dock without an RMA may be refused.

To obtain an RMA, simply contact our technical support group at: Telephone: **(866) 868-2259** or **(909) 394-5000**; Fax: **(909) 394-7050** [Attn: Tech. Support]; or E-Mail: **magellansupport@thalesnavigation.com**

Customer Service

If you need to order accessories or obtain unlock codes, you can call our Customer Service Department Monday through Friday, 6:00 a.m. to 5:00 p.m. PST/PDT.

Telephone: (**866) 339-0488** or **(909) 394-5000** (Outside North America); Fax: **(909) 394-7078**.

Thales Consumer Products
960 Overland Court
San Dimas, CA 91773 USA
Tel: 909 394 5000
Fax: 909 394 7050
www.magellangps.com

631239-01 A

HDGPS25CET1

Magellan® RoadMate™

Reference Manual

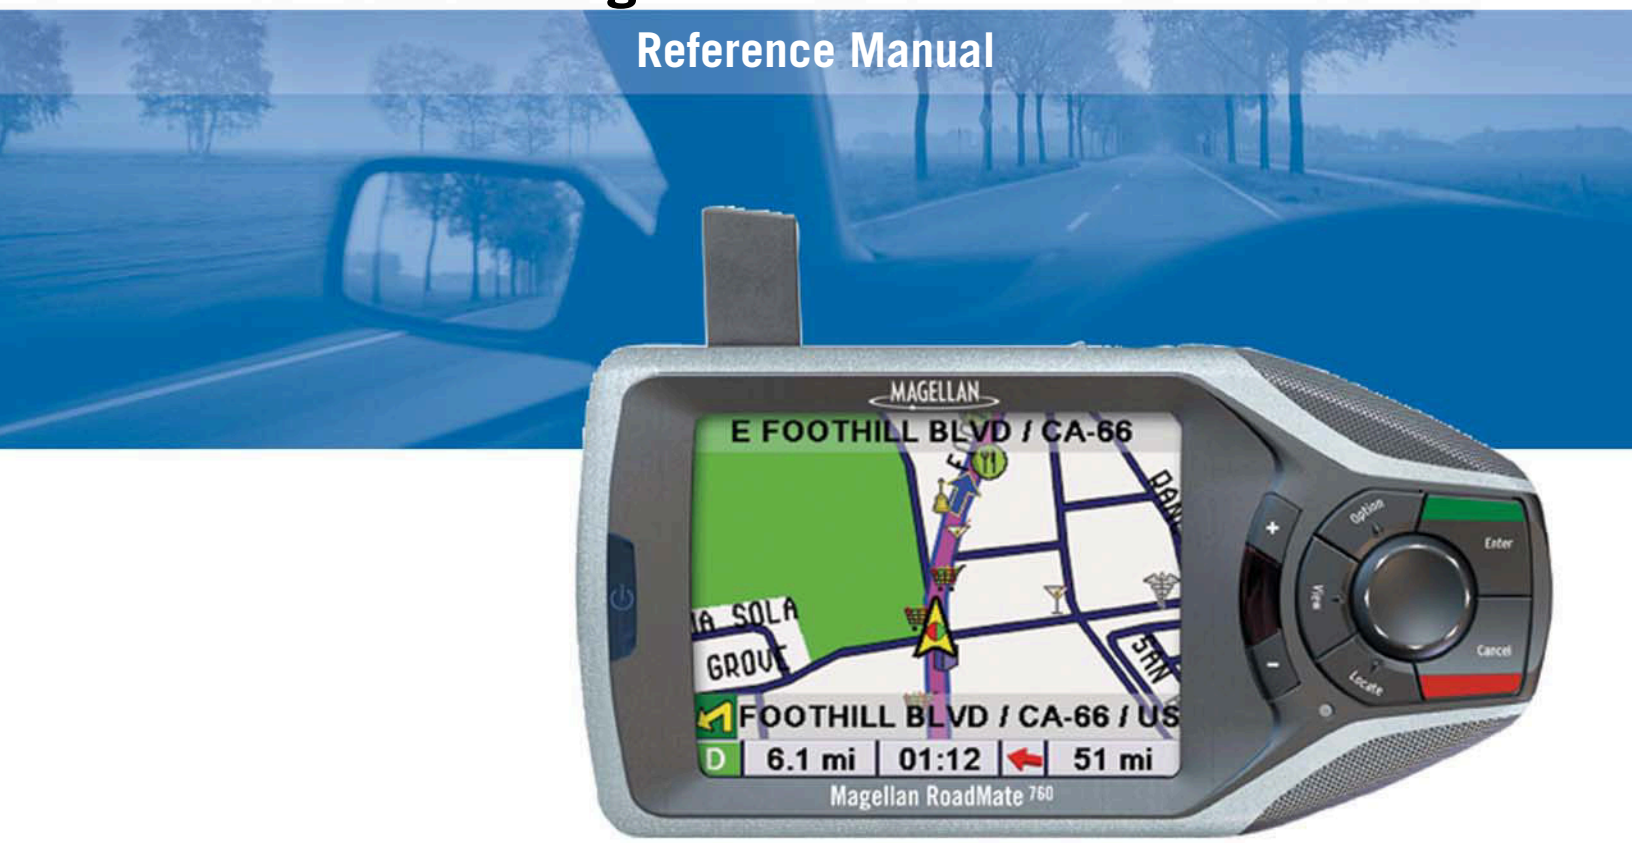

Instructions for Operating the Magellan RoadMate 760

IMPORTANT SAFETY WARNINGS

The Magellan RoadMate 760 is a vehicle-navigation aid designed to assist you in arriving at your selected destinations. When using the Magellan RoadMate, these safety rules must be followed to prevent accidents that can result in injury or death to yourself or others:

- When driving, the need to view the display is minimal. Voice prompts will guide you to your destination. The driver should enter data or program the unit only when the vehicle is stopped. Only a vehicle passenger should enter data or program the unit while the vehicle is moving.
- It is your responsibility to comply with all traffic laws.
- Every attempt is made to ensure that the database is accurate. However, roadways, points of interest (POIs), and business and service locations may change over time. The database does not include, analyze, process, consider, or reflect any of the following: legal restrictions (such as vehicular type, weight, height, width, load and speed restrictions); road slope or grade; bridge height, width, weight, or other limits; population density; neighborhood quality or safety; availability or proximity of law enforcement, emergency rescue, medical, or other assistance; construction work zones or hazards; road or lane closures; road, traffic, or traffic facilities' safety or condition; weather conditions; pavement characteristics or conditions; special events; traffic congestion. It is your responsibility to disregard any unsafe, hazardous, or illegal route suggestions.
- Keep the Magellan RoadMate safe from extreme temperature conditions. For example, do not leave it exposed to direct sunlight for an extended period of time.
- Take care when mounting the unit in your vehicle, whether using the windshield mount or other mount or accessories, that it does not obstruct the driver's view of the road, interfere with the operation of the vehicle's safety devices such as air bags, or present a hazard to occupants of the vehicle should the unit be dislodged while driving. You assume the risks associated with damage to your vehicle or vehicle occupants as the result of your choices in mounting the unit.
- Please refer to the Read Me First document supplied with your Magellan RoadMate for installation instructions.

© 2005 Thales S.A. All rights reserved. The Magellan Logo, Magellan, Magellan RoadMate, Turn it on and go, TrueView, QuickSpell, SmartDetour, TrueFix, and SayWhere are trademarks of Thales. No part of this user manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose other than the purchaser's personal use, without the prior written permission of Thales.

631241-01 A

Table of Contents

Information 1
About Satellite Navigation 1
How Satellite Navigation Works 1
Line of Sight 1
Precision 1
A Word on the Safe Usage of GPS Maps 2
From Source to Destination 2
GPS Maps and Your Safety 3
Magellan RoadMate 4
Front View 4
Rear View 5
Cradle Front View 6
..... 6
Cradle Side View 6
Installation 7
Installation with the Windshield Mount 7
POI Manager 9
Overview 9
Latitude 9
Longitude 10
Altitude 11
Installation 12
Connecting Your Magellan RoadMate 14
Application 14
Adding A Single POI 14
Adding Multiple POIs 16
Basic Operation 19
Turning the Magellan RoadMate On 19
Adjusting the Volume 20
Repeating the Last Command 20
Inputting Text Characters 20
Additional Characters (“More” Button) 20
Numerical Characters (“123” Button) 21
What Is QuickSpell? 21
Traveling 23
Guidance Information Screens 23
Map Screen 24
Changing the Map Zoom Levels 24
Maneuver List Screen 25
TrueView 3D Screen 25
Detouring from the Planned Route 26
Excluding a Maneuver in the Planned Route 26
Displaying Information About Your Present Location 27
Saving Your Current Location to Your Address Book 27
Finding POIs Along Your Route 28
Finding a Detour Along Your Route 29

Table of Contents

Selecting Destinations 31
- Choosing the Route Method 32
- Changing the Route Method 33
- Cancelling a Planned Route 34
- Selecting a Destination Using Select Address 35
  - Search By City 35
  - Search By State 36
  - Previous City 38
- Selecting a Destination Using the Address Book 40
  - Previous Destinations 40
  - Saving a Previous Destination to the Address Book 41
  - Deleting A Previous Destination 42
  - Favorites 43
  - Editing a Favorite 44
  - Deleting A Favorite 46
  - List Addresses 47
  - Editing an Address 48
  - Deleting an Address 49
  - Create New Entry – Search by City 50
  - Create New Entry – Search by State 52
  - Create New Entry – Previous City 54
  - Trip Planner – New 56
  - Trip Planner – Optimizing a Trip 57
  - Trip Planner – Guide Me 58
  - Trip Planner – Edit 59
  - Trip Planner – Delete and Rename 60
- Selecting a Point of Interest as a Destination 63
  - Spell Name 63
  - Select Category 66
  - Custom POIs 69
- Selecting an Intersection as a Destination 71
  - Search by City 71
  - Search by State 72
  - Previous City 74

Options 76
- Trip Computer 77
  - Current Trip 77
  - Stopping or Starting the Trip Computer 77
  - Saving the Current Trip Report 78
  - Resetting the Trip Computer 78
  - Viewing a Saved Trip Report 78
  - Deleting a Trip Report 79
- Configuration 80
  - POI Selection 80
  - Custom POIs 81
  - Map Options 86
  - Select Map Color 87

Table of Contents

Route Preferences 88
Detour Options 89
Voice Options 91
Menu Colors 92
Contrast 92
Brightness 93
Display Options 93
Tone Options 94
Language 95
Diagnostics 95
Product Information 95
Video Test 95
Touch Screen Test 96
Keypad Test 96
Set GPS Position 97
Simulator Mode 98
Edit User Name 98
Map Regions 99
Safety Lockout 101
Password 101
Automatic Volume 102
Backup and Restore 103
Restoring Information and Preferences 103
Tutorial 105
Moving Around the Tutorial 105
Help 106
Contact Information 107
Technical Support 107
Warranty Service 107
Customer Service 107
Appendix A 108
Adding Addresses from an IrDA-Equipped Device 108
Appendix B 109
GPS Status Screen 109
GPS STATUS Screen Structure-first page 109
Bad fix code 109
GPS STATUS Screen Structure - second page 110
Typical GPS STATUS Screen Display 111
Appendix C 112
POI Categories 112
Appendix D 113
Specifications 114
THALES CONSUMER PRODUCTS GPS RECEIVER END USER SOFTWARE LICENSE 115
THALES CONSUMER PRODUCTS PRODUCTS LIMITED WARRANTY 118

Information

About Satellite Navigation

Global satellite navigation is an exciting technology, providing enhanced productivity and accuracy in a vast number of industries. It adds a new level of enjoyment and safety to a wide range of navigation, sports, and recreational activities.

A Global Navigation Satellite System (GNSS) is a network of satellites that transmit high-frequency radio signals containing time and distance data that can be picked up by a receiver, allowing users to pinpoint their precise locations anywhere around the globe.

There are two Global Navigation Satellite Systems in operation: the U.S. Global Positioning System (GPS) and the Russian GLObal NAvigation Satellite System (GLONASS). These systems are constantly being upgraded to meet higher standards of reliability. A third GNSS named GALILEO, after the Italian astronomer of the early 1600s, is being developed in Europe specifically to provide a higher standard of integrity and reliability, required to ensure the safety of lives during transport by air, land and sea, without the use of additional augmentation systems.

While the GPS and GLONASS satellite networks are being developed to achieve maximum performance, Satellite-Based Augmentation Systems (SBAS) have been established to provide improved accuracy. SBAS provides differential signal corrections for GPS and GLONASS transmissions with the use of ground stations and geostationary satellites in specific regions. This is GNSS-1, the first phase in establishing the required integrity for high-precision satellite navigation.

GNSS-2 requires the launching of new satellites into orbit and a complete upgrade of the existing satellite systems. This second phase is already well underway. GALILEO, scheduled to begin service in 2008, is being developed to meet the standards of GNSS-2 for rapid and reliable, certified precision positioning.

How Satellite Navigation Works

Global navigation satellites continuously transmit time and distance information as they orbit Earth in a precise formation. Navigation satellite receivers use this information to calculate an exact location through triangulation. Every point on Earth is identified by two sets of numbers called coordinates. These coordinates represent the exact point where a horizontal line, known as latitude, crosses a vertical line, known as longitude. The receiver locks on to at least three satellites and uses the information received to determine the coordinates of the receiving device.

By comparing the time the signals were transmitted from the satellites and the time they were recorded, the receiver calculates how far away each satellite is. The distance of the receiver from three or more satellites reveals its position on the surface of the planet. With these distance measurements, the receiver might also calculate speed, bearing, trip time, distance to destination, altitude, and more.

The satellite-navigation device may display its position as longitude/latitude, Universal Transverse Mercator (UTM), Military Grid (MG), or simply as a point on an electronic map. Many Thales Navigation receivers provide comprehensive mapping data, making satellite navigation an easy tool to enhance your recreational and industrial activities.

Line of Sight

Satellite-navigation receivers operate by line of sight with global-positioning satellites. This means that at least three satellites must be in “view” of a receiver in order to calculate longitude and latitude. A fourth satellite must also be within line of sight to calculate altitude. On average, eight satellites are continuously within line of sight of every position on Earth; the more satellites in view, the more accurate the positioning.

Though the radio signals of navigation satellites will pass through clouds, glass, plastic, and other lightweight materials, satellite-navigation receivers will not work underground or in other enclosed spaces.

Precision

On average, a satellite-navigation receiver is accurate to within 15 meters. Thales Navigation employs several technologies to increase the accuracy of their professional and Magellan®-branded receivers. An accuracy of 3 meters or better is achieved using correction signals from satellite navigation-augmentation systems. In the U.S., an accuracy of 3 meters is achieved

using signal corrections from a network of ground stations and fixed-position satellites known as WAAS (Wide-Area Augmentation System). Throughout Europe a similar system, EGNOS (European Geostationary Navigation Overlay System), provides the same accuracy. In Asia, satellite navigation-signal correction is provided by MSAS (Multi-functional Transport Satellite-Based Augmentation System). Other ways to increase the accuracy of satellite navigation include the use of DGPS (Differential Global-Positioning System); ground relay stations, set at known positions, transmit corrected satellite-navigation signals. Various methods and applications of DGPS can increase satellite-navigation accuracy from a few meters to within a few millimeters. Using DGPS requires a differential-beacon receiver and antennae in addition to a satellite-navigation device. Accuracy can also be increased using an RTK (Real-Time Kinematic) satellite-navigation system. This is a receiver capable of transmitting a phase-corrected signal from a known position to one or more rover receivers.

A number of positioning errors can occur, limiting accuracy to within 15 to 25 meters. These errors are monitored and compensated for in a number of ways:

Orbiting errors -- Occasionally, a satellite's reported position does not match its actual trajectory. In the U.S., the Department of Defense continuously monitors each satellite, making orbital corrections with on-board booster rockets.

Poor geometry -- If all of the satellites within line of sight of a receiver are clustered closely together, or lined up relative to the position of the receiver, the geometric calculations necessary for triangulating a position become difficult and less reliable. The use of differential-correction signals from satellite-based augmentation systems or DGPS can compensate for both orbital errors and poor geometry.

Multipath signals -- Signals may be reflected off tall buildings or other obstructions before reaching the receiver, increasing the distance a signal travels and reducing accuracy.

Thales Navigation receivers make a number of complex mathematical calculations to effectively compensate for other potential errors in positioning:

Atmospheric delay -- Satellite-navigation signals slow as they pass through Earth's atmosphere. Thales Navigation receivers calculate the average delay in nanoseconds to compensate.

Clock errors -- The clock built into a receiver is not as accurate as the atomic clock on a navigation satellite, which is accurate to one second every million years. Each Thales Navigation receiver compensates for time differentials by comparing the time signals of several satellites and adjusting its calculations and its clock to match.

A Word on the Safe Usage of GPS Maps

Just like paper maps, maps on GPS devices vary greatly in terms of information included and visual presentation. Whether topographical maps, roadmaps or marine charts, each map and the data it presents is designed for a specific purpose. For example, marine charts will often present only a minimal representation of roadways and are not a substitute for street maps. Topographic maps usually provide minimal detail about bodies of water and do not contain marine navigational markers.

Maps also vary widely in scale: the smaller the scale, the more detailed the map. Therefore, when using GPS maps (just as with paper maps) it is important to consider what type of map you are using in your explorations and to use common sense.

From Source to Destination

Thales Navigation, maker of Magellan GPS products, is not a cartography company. We do not create the maps that are used on our GPS devices. We seek to acquire map data from the best public and private sources available at the time of publication. Thales Navigation licenses* topographical maps, roadmaps, marine charts and points of interest (POI) data from commercial and governmental cartographic sources that provide raw map data. Thales Navigation processes and compresses the raw data into a format that makes it presentable and manageable to work on our GPS devices. And to ensure that our map data is as robust as possible, data from multiple sources are often combined to provide a better user experience for our customers. This processing does not alter the landforms, coordinates or other spatial data that comes in the raw data. The accuracy of the maps is fundamentally dependent on the source data used to create them. Map data changes frequently due to both natural and man-made causes. As a result, governmental and commercial cartography companies must

continuously review, correct, and improve upon their map data. We release new versions of our maps on a regular basis to reflect these changes.

After processing the data, we test the compatibility of the map with our GPS devices to ensure that the products we release work properly on our GPS devices. We also beta-test our products to get customer feedback prior to release.

GPS Maps and Your Safety

Remember, your GPS device is an aid to navigation. It must be used with common sense, and it is important that users interpret GPS map data with a critical eye. Landscapes and roads change or may be impassable, trees and tall buildings can obscure GPS signals, and your GPS device may not always reflect the complete picture. When using GPS, you must combine the information provided by your GPS map with your relevant local knowledge, road signage, buoys, depth soundings and changing local conditions to generate a complete understanding of your situation.

It is your responsibility to ensure compliance to all traffic laws, including pedestrian observance of crosswalks, and to use good judgment while operating the Magellan GPS receiver. Safety must be your primary concern. The Magellan GPS receiver must not be used while engaged in any activity requiring the user's full attention to the environment. For instance, the Magellan GPS receiver should be operated only by vehicle passengers or by the driver when the vehicle has come to a complete stop. The driver must not attempt to view the display while driving. A climber must not attempt to view the display while negotiating treacherous terrain. Disregard any unsafe, hazardous or illegal route suggestions.

Magellan maps do not include, analyze, process, consider or reflect any of the following: legal restrictions (such as weight, height, width, load and speed restrictions); road slope or grade; bridge height, width, weight or other limits; population density; neighborhood quality or safety; availability or proximity of law enforcement, emergency rescue, medical or other assistance; construction work zones or hazards; road, sidewalk, or waterway closures or conditions; weather conditions; pavement characteristics or conditions; special events; traffic congestion; time of day.

*Thales Navigation licenses map data from governmental sources such as, but not limited to, U.S. Geological Survey (USGS), the National Oceanic and Atmospheric Administration (NOAA-NOS) and the Canadian Hydrographic Service (CHS). Thales Navigation also licenses map data from commercial cartography companies such as Navigation Technologies, Navionics, DMTI and C-Map.

Magellan RoadMate

Front View

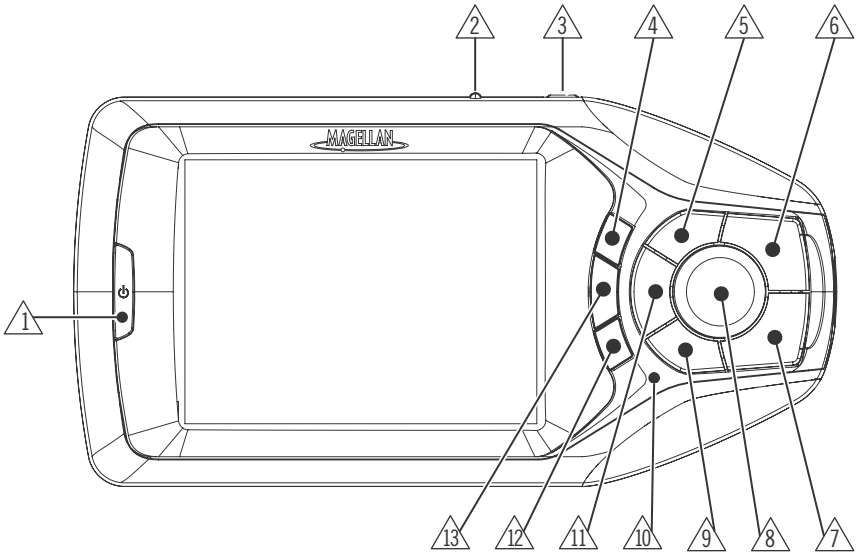

1	Power Button	Press to turn the Magellan RoadMate on or off.
2	Volume Control	Adjust to set the volume of the speaker.
3	Repeat Button	Press to repeat the last spoken prompt.
4	Zoom In Button	While viewing the map, press to zoom in on the center of the display.
5	Option Button	Press to access the User Options menu.
6	Enter Button	Press to confirm highlighted selections.
7	Cancel Button	Press to stop the current function.
8	Navigation Button	Press to move the cursor or to highlight other options.
9	Locate Button	Press to display current location details.
10	Light Sensor	Automatically changes the contrast and brightness of the display to adjust for changes in lighting.
11	View Button	Press to view map display, maneuver list or TrueView 3D display.
12	Zoom Out Button	While viewing the map, press to zoom out from the center of the display.
13	Infrared (IR) Port	Enables wireless IR data transfer from a PDA or SmartPhone device.

Magellan RoadMate

Rear View

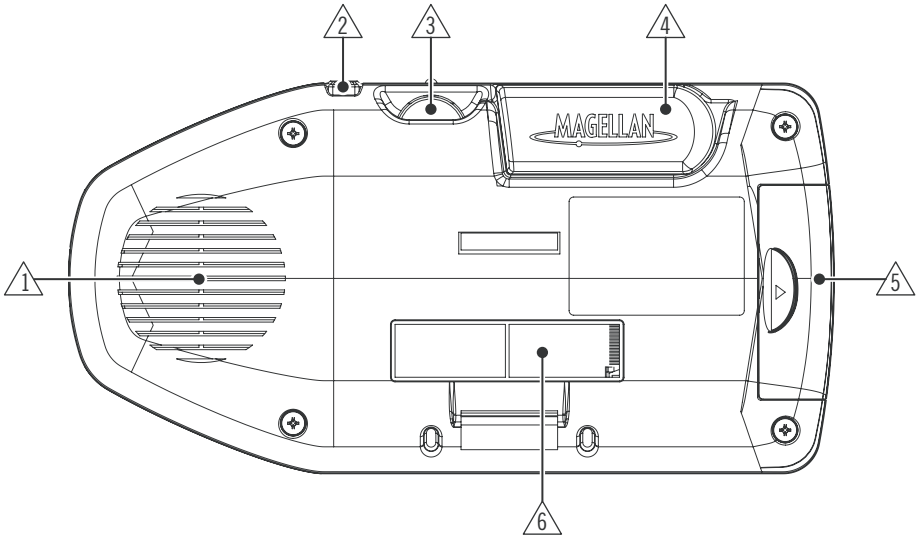

1	Speaker	Used for audible maneuvering instructions.
2	Repeat Button	Press to repeat the last spoken prompt.
3	Volume Control	Adjust to set the volume of the speaker.
4	Detachable Antenna	Rotate up when in use to receive signals from the GPS satellite network.
5	Compact Flash	Compartment to store the compact flash memory card.
6	Power/Data Connector	Connection for power and data for the Magellan RoadMate.

Magellan RoadMate

Cradle Front View

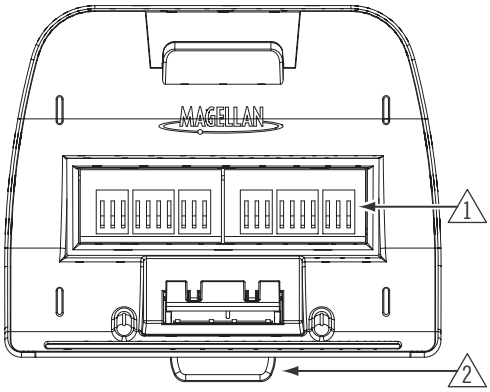

1	Power/Data Connector	Connection for power and data for the Magellan RoadMate.
2	Release	Press to remove the Magellan RoadMate from the cradle.

Cradle Side View

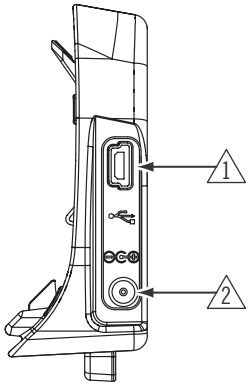

1	USB Connection	Connect to your PC to upload Custom POIs or software updates.
2	Power Connection	Plug into your vehicle or at home.

Installation

Take care when mounting the Magellan RoadMate in your vehicle, whether using the windshield mount or other mount, that it does not obstruct the driver's view of the road. Make sure that the placement of the Magellan RoadMate and cable does not interfere with the operation of vehicle safety devices, such as air bags. You assume the risks associated with damage to your vehicle or vehicle's occupants as a result of how you choose to mount the Magellan RoadMate.

Installation with the Windshield Mount

Slide the cradle and plate assembly onto the windshield mount.

Attach the Magellan RoadMate to the cradle.

Clean the area of the windshield with the supplied alcohol swab.

Press the windshield mount to the glass and rotate the locking dial until it clicks into place.

Installation

Plug the power cable into the cradle.

Plug the cigarette lighter connector into an appropriate 12V receptacle in your car.

Rotate the antenna upward.

Installation is complete, and you are ready to turn the Magellan RoadMate on and go.

POI Manager

Overview

The Magellan RoadMate 760 comes with Magellan RoadMate POI Manager Software. This allows you to add custom POIs to your Magellan RoadMate. You can add things such as friends' houses and other favorite places that are not in the installed database. POIs are easier to search for than street addresses and show up on the Map screen. The POI Manager adds POIs based on Latitude, Longitude, and a name. Other information such as altitude and a description are optional.

Latitude

Latitude can be expressed by dividing Earth into horizontal segments totalling 180 degrees. Starting at the Equator, or zero degrees Latitude, lines (or Parallels) are drawn in 10-degree increments 90 degrees to the north and 90 degrees to the south. If your location is below the Equator, you are at a South Latitude.

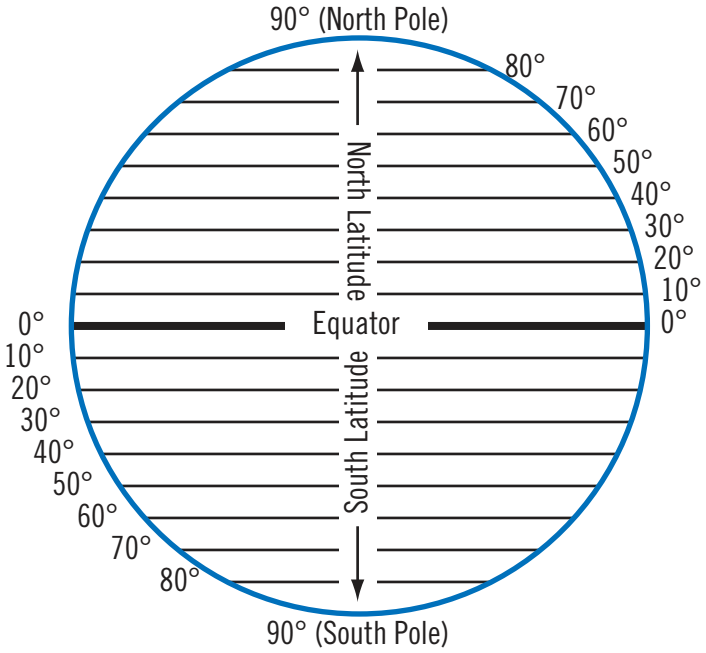

POI Manager

Longitude

Conversely, longitude lines can be expressed by dividing Earth into vertical segments totalling 360 degrees. Starting at the Prime Meridian (which is The Royal Observatory in Greenwich, England), or zero degrees Longitude, lines are drawn in 10-degree increments 180 degrees to the West and 180 degrees to the East. If your location is on the western hemisphere, you are at a West Longitude.

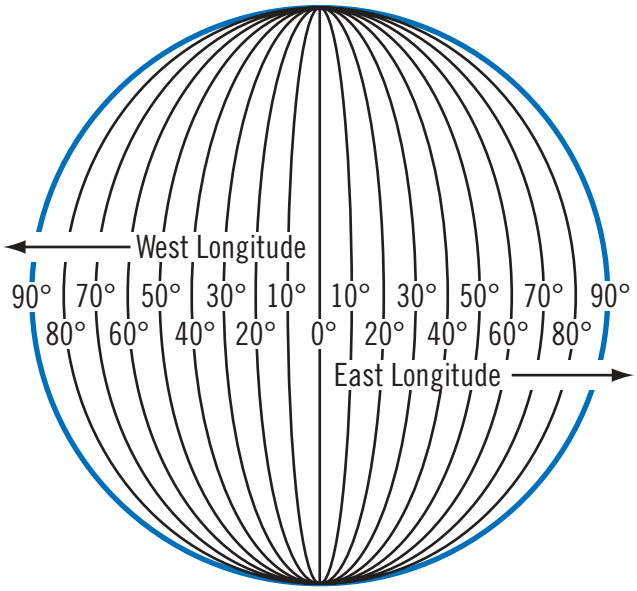

Additionally, to narrow down your location further, each 10-degree segment is divided into 60 smaller segments called minutes and, still further, each minute is divided into 60 segments called seconds.

To express this in coordinates, the city of Los Angeles is located at 34° (degrees) 03’ (minutes) and 08 (seconds) North of the Equator, and 118° (degrees) 14’ (minutes) and 42 (seconds) West of the Prime Meridian.

POI Manager

Altitude

Each location also must have an Altitude. Altitude is expressed by how far the point is above or below the level of the ocean, or Sea Level. For example, Los Angeles, California is about 300 feet above sea level. Death Valley, California is about 270 feet below sea level.

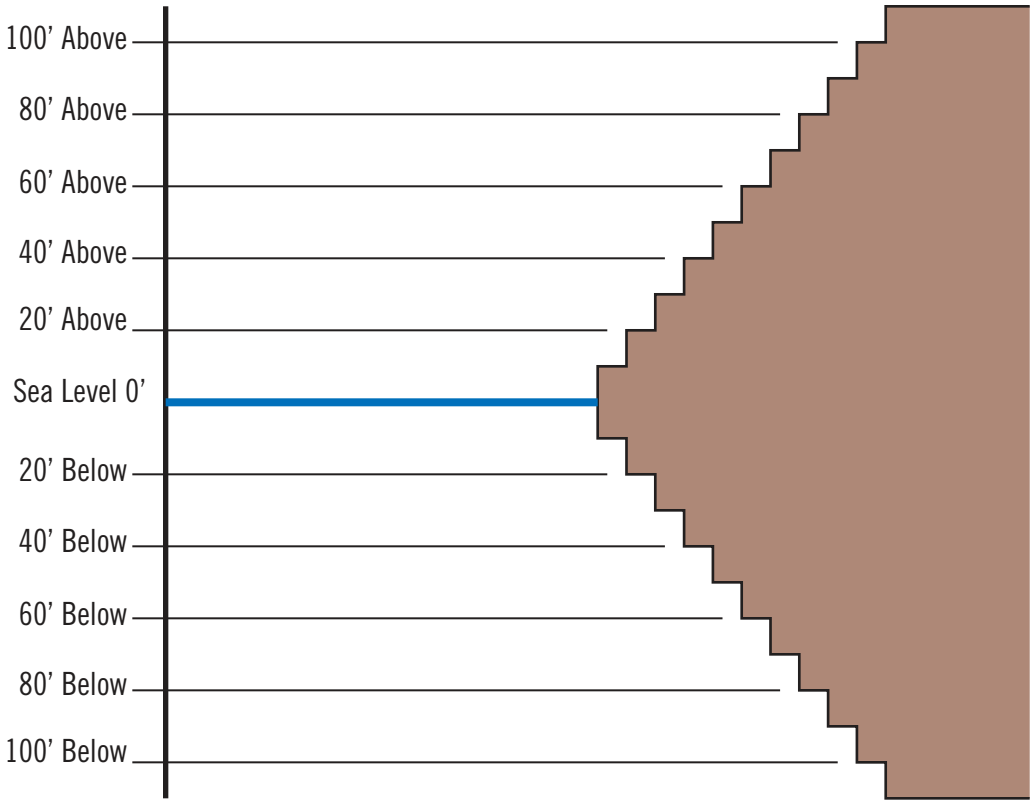

POI Manager

Installation

Insert the POI Manager CD into your PC's CD drive.

The setup application will begin automatically. If it does not, browse your computer's CD drive and double-click on the setup.exe file.

Select a default language for the Application.

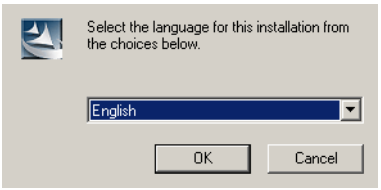

The Welcome screen will appear to begin the installation process.

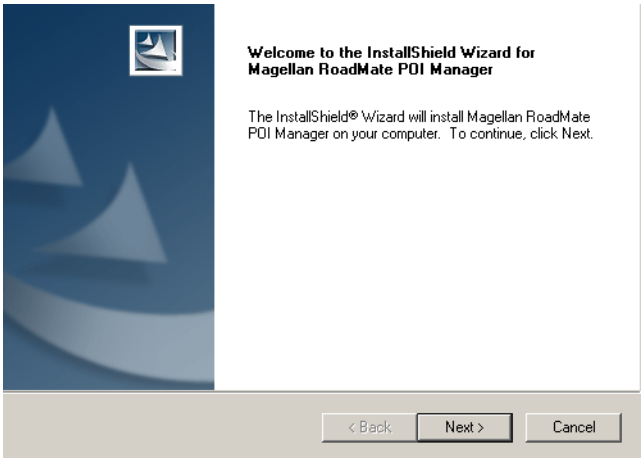
Welcome to the InstallShield Wizard for Magellan RoadMate POI Manager
The InstallShield® Wizard will install Magellan RoadMate POI Manager on your computer. To continue, click Next.
< Back
Next >
Cancel

Choose a destination for the application. Select **Next** to use the default location, or select **Browse** to choose a custom destination.

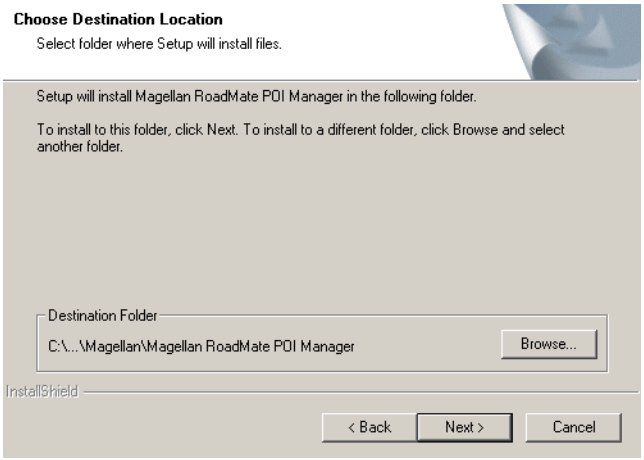
Choose Destination Location
Select folder where Setup will install files.
Setup will install Magellan RoadMate POI Manager in the following folder.
To install to this folder, click Next. To install to a different folder, click Browse and select another folder.
Destination Folder
C:\...\Magellan\Magellan RoadMate POI Manager
Browse...
InstallShield
< Back
Next >
Cancel

POI Manager

Next, choose a Program Folder to place the application icons.

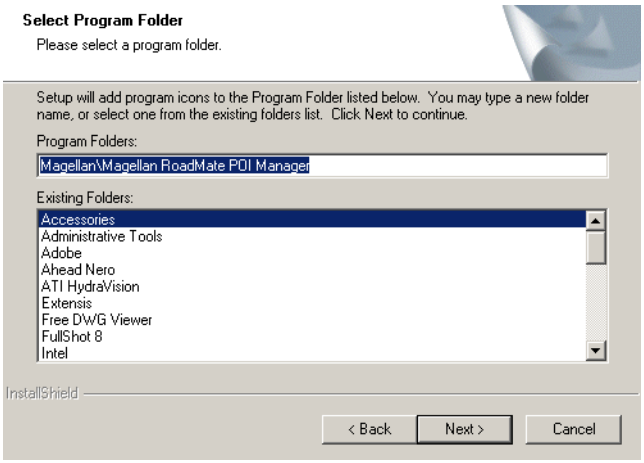

THe Magellan RoadMate POI Manager software will be installed.

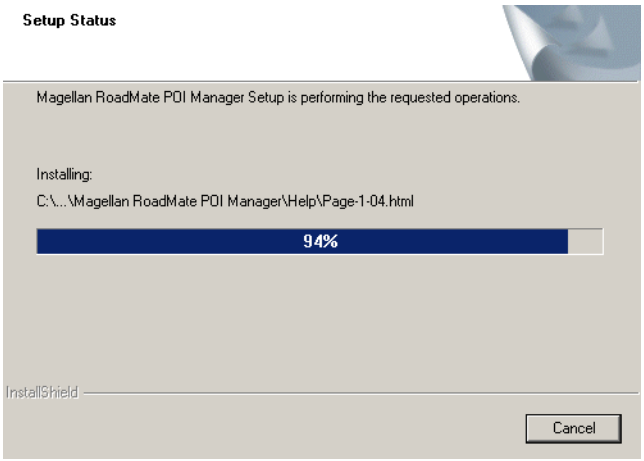

When it has finished, to can have the installer launch the application automatically, or deselect to exit without launching the application.

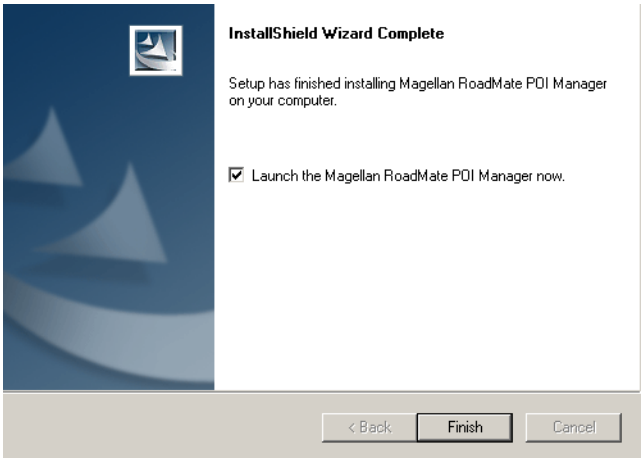
InstallShield Wizard Complete
Setup has finished installing Magellan RoadMate POI Manager on your computer.
Launch the Magellan RoadMate POI Manager now.
< Back
Finish
Cancel

POI Manager

Connecting Your Magellan RoadMate

The standard cradle is equipped with ports for connecting the Magellan RoadMate to a personal computer and external power.

When connecting to a personal computer, leave the Magellan RoadMate attached to the cradle, disconnect the vehicle power cable and remove the assembly (Magellan RoadMate and cradle) from the vehicle.

Connect the small end of the USB cable to the USB port on the cradle and the large end to an available USB port on your personal computer. See “Cradle Side View” on page 6.

Connect the small end of the External Power cable to the power port on the cradle and plug the other end of the cable into a standard, 110 VAC wall outlet. See “Cradle Side View” on page 6.

Depending on the location and surrounding obstructions, the Magellan RoadMate may or may not be able to receive GPS satellite information.

Application

The POI Manager has a single interface for loading, adding, and deleting custom POIs from your Magellan RoadMate.

Adding A Single POI

Click on the **Add New POI** + button. A dialog box will appear. Enter the Name, the Latitude, the Longitude, the Altitude (optional), and Description (optional). To find the latitude, longitude, and altitude of a POI, press the Locate button on the Magellan RoadMate while you are at the location. See “Displaying Information About Your Present Location” on page 27.

Next, select an icon for the POI by clicking on the drop-down menu.

Finally, create a category for your POI. For example, “Friends’ Houses”, or “Coffee Shops”. Click on **OK**.

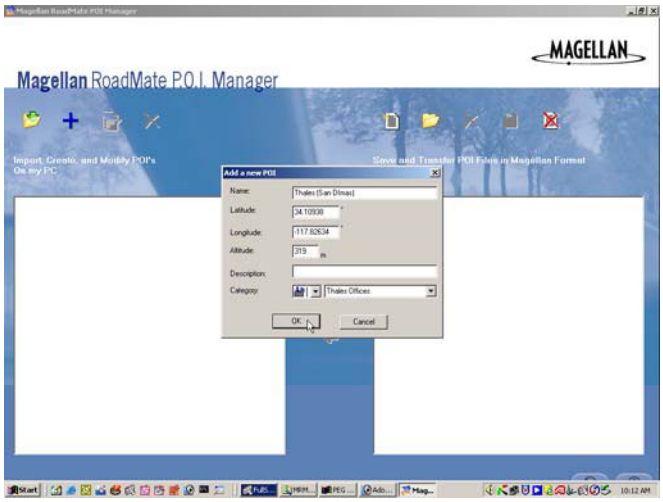

The POI you created is now in the Import, Create, and Modify window. You can continue adding POIs to the new category by repeating the previous instructions. Each POI file can contain up to 10 categories with 1,000 POIs for a total of 10,000 total POIs.

POI Manager

Once you have finished creating POI's, select the category or categories you wish to upload and click on the right arrow to add them to the Save and Transfer window.

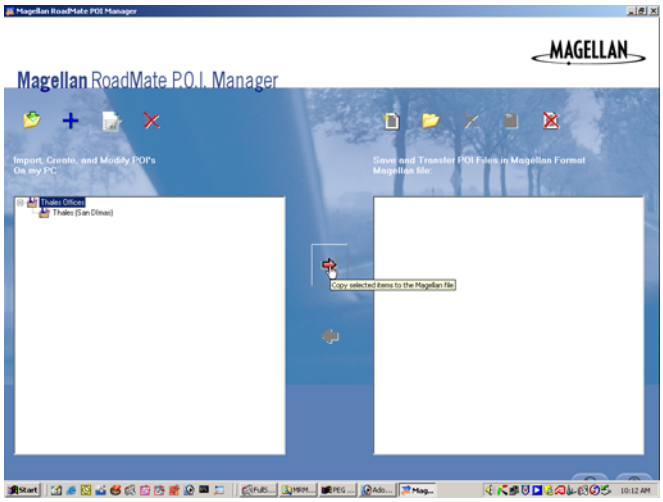

Click on the Save button. You are given the option of saving the POIs either to your computer (for later transfer) or directly to your Magellan RoadMate. Select the **Save to My Magellan RoadMate** button.

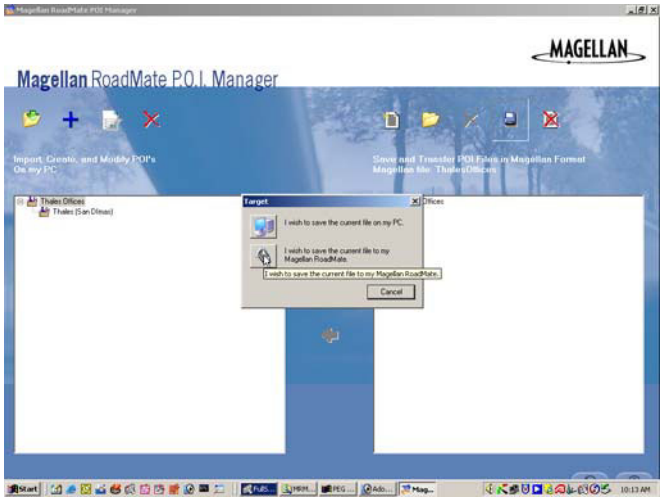

Give your POI file a name and click on **Save**.

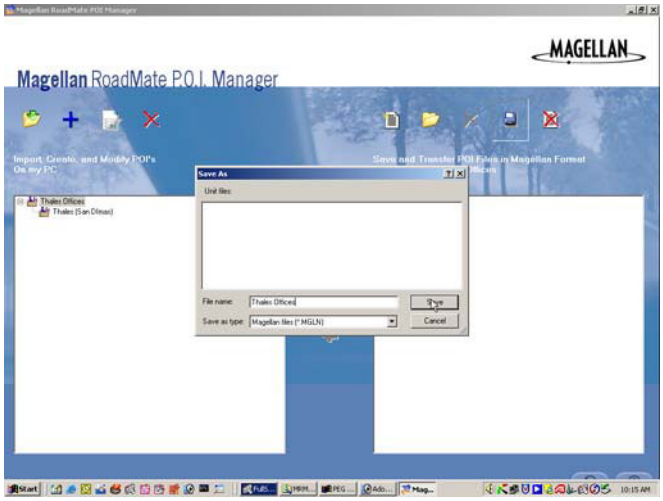

POI Manager

The POIs are uploaded to your Magellan RoadMate. To access the new POIs on your Magellan RoadMate, refer to page 81.

Adding Multiple POIs

The POI Manager software supports ASCII file format (.ASC,.CSV,.TXT); GPS Exchange file format (.GPS,.XML); Magellan Waypoint file format (.WPT,.RTE); and Garmin PCX5 Waypoint file format (.WPT,.RTE).

Click on the **Import POI File** button.

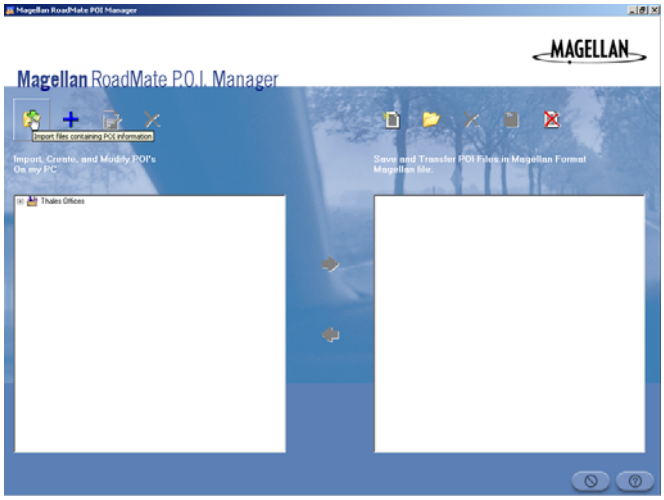

Select a POI file. Assign the POIs an icon and create a category. Click **Open**.

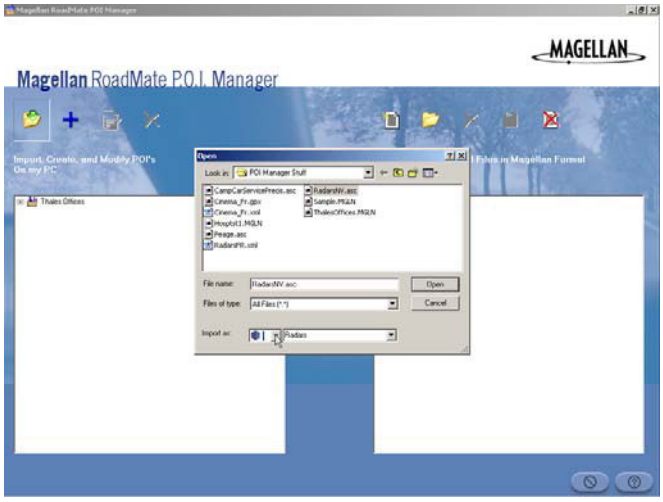

POI Manager

Define the data separator. Click **Next**.

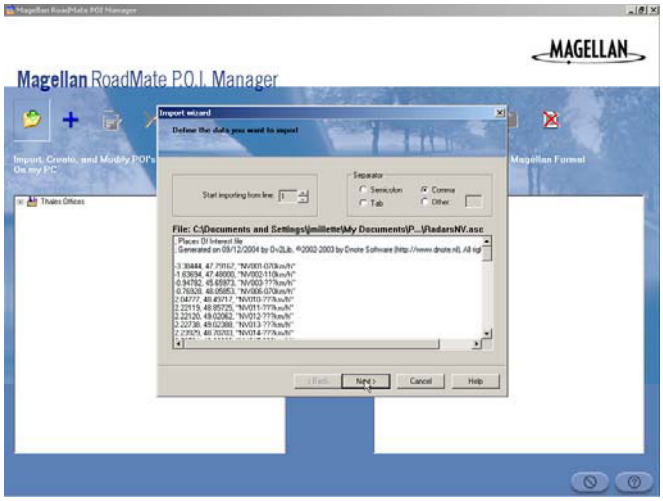

Assign a title to each field. You must have a latitude, a longitude, and a name. Click **Finish**.

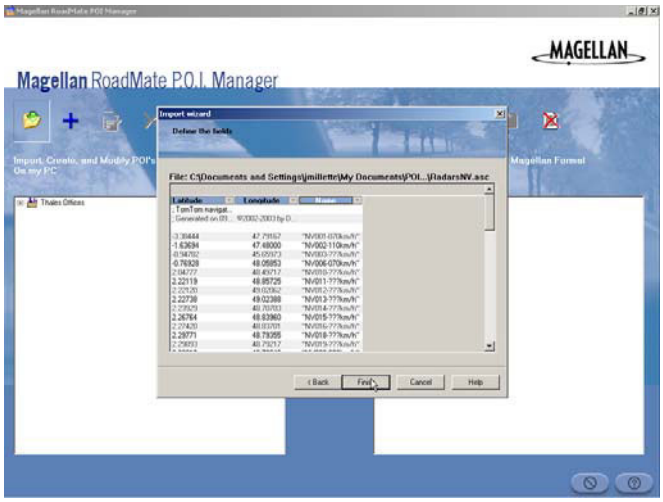

If there are any errors in the data you can view them. Otherwise, click **No**. The POI file has been imported and is ready to upload to your Magellan RoadMate.

POI Manager

Select the POI file and click the right arrow.

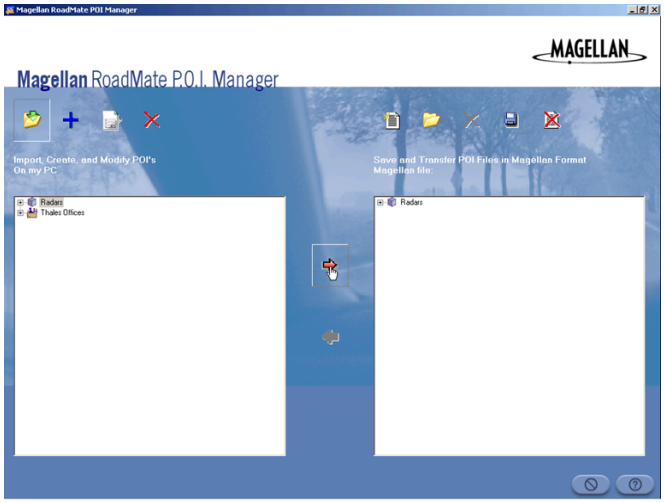

Click the **Save** button. You are given the option of saving the POIs either to your computer (for later transfer) or directly to your Magellan RoadMate. Select the **Save to My Magellan RoadMate** button.

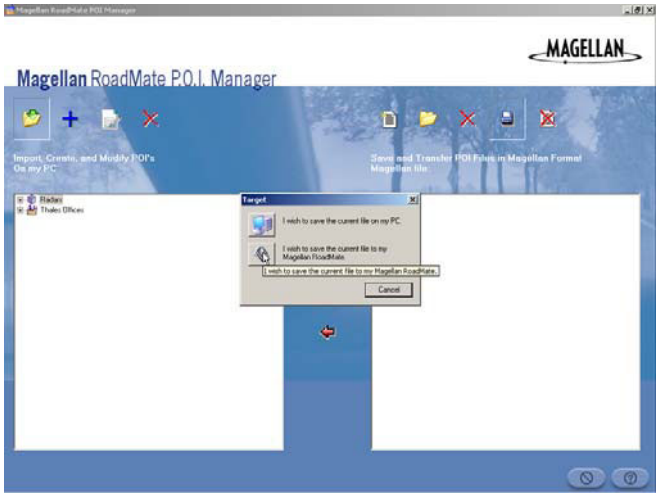
MAGELLAN
Magellan RoadMate P.O.I. Manager
Import, Create, and Modify POI's On my PC
Save and Transfer POI Files in Magellan Format Magellan file
Radars
Thales Offices
Target
I wish to save the current file on my PC
I wish to save the current file to my Magellan RoadMate
I wish to save the current file to my Magellan RoadMate
Cancel

Give your POI file a name and click on Save.

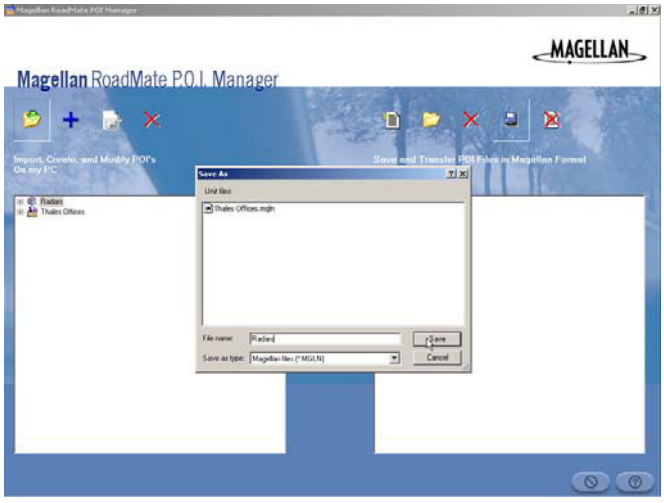

The POIs are uploaded to your Magellan RoadMate. To access the new POIs on your Magellan RoadMate, refer to page 81.

Basic Operation

Turning the Magellan RoadMate On

Press the **Power** Button.

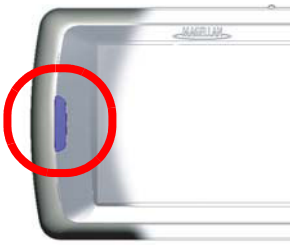

If power is properly connected, a logo screen is displayed, followed by the Warning screen.

Select the desired User. The Magellan RoadMate can be personalized for three different users. It will use the saved profile settings for the user that you select here.

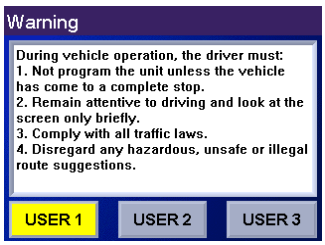
Warning
During vehicle operation, the driver must:
1. Not program the unit unless the vehicle has come to a complete stop.
2. Remain attentive to driving and look at the screen only briefly.
3. Comply with all traffic laws.
4. Disregard any hazardous, unsafe or illegal route suggestions.
USER 1
USER 2
USER 3

Either the Select Destination screen or the Resume Route screen will be displayed automatically.

Select Destination

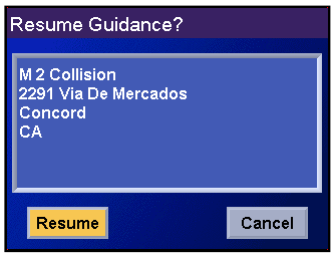

Resume Guidance

Resume Route is displayed if you were navigating toward a destination when the Magellan RoadMate was turned off.

Press the **Power** button and the Magellan RoadMate will turn off.

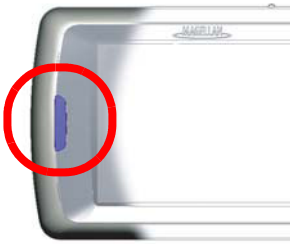

Basic Operation

Adjusting the Volume

The volume control is located at the top of the Magellan RoadMate. Use the thumbwheel to set the volume of the speaker to a desired level. See “Rear View” on page 5.

Repeating the Last Command

If you missed the last verbal command, you can repeat it by pressing the **Repeat** button. The Repeat button is located on the top of the Magellan RoadMate. See “Rear View” on page 5.

Inputting Text Characters

Whenever you need to input names, street addresses, etc., the Magellan RoadMate will display a keyboard. Touch the letter you want and, if you make a mistake, use the Backspace key to go back one character at a time. The Spacebar is used to insert spaces between characters or words.

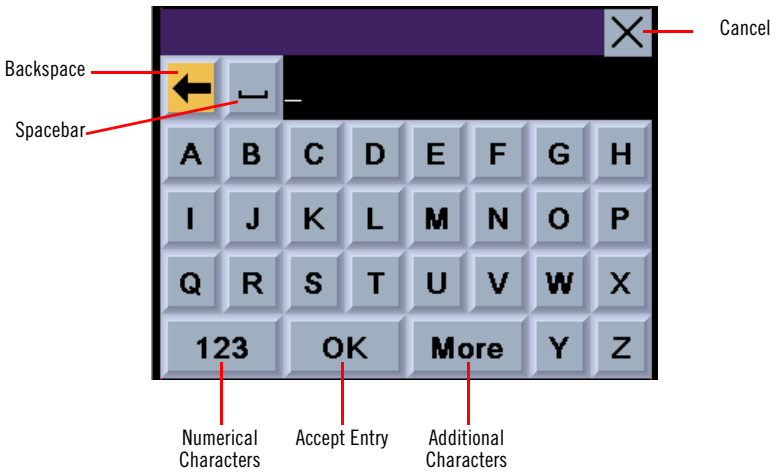

Additional Characters (“More” Button)

When you are entering characters, you may need to add punctuation or other special characters. When available, pressing the **More** button brings up a keypad with the characters shown here.

Basic Operation

Numerical Characters (“123” Button)

When available, pressing the **123** button brings up a keypad with the numeric characters shown here.

What Is QuickSpell?

The Magellan RoadMate uses QuickSpell technology to provide you with the fastest method possible to enter characters. QuickSpell eliminates the possibility of a misspelled word or looking for a city or street that is not in the loaded database. As you begin entering characters, the QuickSpell feature of the Magellan RoadMate dims out those characters which that are not available, thereby speeding up the process of entering data.

Example:

Suppose that you need to input the name of a city--in this case, San Francisco.

Select “S”.

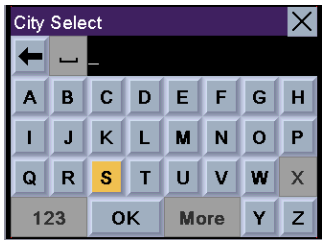

Select “A”.

Select “N”.

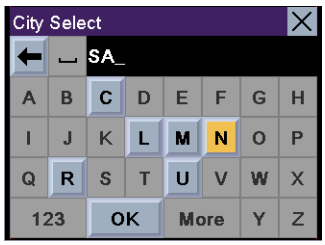

Basic Operation

Select the spacebar.

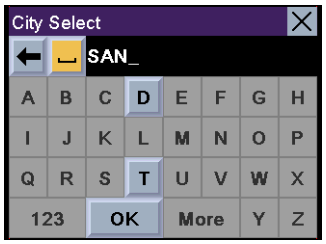

When enough characters have been entered, the Magellan RoadMate will automatically display the list of cities; or, if you feel that enough characters have been entered, select **OK**.

Use the Navigation key to scroll the list up or down and select “San Francisco, CA” from the list.

If the list is still too long, press Cancel to return to the keyboard and continue entering characters. The list of items found in the database is limited to 100 items. When over 100 items have been found, “Matches: > 100” will be displayed shown in the bottom right corner of the display; you may need to press **Cancel** and enter additional characters.

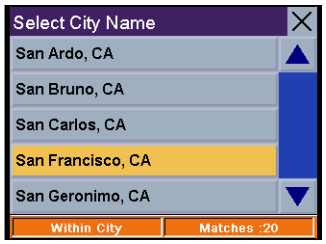

Traveling

Guidance Information Screens

The Magellan RoadMate has three screens you can use to assist you in travelling to your destination: the Map screen, the Maneuver List screen, and the TrueView 3D/Split TrueView screen.

Map: When a new destination is selected and calculated, the Map screen is displayed. This screen displays a map of your surrounding area along with the planned route (if calculated) and information about the route. This screen can be accessed when no route has been calculated by selecting **Map** or by pressing the **View** button while at the Select Destination screen. It can also be selected by pressing the **View** button while viewing the TrueView 3D screen.

Maneuver List: This screen is available only when a route has been calculated. This screen displays a list of maneuvers to follow in order to arrive at the destination. It can also be used exclude a maneuver and reroute you to your destination. To access the Maneuver List screen, press the **View** button while viewing the Map screen.

TrueView 3D: This screen displays the next maneuver as a 3D graphic. It will help you to know which lane to be in and provides you with an easy-to-follow picture of the next maneuver. To access the TrueView 3D screen, press the **View** button while viewing the Maneuver List. You can also show the TrueView 3D in split mode (see "Map Options" on page 86). This view shows the TrueView screen on the left side and the Map on the right side.

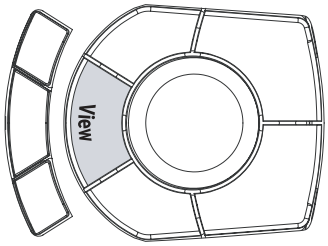

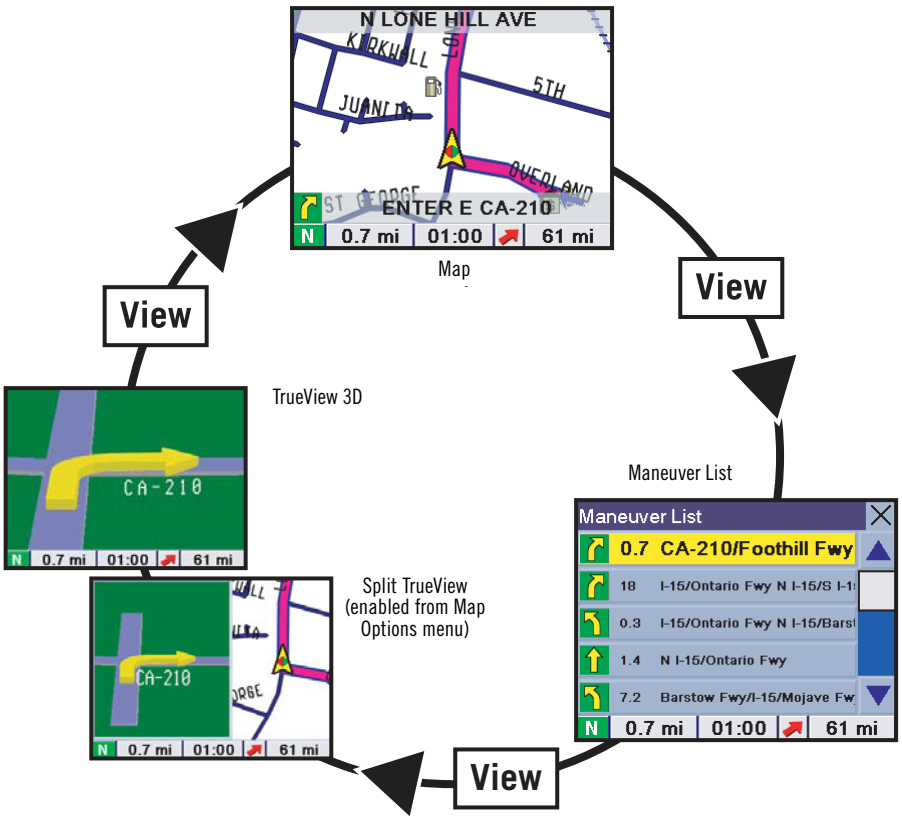

Traveling

Map Screen

The Map screen is the most commonly used screen in the Magellan RoadMate and provides you with detailed information about where you are and where you are going.

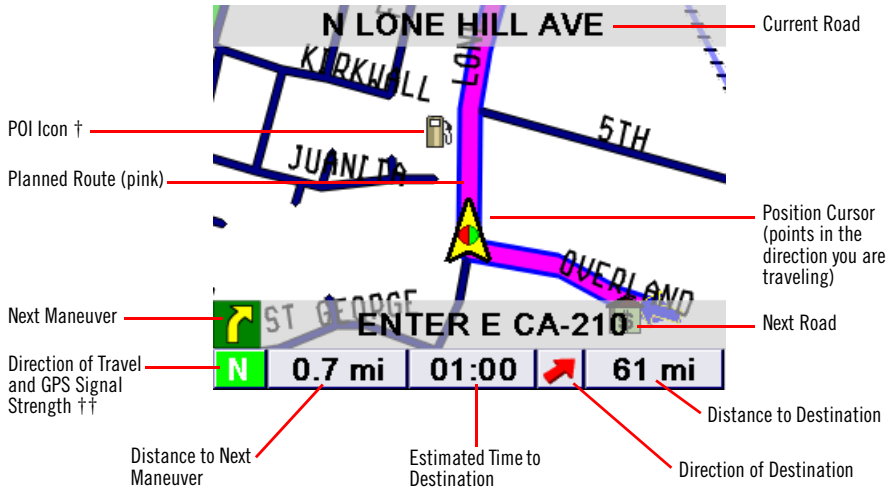

† By touching the POI icon on the screen, you can get information and route to it.
†† Blue = WASS Signal, Green = Strong Signal, Yellow = Average Signal, Red = Weak Signal, Black = No Signal

As you travel, the Map screen constantly updates your location and provides you with not only a map but a visual indication of where you are on the map.

Changing the Map Zoom Levels

You can zoom in by pressing the **+ (plus)** button or zoom out by pressing the **- (minus)** button.

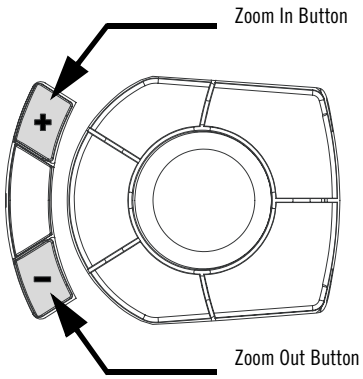

Traveling

Maneuver List Screen

The Maneuver List screen can be viewed only after a route has been calculated. From the Map screen, press the **View** button to bring up a list of all of the maneuvers along the route. When you are done viewing the Maneuver List screen, press the **View** button twice to return to the Map screen, or wait a few moments and it will return automatically.

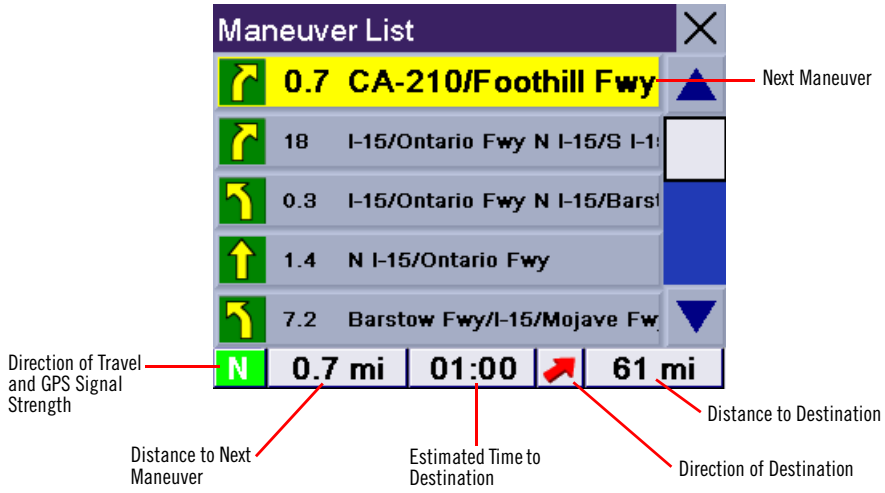

TrueView 3D Screen

The Magellan RoadMate uses TrueView 3D technology to display a three-dimensional picture of the next maneuver. The TrueView 3D screen can be viewed only after a route has been calculated. From the Map screen, press the **View** button twice to view the TrueView 3D screen.

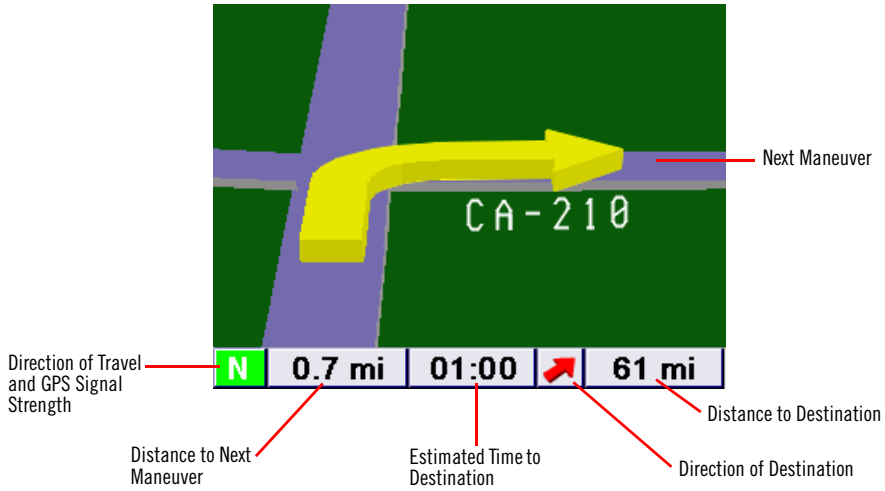

Traveling

In split mode, the left half of the screen shows TrueView 3D, while the right half of the screen shows the Map.

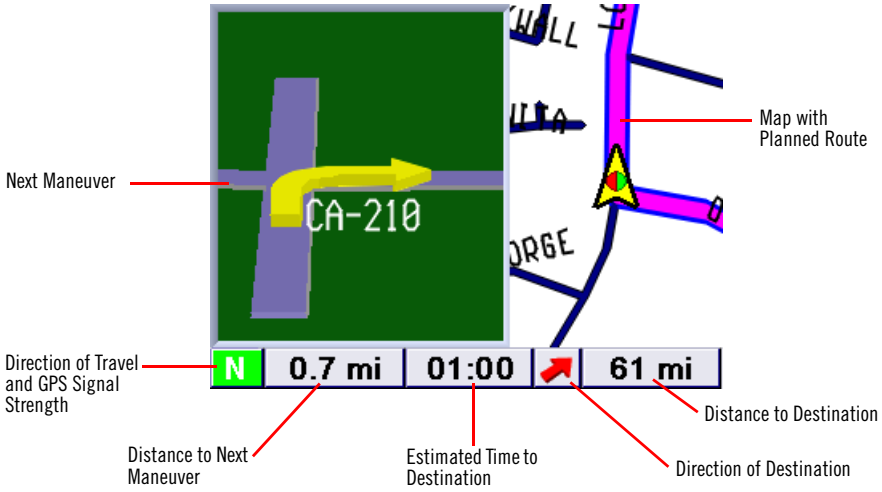

Detouring from the Planned Route

If you exit the planned route, the Magellan RoadMate will get you back on course in one of two ways.

1. If you exit the planned route before its completion and turn off your vehicle, the Magellan RoadMate will also turn off. When you turn your vehicle back on, the Magellan RoadMate will turn on automatically and present you with a screen asking whether you want to resume your route.

   Select **Resume** to continue the route to the selected destination.

   Select **Cancel** to clear the route and display the Select Destination screen.

2. If, while driving, you exit the planned route, the Magellan RoadMate will automatically recalculate the route based on your new location.

Excluding a Maneuver in the Planned Route

While travelling or setting up your destination you may find it necessary to exclude one of the maneuvers in the Maneuver List. This could be due to an accident or street maintenance you want to avoid. The Magellan RoadMate provides you with tools to select a specific maneuver, exclude it from the planned route and reroute the trip.

Press the **View** button to get to the Maneuver List. Select the maneuver you wish to exclude.

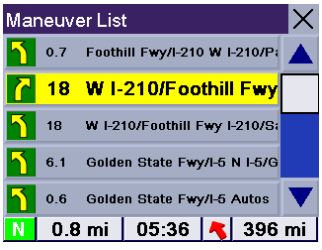

The details for the maneuver are displayed. Select **Exclude**.

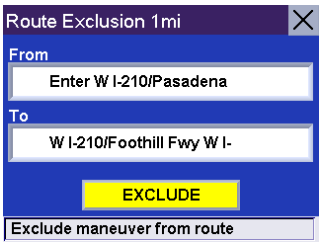

Traveling

The trip will be recalculated, excluding the selected maneuver. This calculation is done using the same Route Method that was chosen originally. After the route is recalculated, the Map screen is displayed.

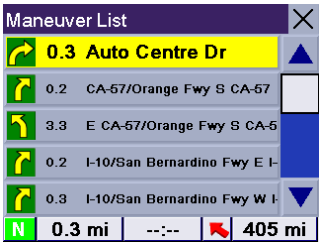

Displaying Information About Your Present Location

Anytime that you want to view information about your present location you can press the **Locate** button.

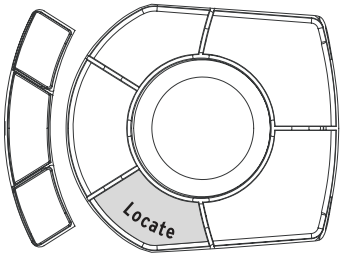

The first screen displays your heading and the street you are on, the state and city you are currently traveling in, the latitude and longitude of your present location, a compass, and your speed.

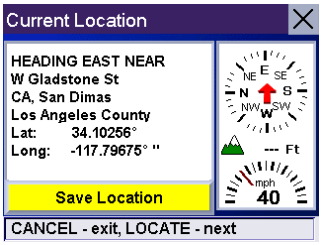

The next screen displays the street you are currently traveling on, the distance to and the next street on the map, and the distance from and the last street you passed.

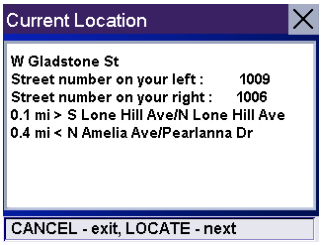
Current Location
W Gladstone St
Street number on your left : 1009
Street number on your right : 1006
0.1 mi > S Lone Hill Ave/N Lone Hill Ave
0.4 mi < N Amelia Ave/Pearlanna Dr
CANCEL - exit, LOCATE - next

Saving Your Current Location to Your Address Book

While you are in the Locate screen, you can save your current location to your Address Book.

Select **Save Location**.

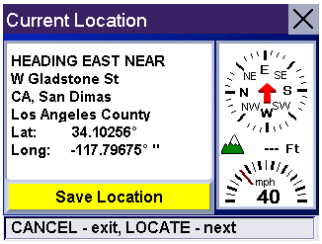

The information about your location is displayed. Select **Edit Name** and/or **Edit Information** and use the keypad to assign a name to the location and other information about it. If the point you are saving is off-road, the nearest road information will be used.

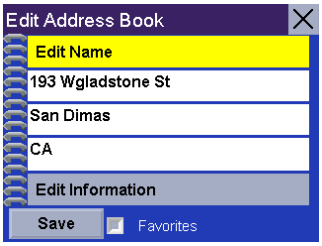

When you have finished, select **Save.** The location is saved to your Address Book and you are returned to the Locate screen.

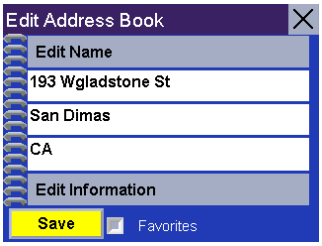

Finding POIs Along Your Route

While driving along a route, if you need to find a gas station, ATM, or other POI, the Magellan RoadMate can find the nearest POI and route to it. Then, when you have completed the side route, resume guidance to your original destination.

While driving along a route, press the **Enter** button.

Select **Dining, ATM, Gas....**

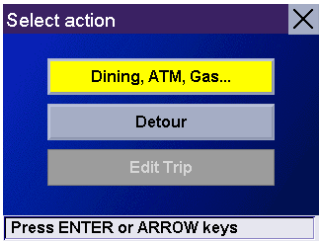

Select the desired POI category.

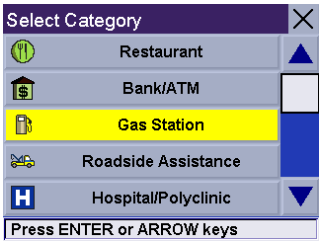

A list of the nearest POI's is displayed. Use the Navigation key to scroll the list up or down (if necessary) and select the desired POI.

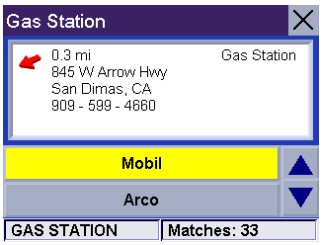

Traveling

The Magellan RoadMate will calculate a new route to the selected POI from your current position. When you have arrived at the new destination, you will be prompted to resume guidance to your original destination. Select **Resume**. The Magellan RoadMate will calculate the route to your original destination using the Route Method previously selected.

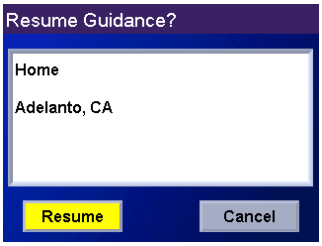

Finding a Detour Along Your Route

While driving along a route, if you encounter traffic, road construction, or other situation you might need to navigate around, the Magellan RoadMate can calculate an alternate route to your destination.

While driving along a route, press the **Enter** button.

Select **Detour**.

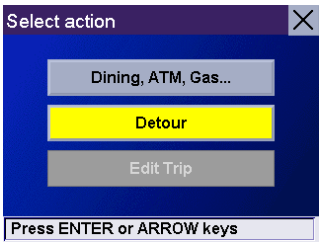

Select the distance of the detour. Select **3 miles**, **5 miles**, or **10 miles**.

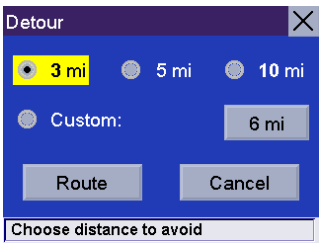

Or, you can enter a custom distance. Select **Custom** and select the custom distance.

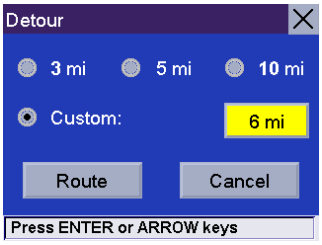

Enter the number of miles for your detour and then select **OK**.

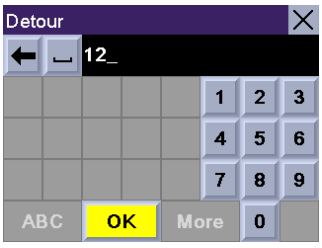

Select **Route**. The Magellan RoadMate will recalculate the alternate route to your destination.

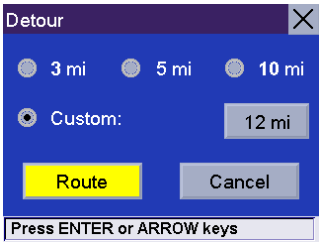

Selecting Destinations

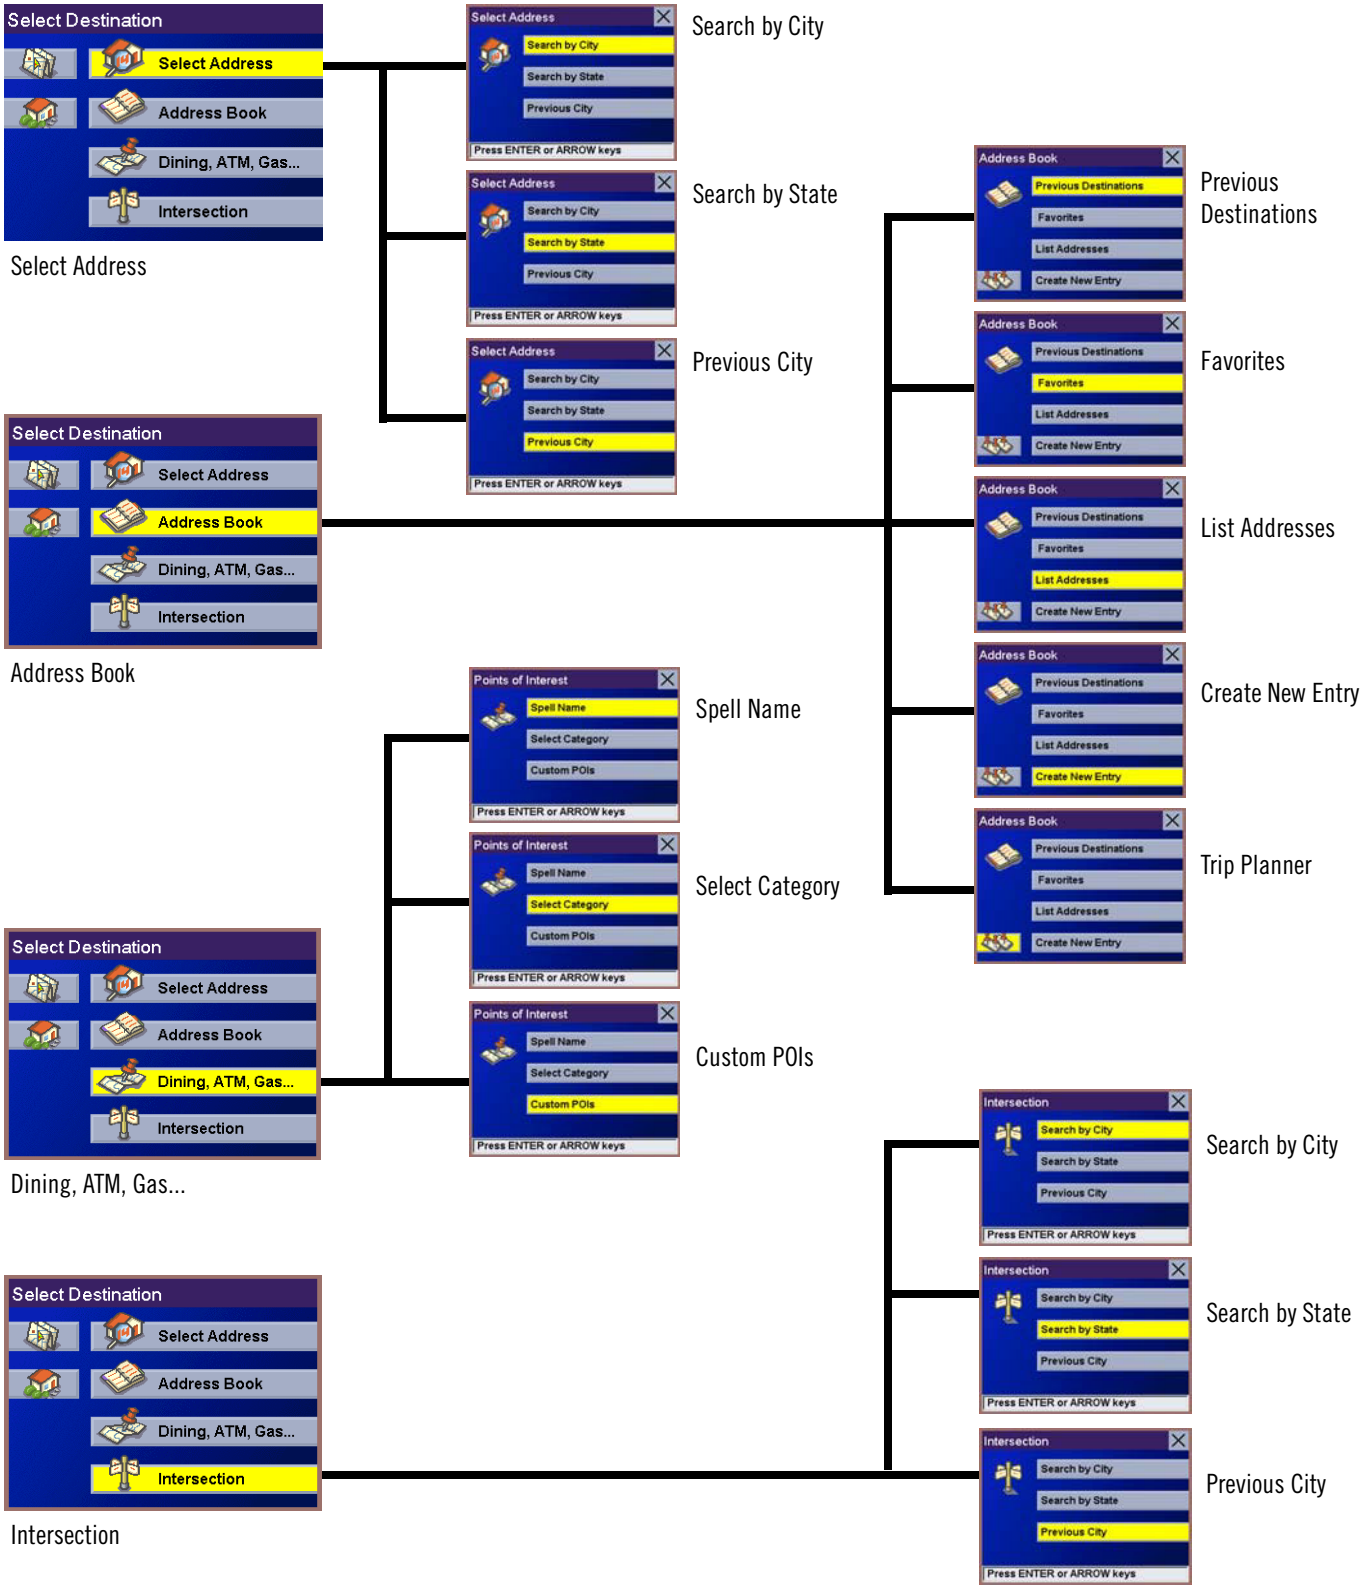

Selecting Destinations

Choosing the Route Method

Every route is calculated based on the Route Method criteria selected. Every time a new destination is selected, the Magellan RoadMate prompts you for the method that will be used to calculate the route.

Shortest Time: This selection calculates a route that should take the least amount of time using speed limits and other information in the database. Other factors, such as traffic conditions, cannot be used in the calculation of shortest time.

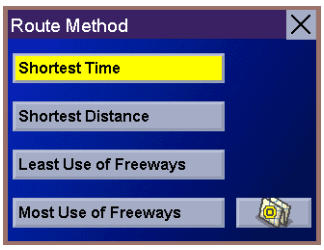

Shortest Distance: This option calculates the route using the most direct route to the destination. This route may not be the fastest due to lower speed limits, left turns or other factors.

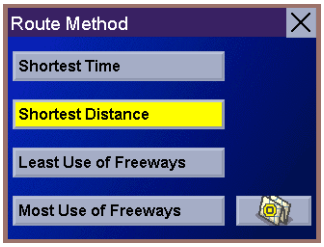

Least Use of Freeways: This selection calculates the route avoiding freeways whenever possible.

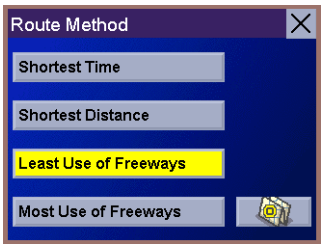

Most Use of Freeways: This selection calculates the route using freeways as much as possible.

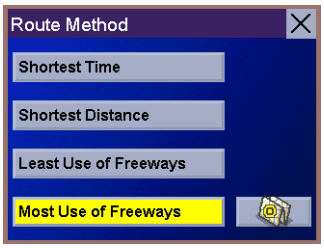

View Destination on Map: Before you select your Route Method, you can see where you are going.

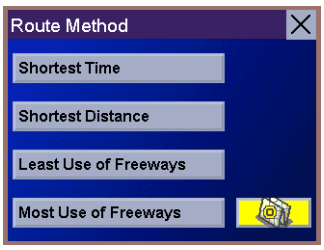

Selecting Destinations

Changing the Route Method

While viewing the Map screen, the Maneuver List screen, or the TrueView 3D screen, press the **Cancel** button.

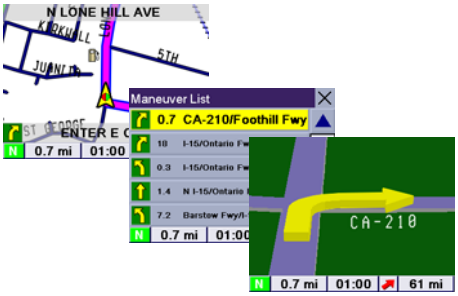

Select **Route**.

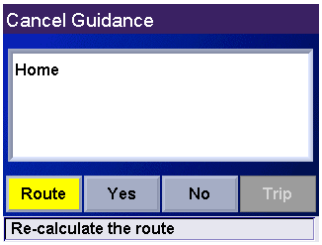

Select the new Route Method.

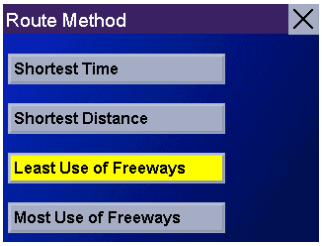

The route will be re-calculated using the new Route Method chosen and the Map screen will be displayed. Press the **View** button to see the Maneuver List with the new route.

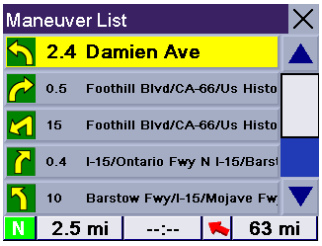

Selecting Destinations

Cancelling a Planned Route

While viewing the Map screen, the Maneuver List screen, or the TrueView 3D screen, press the **Cancel** button.

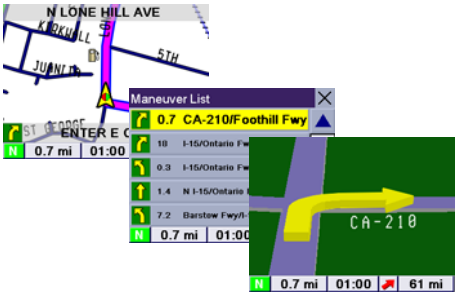

Select **Yes** to cancel the route and display the Select Destination screen.

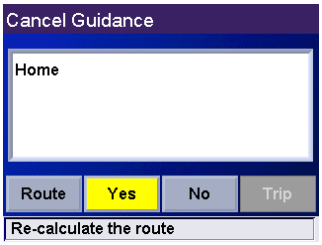

Select **No** returns the display to the last viewed screen.

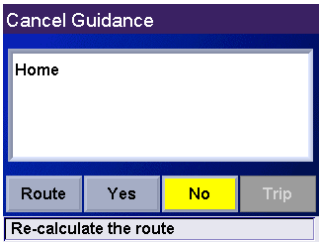

Selecting Destinations

Selecting a Destination Using Select Address

A destination can be created by entering the street address that you want to go to. This address is not automatically added your Address Book but is saved to your Previous Destinations list. You have three options, **Search By City**, **Search By State**, or **Previous City**. Use **Search By City** when you know the city that the address can be found in. Use **Search By State** when you don't know, or are unsure of the city name. You will be given a listing of all of the cities for the state you select that have the street name you are looking for. Use **Previous City** to speed up your search by not having to re-enter a city you have used before. Additionally, The Previous Cities list places your current city at the top of the list.

Search By City

From the Select Destination screen, select **Select Address**.

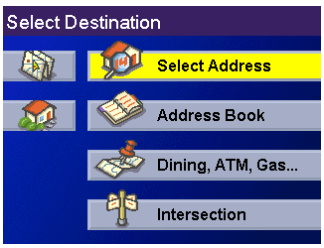

Select **Search By City**.

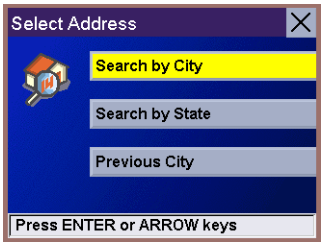

Enter the first few characters in the city name. Do not enter prefixes such as "North" or "N", or suffixes such as "Ave." or "Street". Select **OK**.

Remember, if the list is too long, press **Cancel** while viewing the list to return to this screen and continue to input characters.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

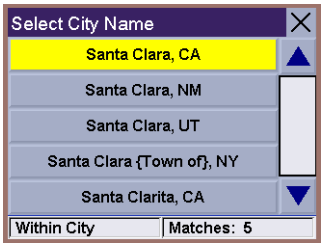

Enter the first few characters for the street name and select **OK**. which addendum

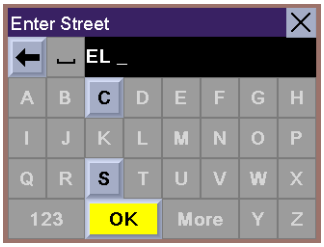

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the desired street.

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. Select **Done**.

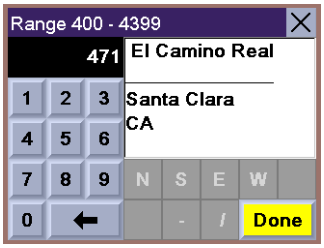

Select the desired Route Method.

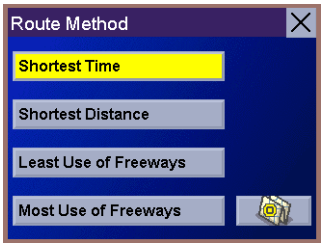

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

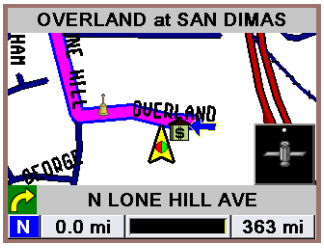

Search By State

From the Select Destination screen, select **Street Address**.

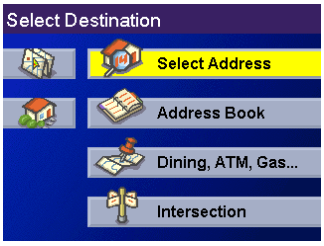

Select **Search By State**.

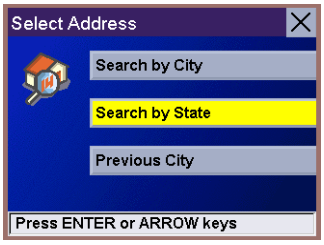

Selecting Destinations

Enter the first few characters for the state and select **OK**.

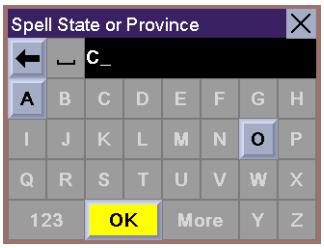

Select the state.

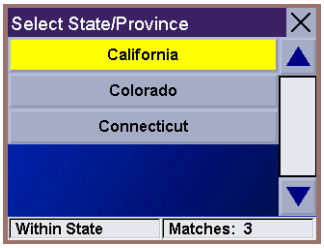

Enter the first few characters for the name of the street and select **OK**.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired street.

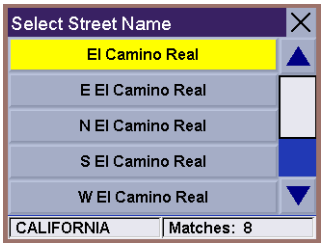

Select the city from the list of cities displayed. (These are all of the cities in your loaded database that have the street name you selected.)

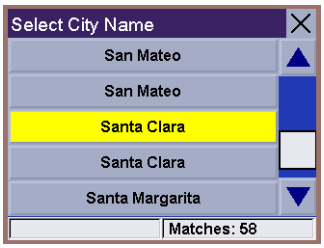

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. Select **Done**.

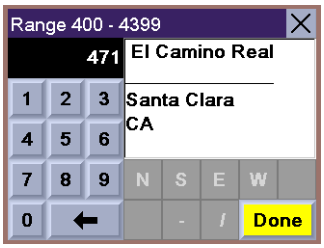

Selecting Destinations

Select the desired Route Method.

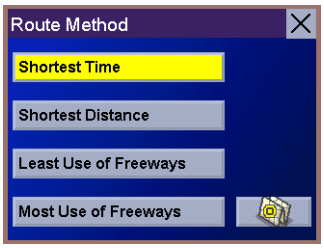

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

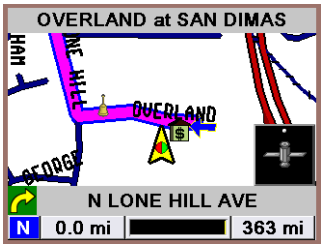

Previous City

From the Select Destination screen, select **Street Address**.

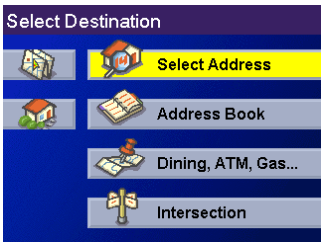

Select **Previous City**.

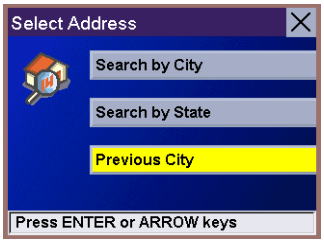

Select the city from the list.

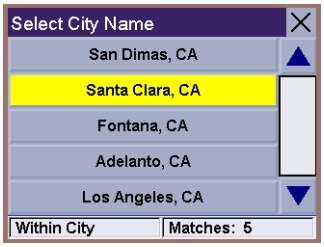

Enter the first few characters for the name of the street and select **OK**.

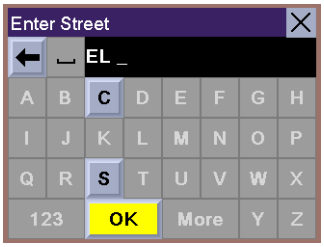

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the desired street.

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. Select **Done**.

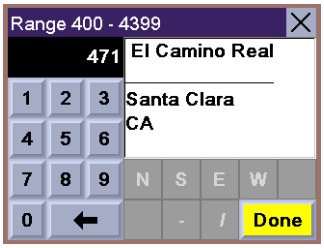

Select the desired Route Method.

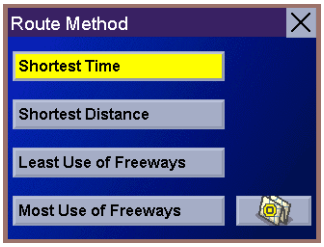

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

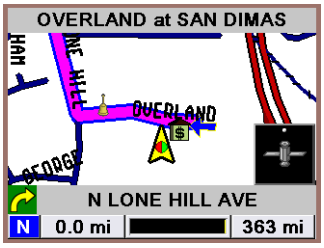

Selecting Destinations

Selecting a Destination Using the Address Book

The Address Book can store up to 200 addresses for each of the three users you have available. When you select Address Book you are given five options: **Previous Destinations** lets you select from a list of the last 50 destinations you routed to; **List Addresses** displays a list of all of the addresses you have stored in your Address Book; **Favorites** gives you a shortened list of entries from your Address Book marked as Favorites; **Create New Entry** lets you add a new address to your Address Book; and **Trip Planner** (indicated by the Trip button) lets you create a multi-destination trip from entries.

Previous Destinations

From the Select Destination screen, select **Address Book**.

Select **Previous Destinations**.

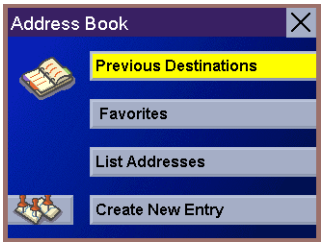

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

Select **Route**.

(Note: Select **Edit** if you want to edit the displayed address and save it to your Address Book.)

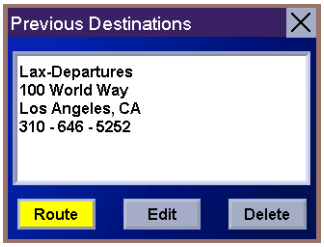

Select the desired Route Method.

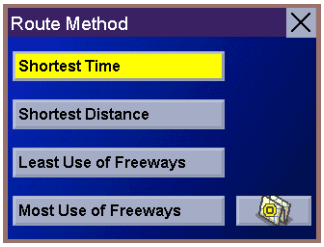

Selecting Destinations

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

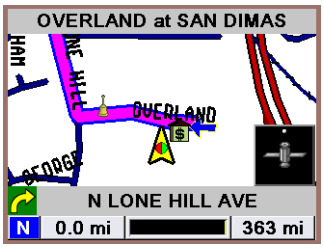

Saving a Previous Destination to the Address Book

From the Select Destination screen, select **Address Book**.

Select **Previous Destinations**.

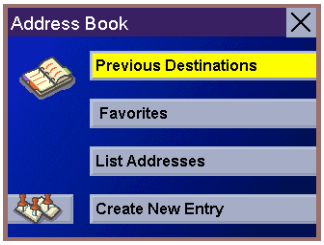

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

Select **Edit**.

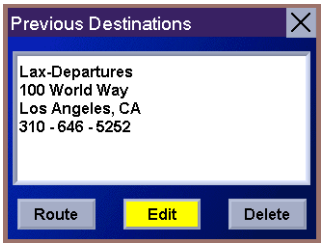

The top line (Name) and the bottom line (Information) can be edited. The address cannot be changed. Select the line you want to modify. Use the keypad to enter the desired text and select **OK**.

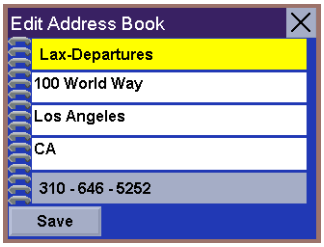

Selecting Destinations

When you have finished making changes, select **Save**.

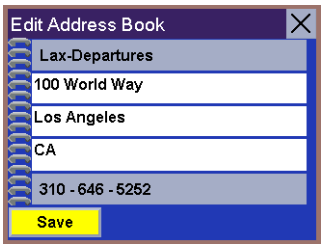

The address is saved to the Address Book. The Previous Destination screen is displayed to continue the routing to the previous destination. Select **Route**.

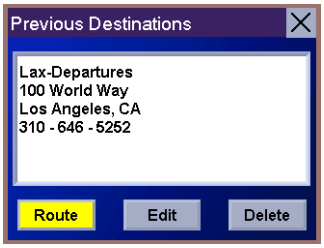

Select the desired Route Method.

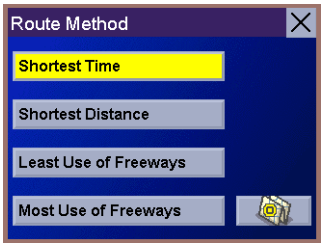

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

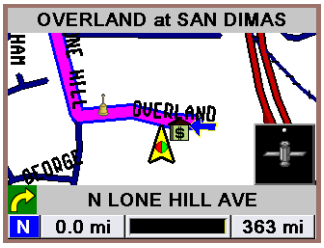

Deleting A Previous Destination

From the Select Destination screen, select **Address Book**.

Select **Previous Destinations**.

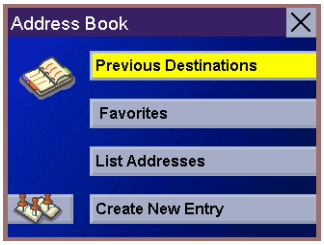

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

Select **Delete**.

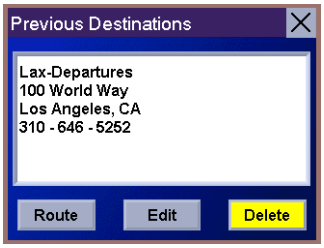

A dialog box will appear to confirm your selection. Select **Yes**.

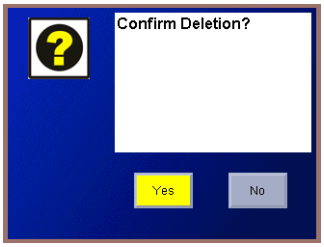

The Previous Destination is deleted from the list.

Favorites

From the Select Destination screen, select **Address Book**.

Select **Favorites**.

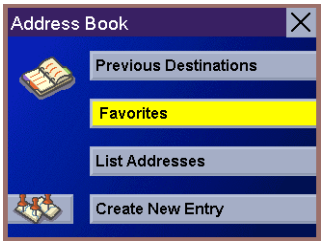

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the destination from the list of addresses.

Select **Route**.

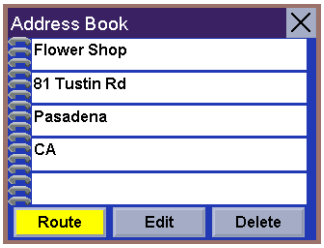

Select the desired Route Method.

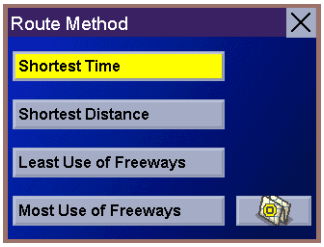

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

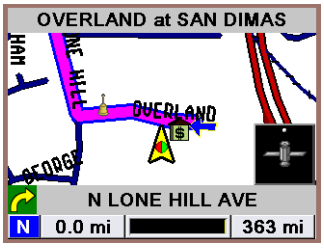

Editing a Favorite

From the Select Destination screen, select **Address Book**.

Select **Favorites**.

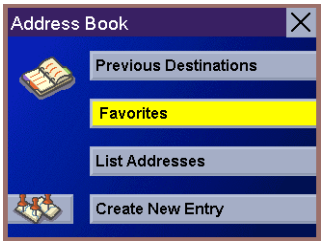

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

Select **Edit**.

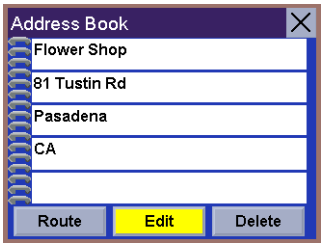

The top line (Name) and the bottom line (Information) can be edited. The address cannot be changed. Select the line you want to modify. Use the keypad to enter the desired text and select **OK**.

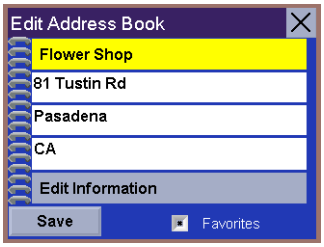

When you have finished making changes, select **Save**.

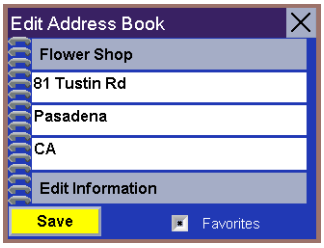

The address is saved to the Address Book. The Previous Destination screen is displayed to continue the routing to the previous destination. Select **Route**.

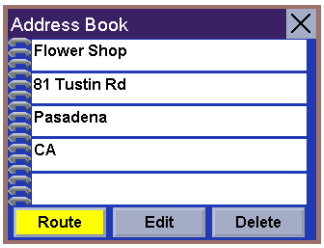

Select the desired Route Method.

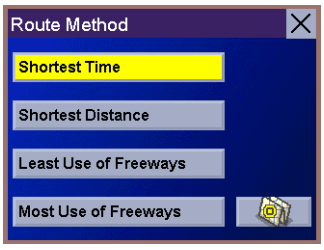

Selecting Destinations

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

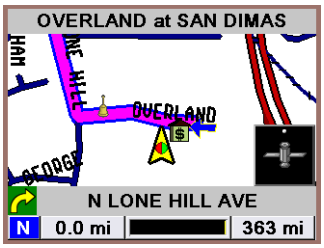

Deleting A Favorite

From the Select Destination screen, select **Address Book**.

Select **Favorites**.

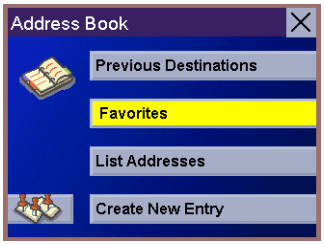

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

Select **Delete**.

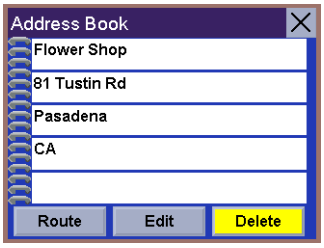

A dialog box will appear to confirm your selection. Select **Yes**.

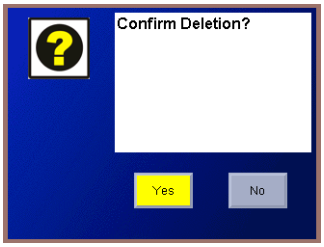

The Previous Destination is deleted from the list.

List Addresses

From the Select Destination screen, select **Address Book**.

Select **List Addresses**.

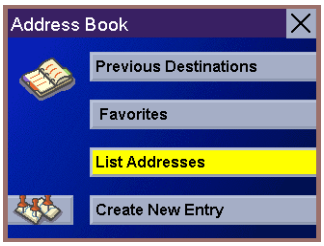

Use the Navigation key to scroll the list up or down (if necessary) and select the destination from the list of addresses.

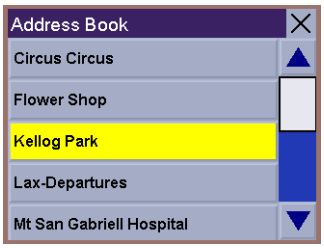

Select **Route**.

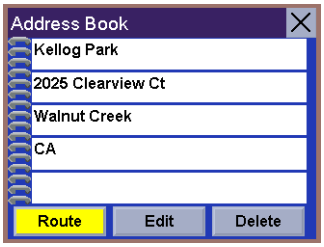

Select the desired Route Method.

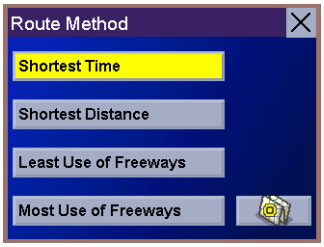

Selecting Destinations

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

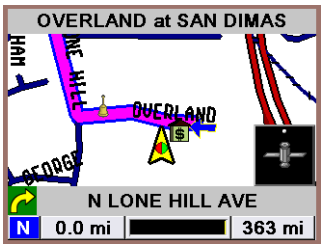

Editing an Address

From the Select Destination screen, select **Address Book**.

Select **List Addresses**.

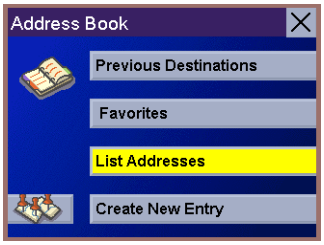

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

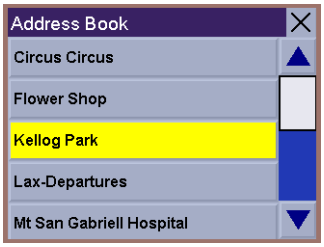

Select **Edit**.

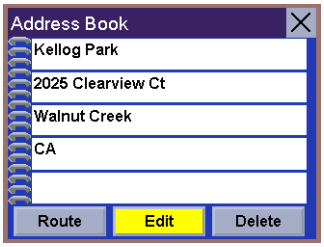

The top line (Name) and the bottom line (Information) can be edited. The address cannot be changed. Select the line you want to modify. Use the keypad to enter the desired text and select **OK**.

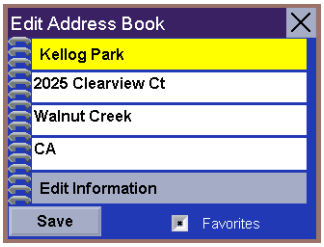

Selecting Destinations

When you have finished making changes, select **Save**.

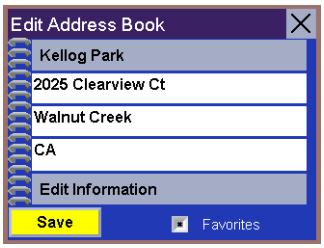

The address is saved to the Address Book. The Address screen is displayed to continue editing or you can route to the selected address. Select **Route**.

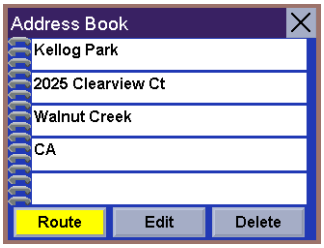

Select the desired Route Method.

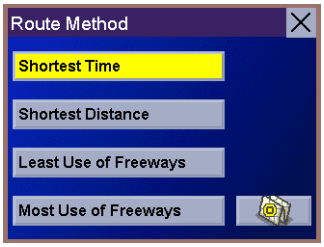

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

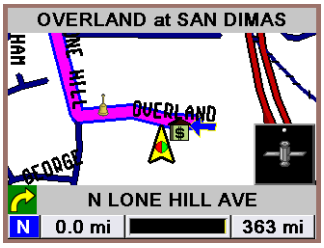

Deleting an Address

From the Select Destination screen, select **Address Book**.

Select **List Addresses**.

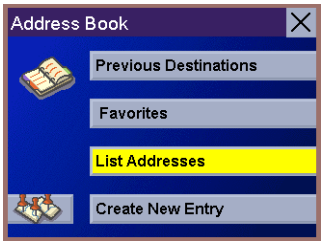

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the desired previous destination.

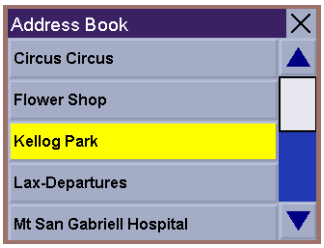

Select **Delete**.

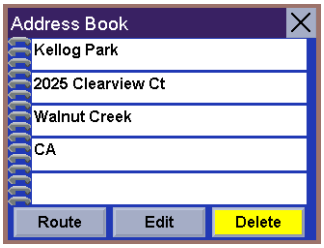

A dialog box will appear to confirm your selection. Select **Yes**.

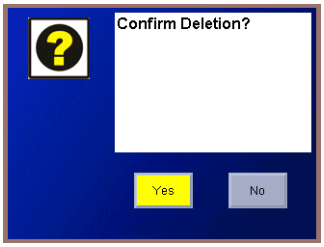

The Previous Destination is deleted from the list and you are returned to the Address Book screen.

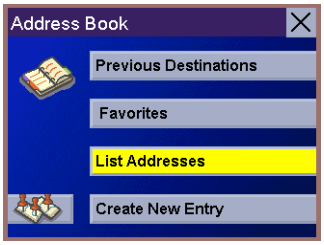

Create New Entry – Search by City

From the Select Destination screen, select **Address Book**.

Select **Create New Entry**.

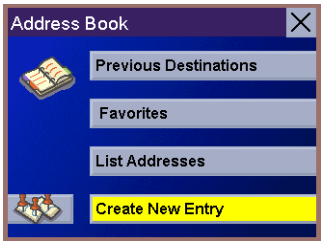

Selecting Destinations

Select **Search by City**.

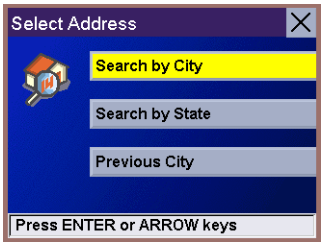

Enter the first few characters in the city name and select **OK**.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

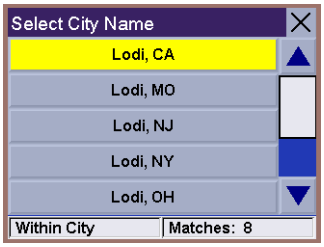

Enter the first few characters for the street name and select **OK**.

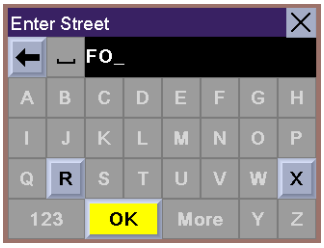

Use the Navigation key to scroll the list up or down (if necessary) and select the desired street.

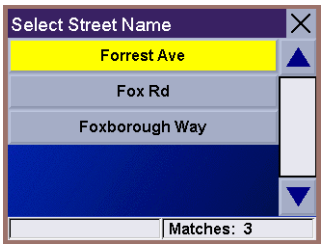

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. Select **Done**.

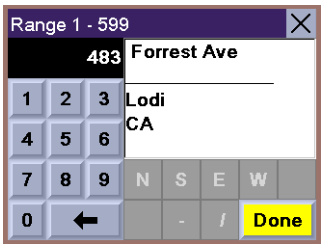

Selecting Destinations

The top line (Name) and the bottom line (Information) can be edited. The address cannot be changed. Select the line you want to modify.

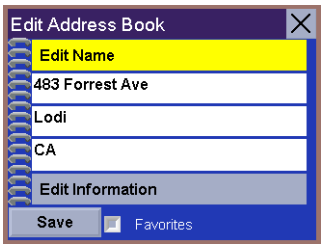

Use the keypad to enter the desired text and select **OK**.

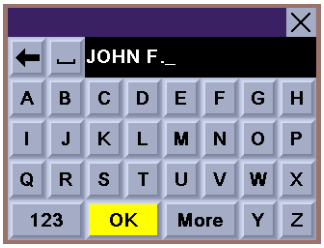

When you have finished making changes, select **Save**.

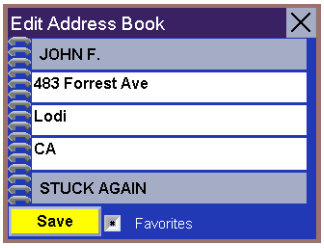

You are taken back to the Address Book screen.

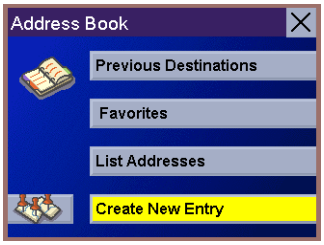

Create New Entry – Search by State

From the Select Destination screen, select **Address Book**.

Select **Create New Entry**.

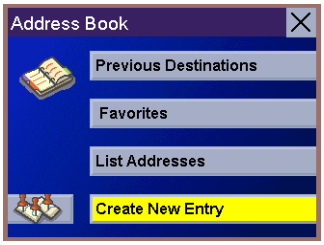

Selecting Destinations

Select **Search by State**.

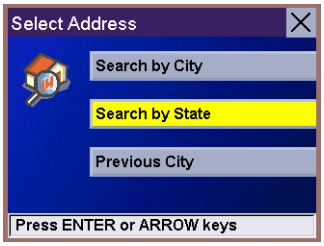

Use the keypad to enter the first few characters for the state and select **OK**.

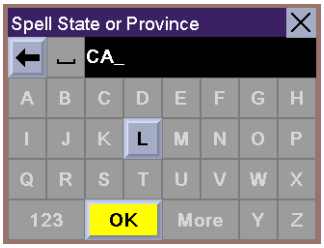

Select the state.

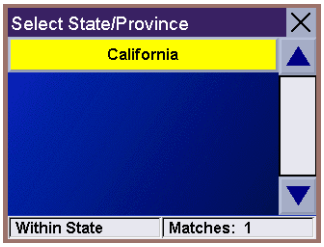

Enter the first few characters for the street name and select **OK**.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired street.

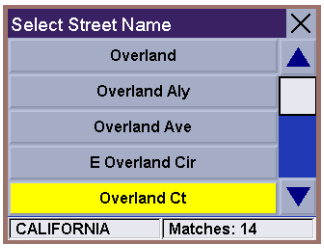

Use the Navigation key to scroll the list up or down and select the desired city. (These are all of the cities in your loaded database that have the street name you selected.)

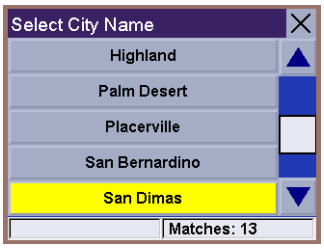

Selecting Destinations

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. Select **Done**.

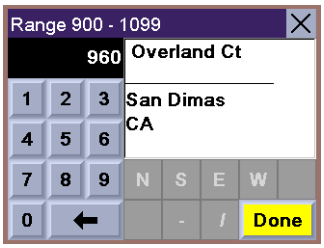

The top line (Name) and the bottom line (Information) can be edited. The address cannot be changed. Select the line you want to modify.

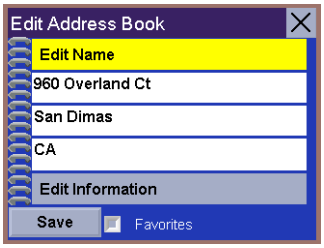

Use the keypad to enter the desired text and select **OK**.

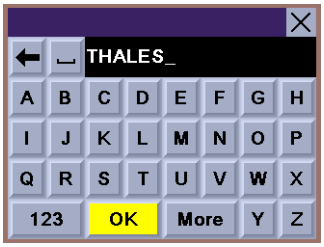

When you have finished making changes, select **Save**.

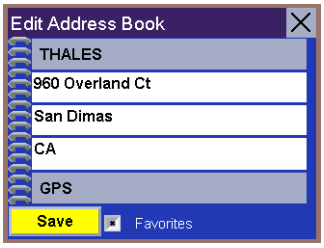

You are taken back to the Address Book screen.

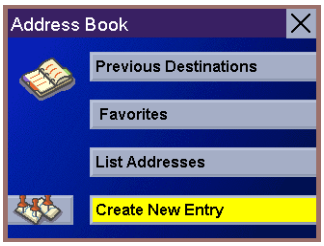

Create New Entry – Previous City

From the Select Destination screen, select **Address Book**.

Selecting Destinations

Select **Create New Entry**.

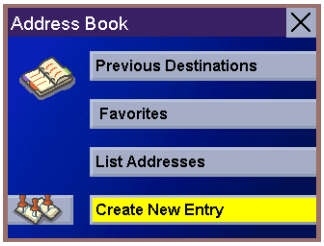

Select **Previous City**.

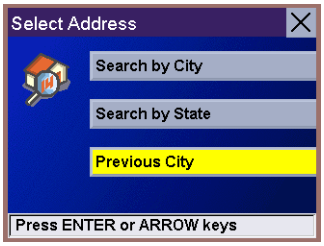

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

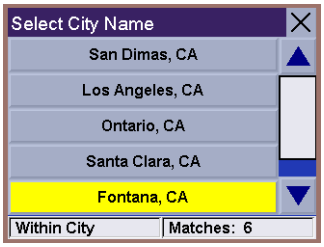

Enter the first few characters for the street name and select **OK**.

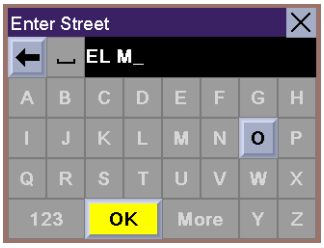

Use the Navigation key to scroll the list up or down (if necessary) and select the desired street.

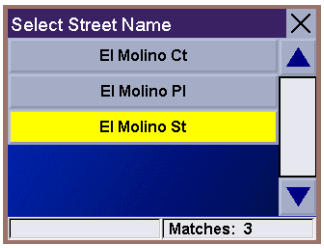

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. Select **Done**.

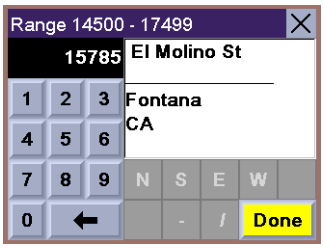

Selecting Destinations

The top line (Name) and the bottom line (Information) can be edited. The address cannot be changed. Select the line you want to modify.

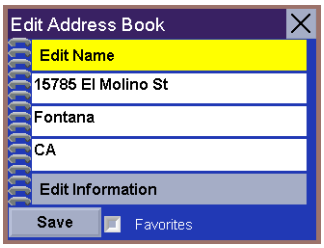

Enter the desired text and select **OK**.

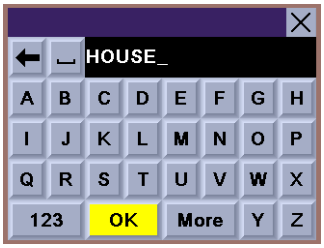

When you have finished making changes, select **Save**.

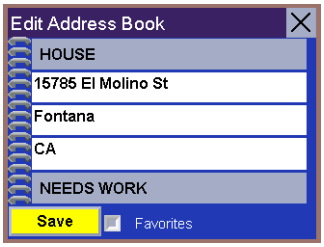

You are taken back to the Address Book screen.

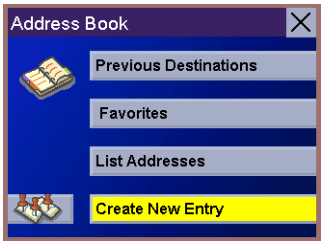

Trip Planner – New

From the Select Destination screen, select **Address Book**.

Select **Trip** (Trip button).

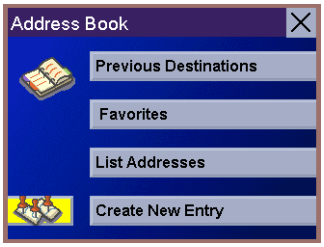

Selecting Destinations

Select **New**.

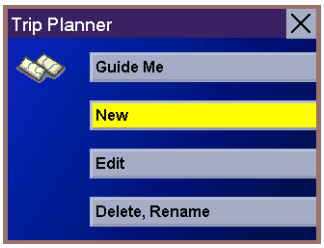

Use the keypad to enter a name for the new trip and select **OK**.

From the pop-up menu, select **Add**.

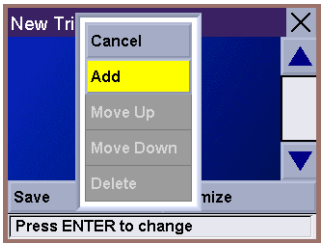

From the Select Trip Planner Address screen, select the method for adding a destination to your trip: **Map** (Map button) will add a destination by selecting a point on the map; **Select Address** will add a destination from a new address; **Address Book** will add a destination from a previous destination, Address Book, or favorites; **Dining, ATM, Gas...** will add a destination from the POI database; and **Intersection** will add a destination of two intersecting streets.

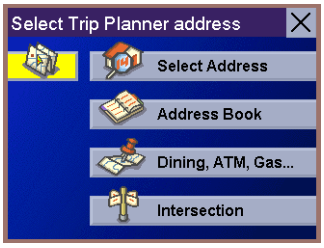

Continue adding destinations. When you are finished, select **Save**.

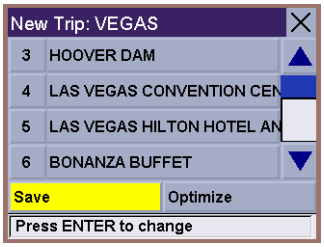

Trip Planner – Optimizing a Trip

With Route Optimization, you can sort the destinations in your trip from closest to farthest.

From the Trip Planner screen, select **Edit**.

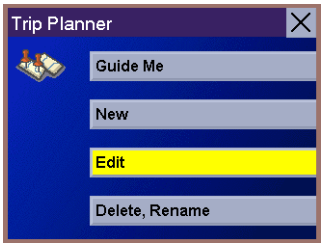

Selecting Destinations

Select the trip to optimize.

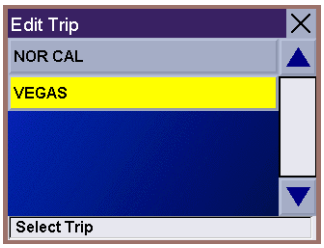

Select **Optimize**.

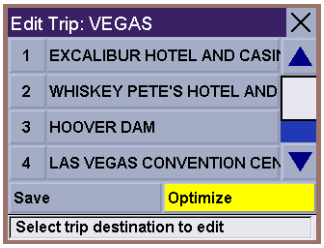

The destinations are sorted from closest to farthest from you current location.

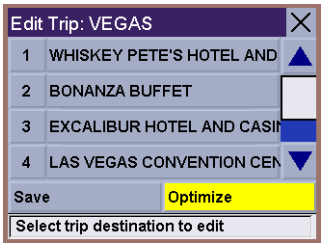

Select **Save**.

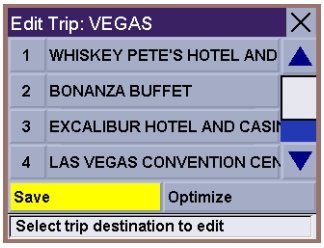

Trip Planner – Guide Me

From the Select Destination screen, select **Address Book**.

Select **Trip** (Trip button).

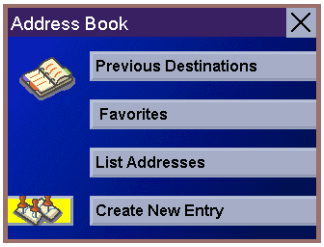

Selecting Destinations

Select **GuideMe**.

Select the Trip.

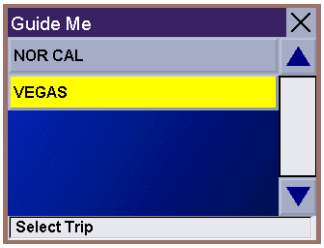

Select the first destination in the list you wish to route to.

Note: Selecting the second destination in the list will exclude the first destination, selecting the third destination in the list will exclude the first and second destinations, and so on.

Select destination
1 WHISKEY PETE'S HOTEL AND
2 BONANZA BUFFET
3 EXCALIBUR HOTEL AND CASI
4 LAS VEGAS CONVENTION CEN
5 LAS VEGAS HILTON HOTEL AN
Select trip destination to route

Select the desired Route Method.

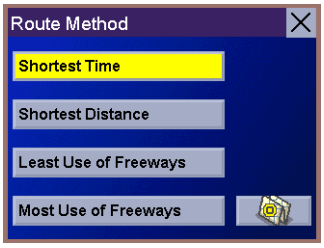

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

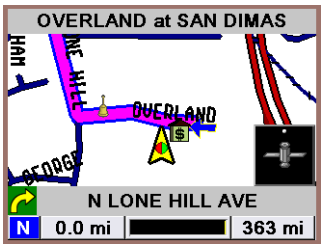

Trip Planner – Edit

Destinations within a trip can be moved up or down, deleted, or added to.

From the Trip Planner screen, select **Edit**.

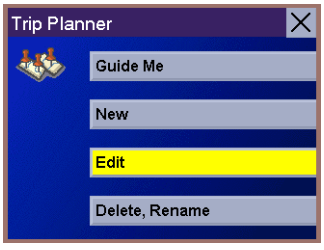

Selecting Destinations

Select the trip to edit.

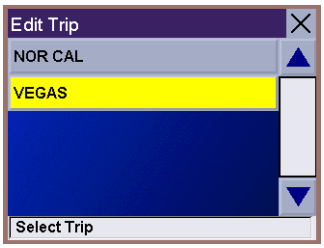

Select the destination you wish to delete, and select **Delete** from the pop-up menu.

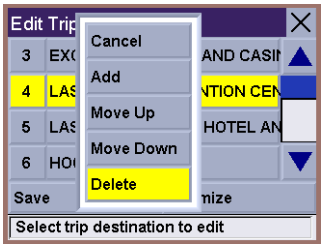

Select the destination you wish to change, and select **Move Up** from the pop-up menu.

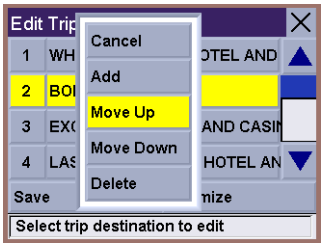

When you have finished, select **Save** and you are returned to the Trip Planner screen.

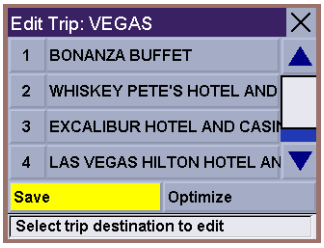

Trip Planner – Delete and Rename

From the Trip Planner screen, select **Delete, Rename**.

Select **Delete**.

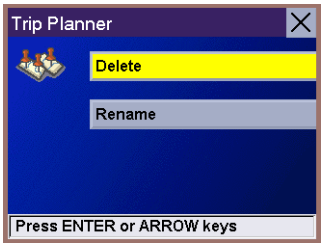

Selecting Destinations

Select the trip you wish to delete.

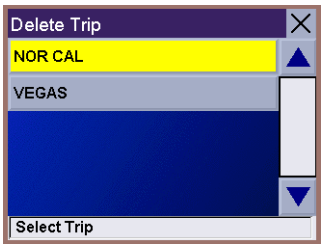

A dialog box will appear to confirm your selection. Select **Yes**.

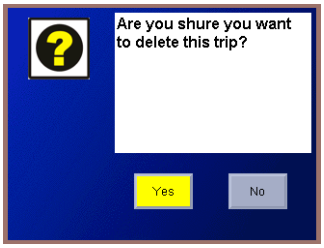

The trip has been deleted.

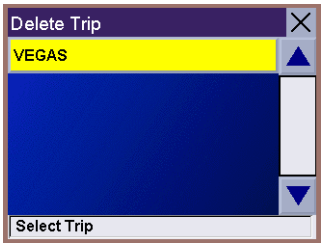

Select **Rename**.

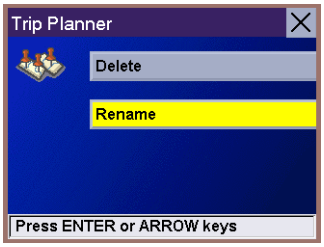

Select the trip to renamed.

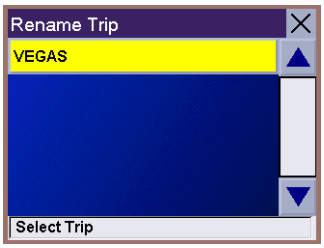

Use the backspace key to delete the old name; then, enter the new name for the trip. When you have finished, select **OK**.

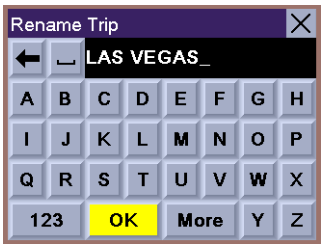

The trip has been renamed.

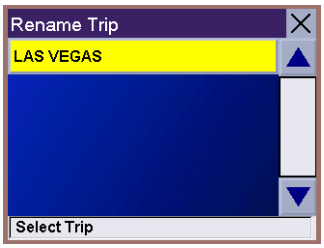

Selecting Destinations

Selecting a Point of Interest as a Destination

Points of Interest (or POIs) are commercial or recreational locations, landmarks, or services that are preloaded into the Magellan RoadMate database. There are over 6,500,000 POI's in the database, which range from restaurants, parks, gas stations, and banks, to schools and police stations, and more. The purpose of the POI database (accessed through the Dining, ATM, Gas... menu option) is to provide you with a list of popular destinations without having to add them to your Address Book manually.

Spell Name

From the Select Destination screen, select **Dining, ATM, Gas...**

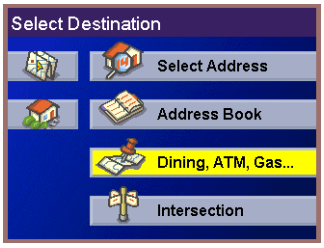

Select **Spell Name**.

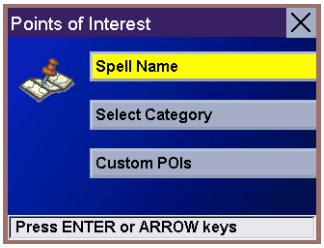

Enter the name of the POI.

Selecting Nearest will list the POIs matching the name you entered from closest to farthest. Select **Nearest**.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired POI. This list can be very long because the first 100 POIs beginning with the text entered are displayed.

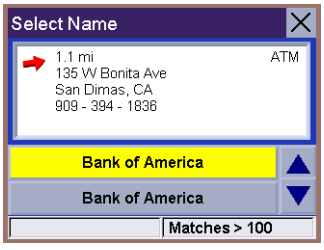

Selecting Destinations

Select the desired Route Method.

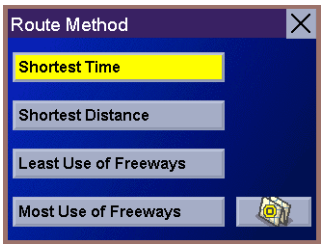

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

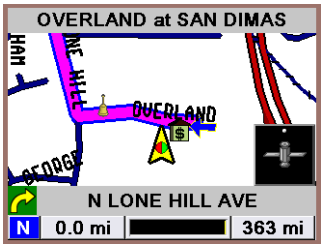

Selecting List by City will list the POIs matching the name you entered within a selected city. Select **List by City**.

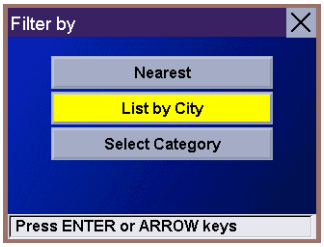

Enter the name of the city you wish to search.

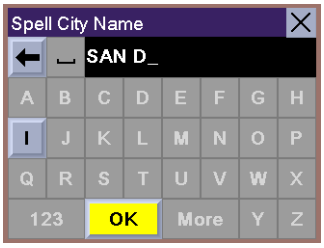

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

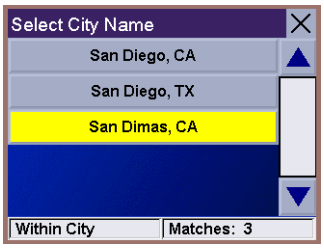

Use the Navigation key to scroll the list up or down (if necessary) and select the desired POI. This list can be very long because the first 100 POIs beginning with the text entered are displayed.

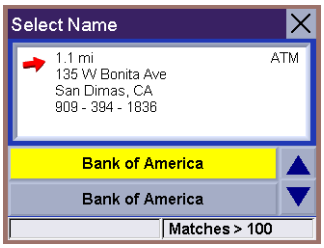

Selecting Destinations

Select the desired Route Method.

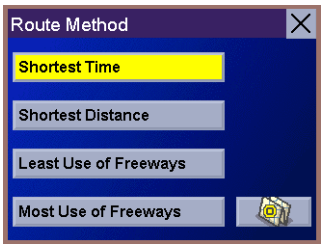

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

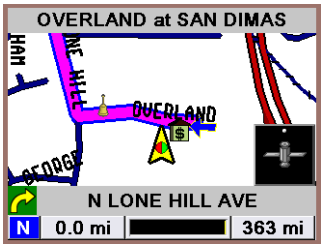

Selecting Select Category enables you to list all of the POIs in the selected category. Select **Select Category**.

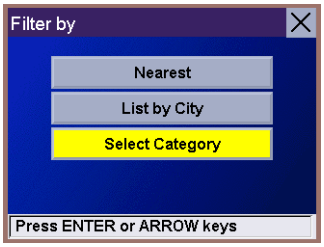

Use the Navigation key to scroll the list up or down and select the desired POI category.

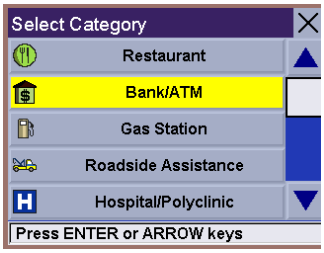

Use the Navigation key to scroll the list up or down (if necessary) and select the desired POI. This list can be very long because the first 100 POIs beginning with the text entered are displayed.

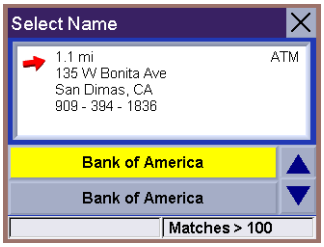

Select the desired Route Method.

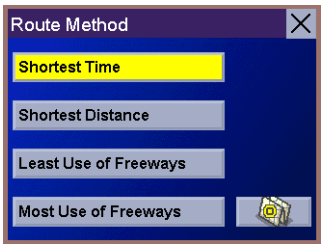

Selecting Destinations

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

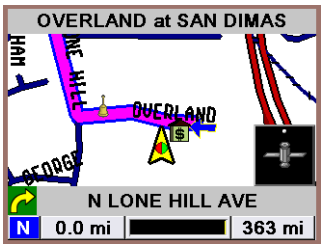

Select Category

From the Select Destination screen, select **Dining, ATM, Gas...**

Select **Select Category**.

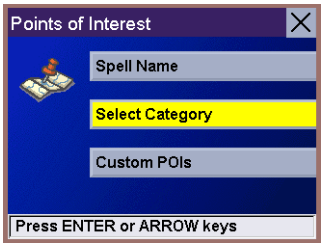

Select the POI category.

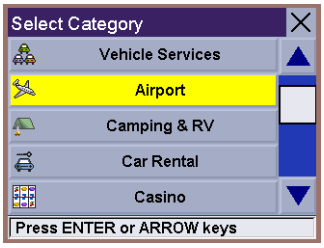

Selecting Nearest will list the POIs matching the name you entered from closest to farthest. Select **Nearest**.

A list of all the POI's in the selected categories nearest to your current position is displayed. Select the POI from the list.

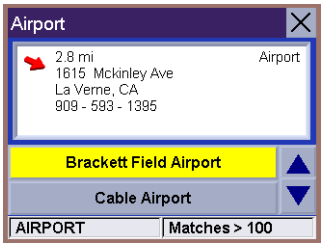

Selecting Destinations

Select the desired Route Method.

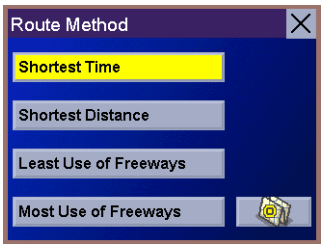

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

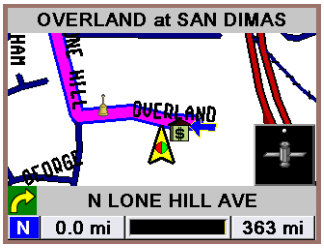

Selecting List by City will list the POIs matching the name you entered within a selected city. Select **List by City**.

Enter the name of the city you wish to search from. When you are finished, select **OK**.

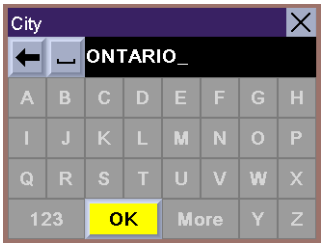

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

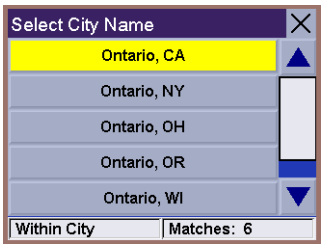

Use the Navigation key to scroll the list up or down (if necessary) and select the desired POI.

Selecting Destinations

Select the desired Route Method.

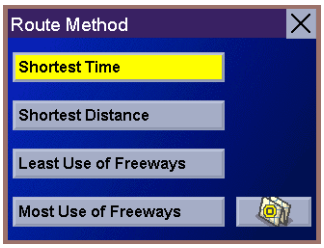

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

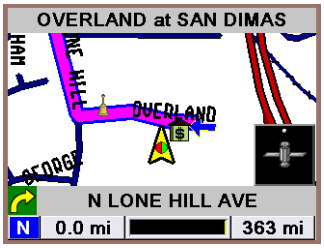

Selecting Spell Name will list the POIs matching the name you entered. Select **Spell Name**.

Enter the name of the POI. When you are finished, select **OK**.

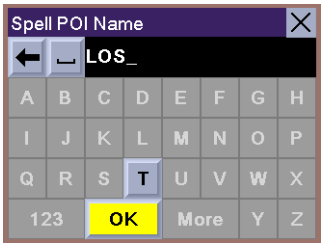

Use the Navigation key to scroll the list up or down (if necessary) and select the desired POI.

Select the desired Route Method.

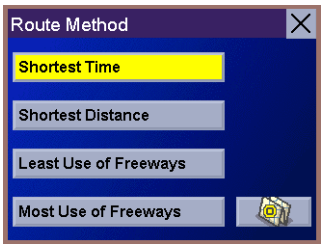

Selecting Destinations

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

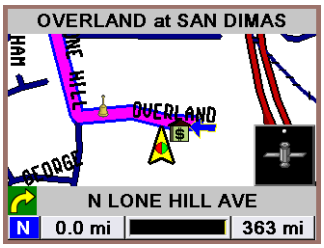

Custom POIs

Please refer to page 14 for information on creating and loading Custom POIs.

From the Select Destination screen, select **Dining, ATM, Gas...**

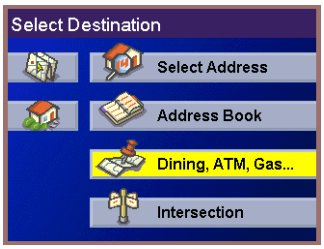

Select **Custom POIs**.

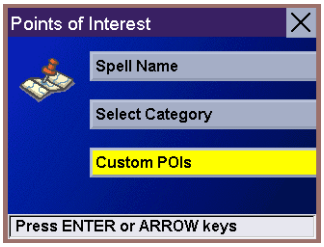

Select the category.

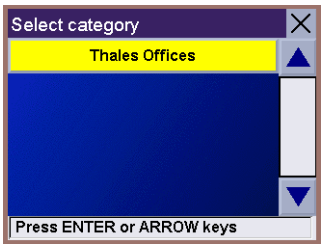

If the POI list has more than 15 returns, you can further narrow the search by selecting either Nearest or Spell Name. Select the desired POI from the list.

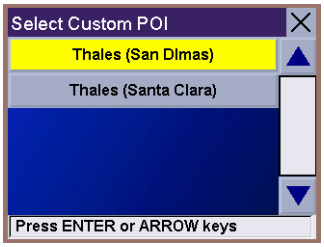

Select **Route** to go to the selected Address, or select **Cancel** to return to the Select Custom POI menu.

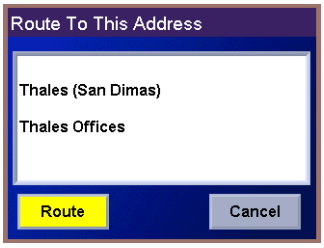

Selecting Destinations

Select the desired Route Method.

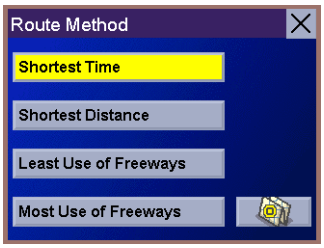

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

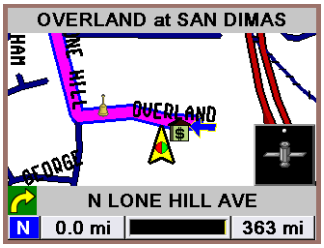

Selecting Destinations

Selecting an Intersection as a Destination

An intersection of two streets can be used as a destination for your trip. The search for the intersection can be done whether or not you know the city. If you know the city, you can start there; if you are unsure of the city, you can start with the state.

Search by City

From the Select Destination screen, select **Intersection**.

Select **Search by City**.

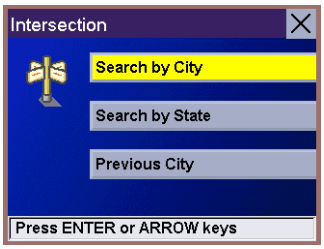

Enter the first few characters for the city and select **OK**.

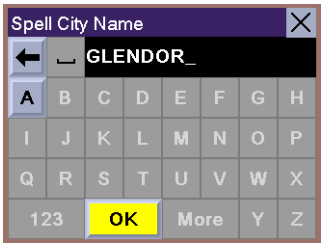

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

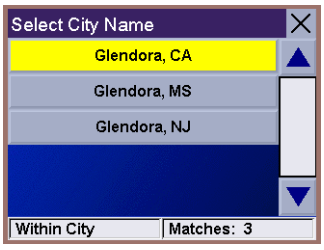

Enter the first few characters for the first street and select **OK**.

Selecting Destinations

Use the Navigation key to scroll the list up or down and select the first street from the list.

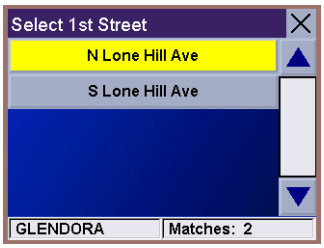

Enter the first few characters for the second street and select **OK**.

Use the Navigation key to scroll the list up or down (if necessary) and select the second street from the list.

Select the desired Route Method.

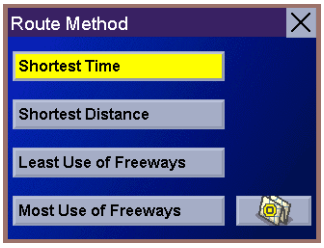

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

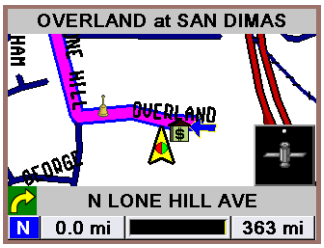

Search by State

From the Select Destination screen, select **Intersection**.

Selecting Destinations

Select **Search by State**.

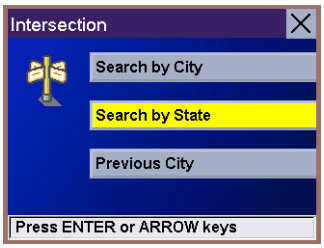

Enter the first few characters for the state and select **OK**.

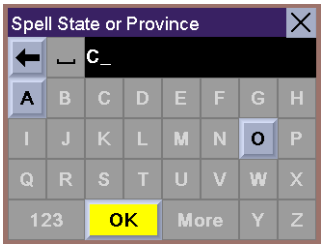

Use the Navigation key to scroll the list up or down (if necessary) and select the state from the list.

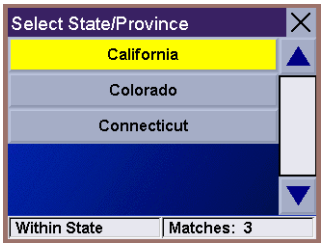

Enter the first few characters for the first street and select **OK**.

Use the Navigation key to scroll the list up or down (if necessary) and select the first street from the list.

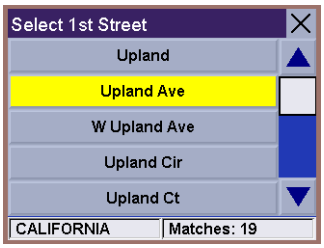

Enter the first few characters for the second street and select **OK**.

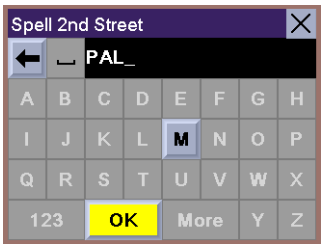

Selecting Destinations

Use the Navigation key to scroll the list up or down (if necessary) and select the second street from the list.

Select the desired Route Method.

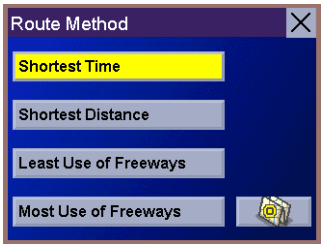

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

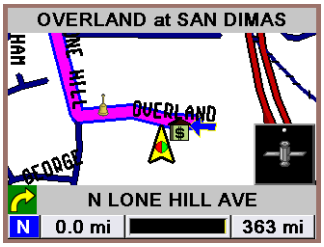

Previous City

From the Select Destination screen, select **Intersection**.

Select **Previous City**.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

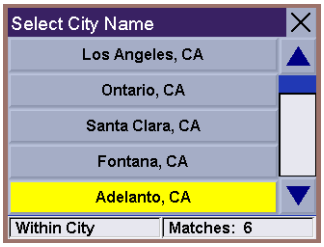

Selecting Destinations

Enter the first few characters for the first street and select **OK**.

Use the Navigation key to scroll the list up or down (if necessary) and select the first street from the list.

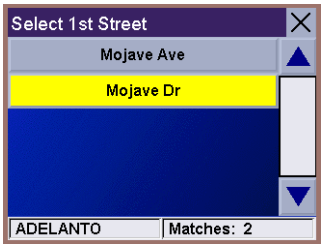

Enter the first few characters for the second street and select **OK**.

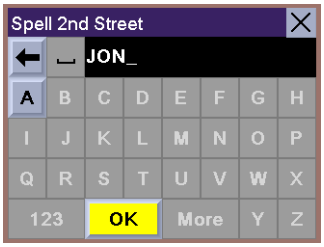

Use the Navigation key to scroll the list up or down (if necessary) and select the second street from the list.

Select the desired Route Method.

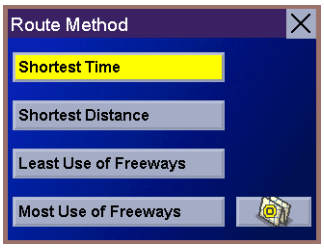

The Magellan RoadMate will calculate the route. When the calculations are complete, the Map screen will be displayed.

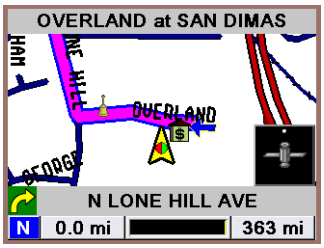

Options

The Options menu of the Magellan RoadMate enables you with enhanced features to customize your Magellan RoadMate. Additionally, it provides features to assist you in learning how to operate the most common functions and in contacting a Support Representative should you need more detailed assistance.

The Trip Computer displays useful information about your trip that can be saved for future reference. This is ideal for the business traveller who needs to record mileage and time spent on the road. See “Trip Computer” on page 77.

Configuration provides access to customize the look and operation of the Magellan RoadMate. It also contains diagnostic features to keep your Magellan RoadMate performing at its best. See “Configuration” on page 80.

Tutorial provides instructions and verbal narration on how to use the most common features of the Magellan RoadMate. See “Tutorial” on page 105.

Help provided you with Customer Support phone numbers. See “Help” on page 106.

These functions are accessed by pressing the **Option** button on the Magellan RoadMate.

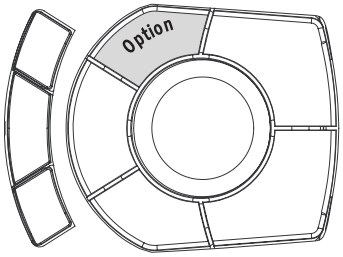

Options

Trip Computer

The Trip Computer is a valuable tool for recording the mileage and time spent driving while on business or vacation. The information for the trip can be saved and viewed at any time, providing you easy access to information on your current trip, as well as previous trips.

Current Trip

When you begin a new trip and you need to record the information, access the Trip Computer. There you can save the information displayed for the current trip (if needed) and reset the Trip Computer to zero in preparation for your new trip.

From any screen press the **Option** button. Select **Trip Computer**

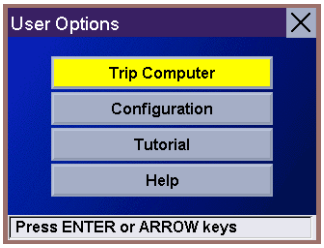

Select **Current** from the list of saved Trip Reports.

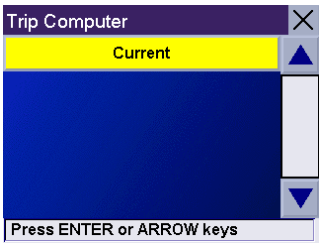

The Trip Computer is always in a “Running” state. The information for the current trip is displayed.

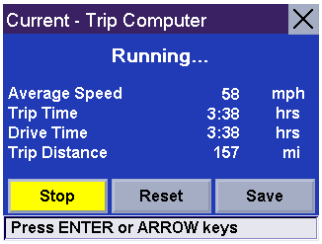

Stopping or Starting the Trip Computer

At any time the Trip Computer can be stopped and started. If the Trip Computer is currently running, select **Stop**. The Trip Computer will stop recording until restarted or reset.

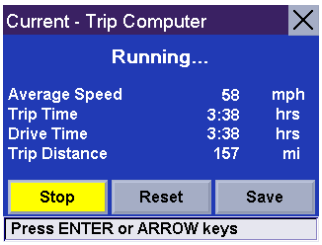

Options

While the Trip Computer is in a “Stopped” state, select **Start** to continue recording the current trip or select reset to begin a new trip.

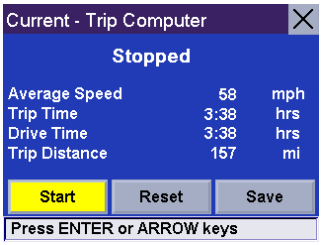

Saving the Current Trip Report

When you have finished with your trip, you can save the information for later viewing. Select **Save** at any time.

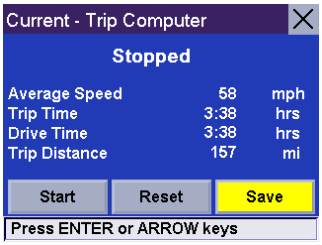

Use the keypad to enter a name for the Trip Report and select **OK** when you are finished.

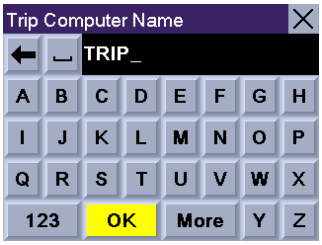

Resetting the Trip Computer

Before starting a new trip that you want to record, you need to reset the Trip Computer first. Select Reset and the information will be set to zero. The Trip Computer will remain in a “Running” state.

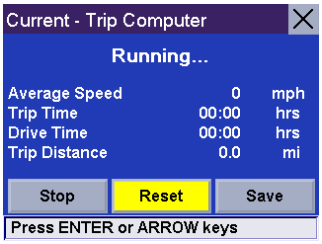

Viewing a Saved Trip Report

From the Trip Computer screen, select the Trip Report you wish to view.

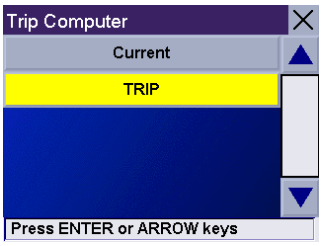

Options

The saved Trip Report is displayed. Press the **Cancel** button when you are finished to view the trip and return to the Trip Computer screen.

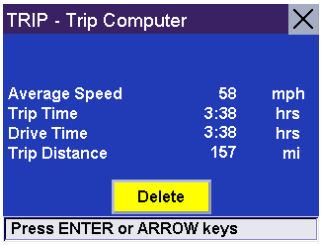

Deleting a Trip Report

Select the Trip Report to be deleted.

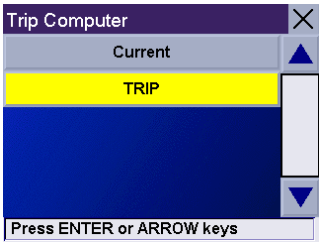

Select **Delete**.

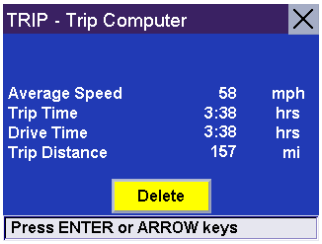

The trip is deleted and you are returned to the Trip Computer screen.

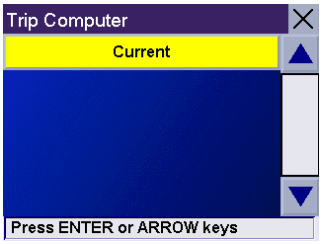

Options

Configuration

The configuration options can be set differently for each user.

From any screen, press the **Option** button and select **Configuration**.

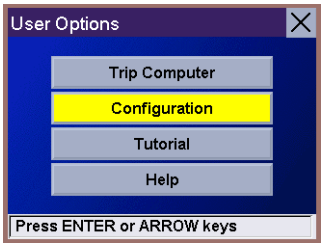

POI Selection

From the POI Selection menu, you can choose which icons to display on the Map screen. For a list of POI Categories, see “POI Categories” on page 112.

Select **POI Selection**.

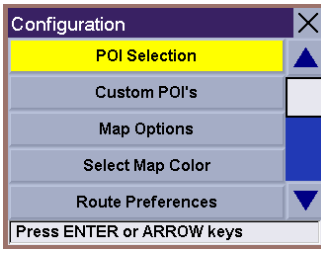

Select **Mark All** to display all POI icons on the Map screen.

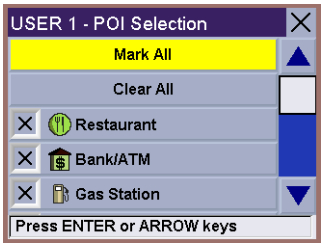

Select **Clear All** if you wish not to have any POI icons displayed on the Map screen.

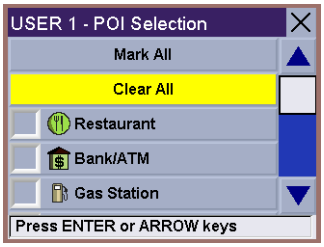

You can also select individual icons to display or hide on the Map screen. When you have finished, press the **Cancel** button to return to the Configuration menu.

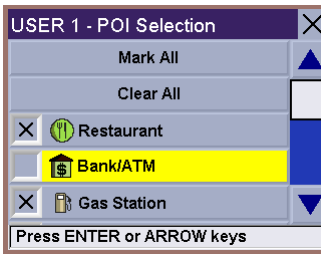

Options

Custom POIs

The Custom POI menu enables you to select POIs previously loaded into your Magellan RoadMate using the Magellan RoadMate POI Manager software. See “Application” on page 14. The instructions following instructions are assuming that you have loaded one or more POIs into your Magellan RoadMate.

Select **Custom POIs**.

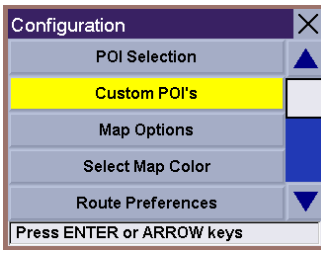

Select **Select a POI File**.

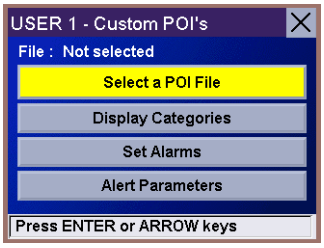

Use the Navigation key to scroll the list up or down (if necessary) and select a POI file. With the file selected, you are returned to the Custom POIs menu.

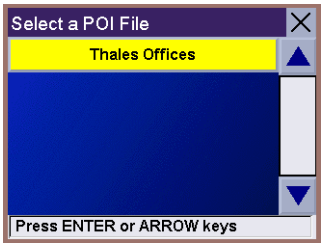

Select **Display Categories**.

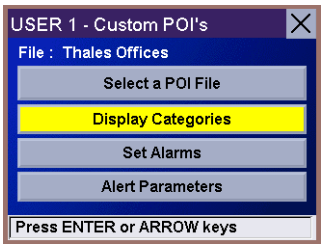

The categories you created are displayed in the same way as the built-in POIs.

Select **Mark All** to display all POI icons on the Map screen. Select **Clear All** if you wish not to have any POI icons displayed on the Map screen. You can also select individual icons to display or hide on the Map screen.

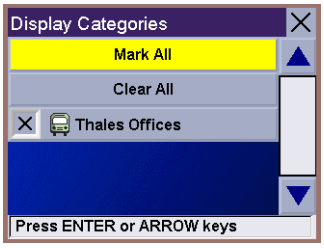

Options

When you have finished, press the **Cancel** button to return to the Custom POIs menu.

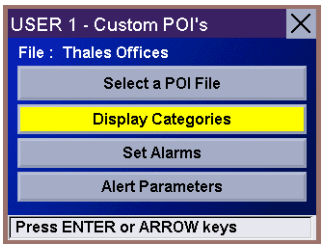

You can also be alerted when you approach a custom POI. The Set Alarm function works for Custom POIs only and only if the POI has been selected to show on the Map screen. Select **Set Alarms**.

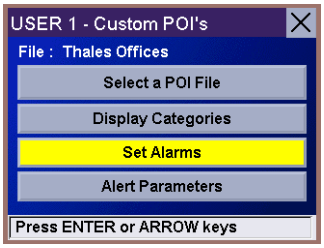

Again, you can select all, none, or individual POIs to have an alert set. Select **Mark All** to set an alert for all custom POI icons on the Map screen. Select **Clear All** if you wish not to have any alerts set for custom POI icons displayed on the Map screen. You can also select individual categories to have an alert set.

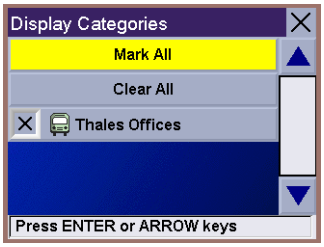

When you have finished, press the **Cancel** button to return to the Custom POIs menu.

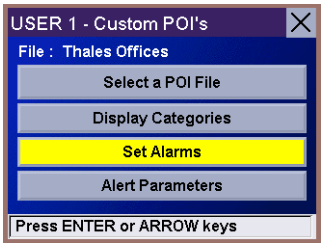

With the POI alerts set, you can now choose at what point you will be alerted. Select **Alert Parameters**.

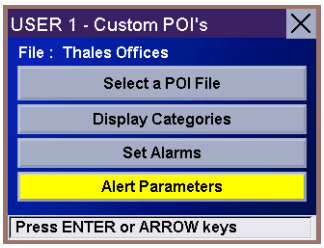

Select the POI category to customize.

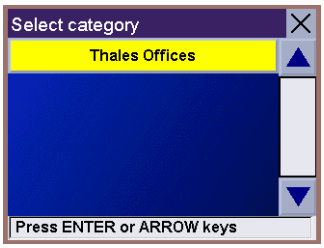

Options

The Detection Angle is set to alert you when you are within so many degrees of the POI.

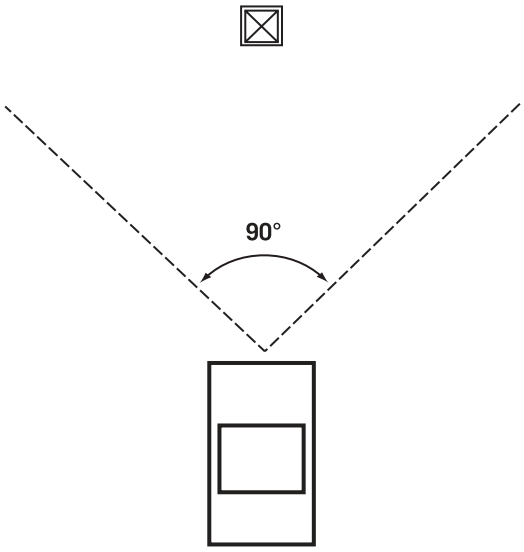

Select **Detection Angle**.

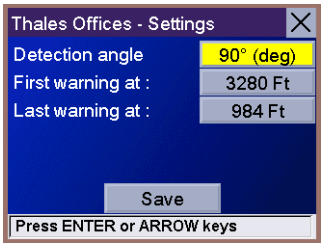

Use the numeric keypad to enter the number of degrees in which to set the alert. When you have finished, select **OK**.

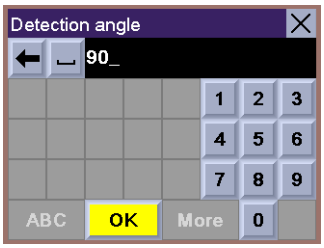

Options

The First Warning is set to alert you when you are within a certain number of feet from the POI.

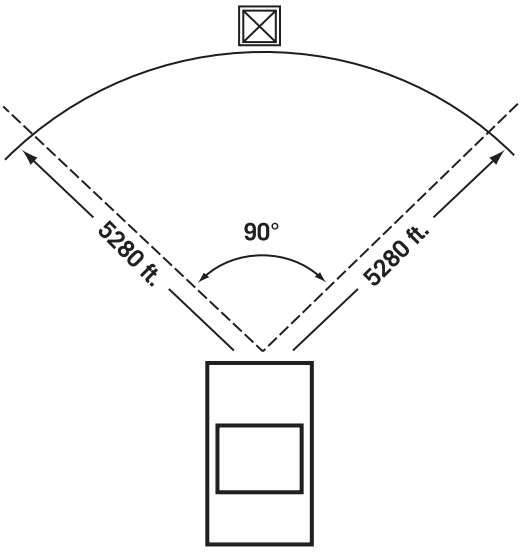

Select **First Warning**.

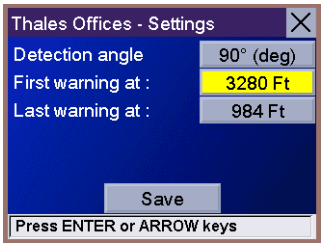

Use the numeric keypad to enter the number of feet in which to alert you. When you have finished, select **OK**.

Options

The Last Warning is set as a final alert when you are within a certain number of feet from the POI.

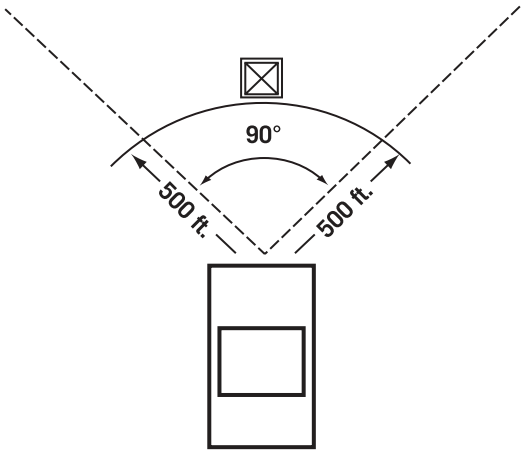

Select **Last Warning**.

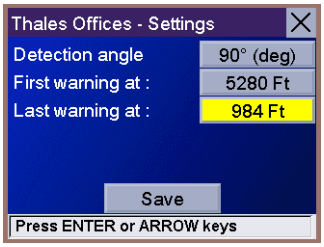

Use the numeric keypad to enter the number of feet in which to alert you. When you have finished, select **OK**.

When you have set the parameters as you like, select **Save**.

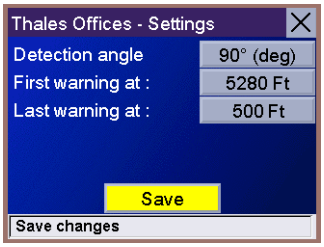

Options

Map Options

Map Options enable you to determine the behavior of the Map while you are driving.

Select **Map Options**.

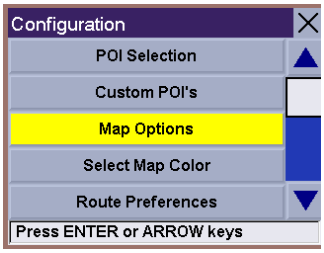

With **Map Smart** selected, the Map screen will automatically switch to the Maneuver List and/or the TrueView 3D screen when applicable. That is, when the satellite signal is lost for more than 30 seconds, the Maneuver List will be displayed so that you can still be guided to your destination. Also, when you are one-half mile from the next maneuver, the TrueView 3D screen is displayed. Then, at two-tenths of a mile before the maneuver, the Map screen is displayed.

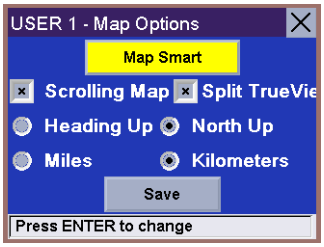

With **Map Always** selected, only the Map screen is displayed with the highlighted route.

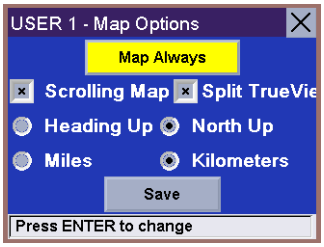

With **Map Manual** selected, the Maneuver List and TrueView 3D screen can be shown only by pressing the View button.

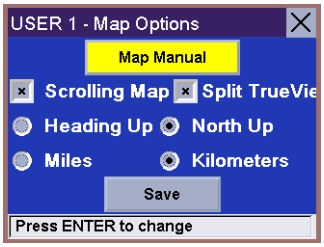

With **Scrolling** enabled, the vehicle position icon will always remain in the same position with the map scrolling, or moving as while the vehicle is in motion. With **Scrolling** disabled, the vehicle position icon will move forward slightly; then, the map will scroll down. Having Scrolling disabled allows for a faster display.

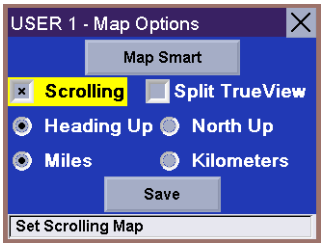

With **Split TrueView** enabled, when the TrueView 3D screen is displayed, it will show the next maneuver in TrueView 3D on the left side of the screen, and the map with the highlighted route on the right side of the screen.

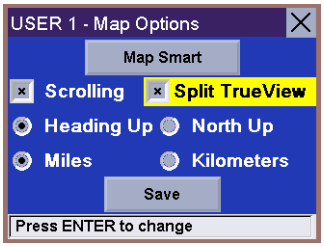

Options

Heading Up sets the map display so that the direction of travel is always at the top of the screen. **North Up** sets the map display so that North is always at the top of the screen.

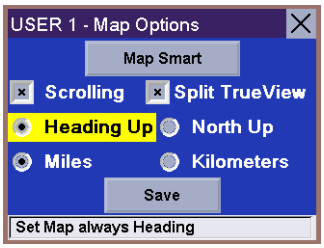

Select **Miles** or **Kilometers** as the unit of measure for distance.

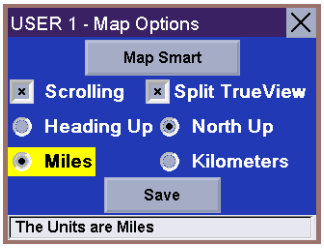

Select Map Color

Select **Select Map Color**.

With Automatic Night Mode enabled, the Magellan RoadMate will switch between a Day screen and a Night screen based on sunrise and sunset times for your current location.

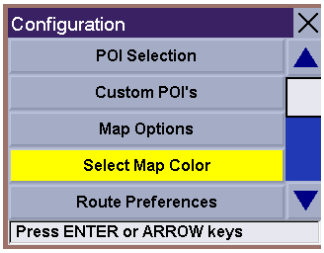

Select **Day Screen** to choose a color scheme for the map while you are driving during the day.

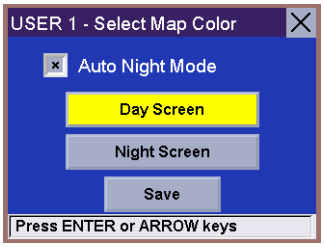

Select **Night Screen** to select a color scheme for driving at night.

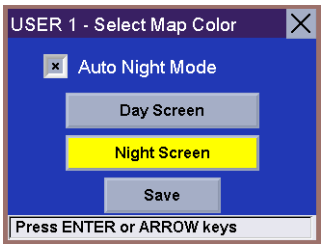

Options

Select from nine available color schemes:

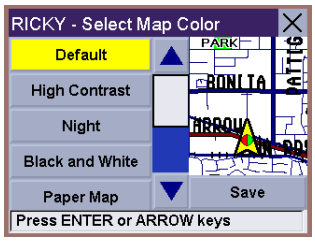

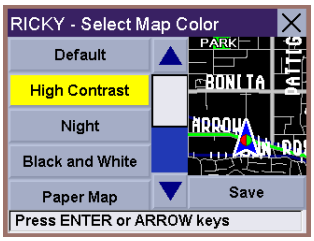

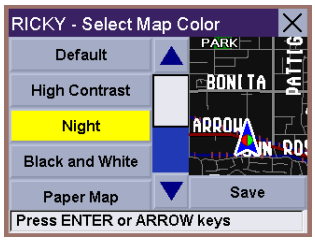

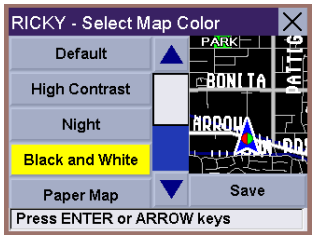

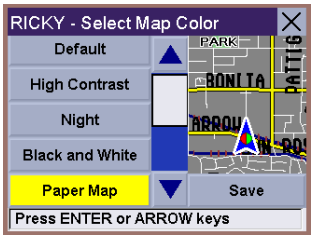

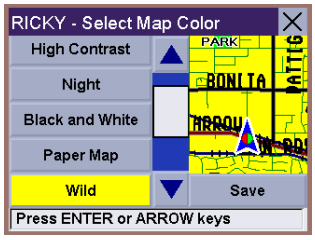

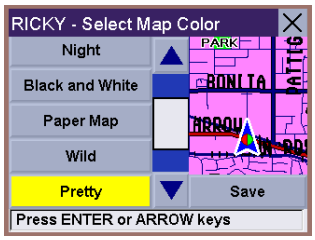

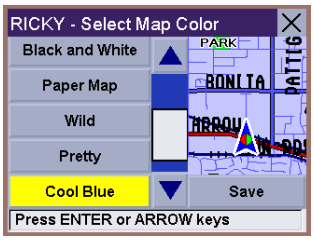

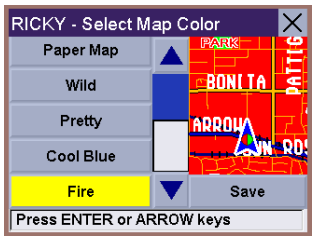

When you have finished, select **Save** and you will be returned to the Configuration menu.

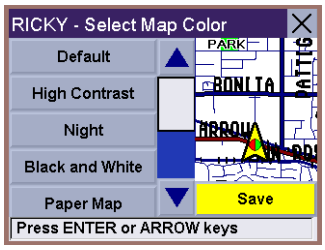

Route Preferences

Route Preferences enable you to set parameters for the Magellan RoadMate to follow when calculating a route. Select **Route Preferences**.

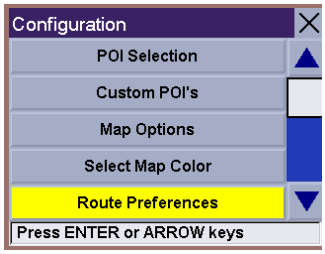

Avoid Toll Roads instructs Magellan RoadMate to avoid known toll roads when calculating a route.

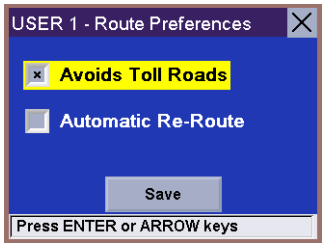

Options

Automatic Re-Route will cause the Magellan RoadMate to try up to three times to automatically re-route to the destination when it has detected that the vehicle has deterred from the calculated route.

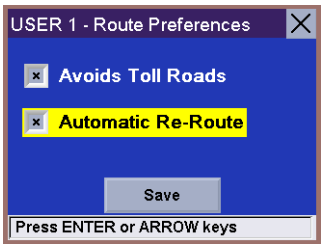

Detour Options

The Magellan RoadMate comes equipped with SmartDetour. If you are driving on the freeway with SmartDetour enabled and your speed drops below 15 MPH, you may press the detour icon on the Map screen in order for the Magellan RoadMate to calculate an alternate route around traffic.

Select **Detour Options**.

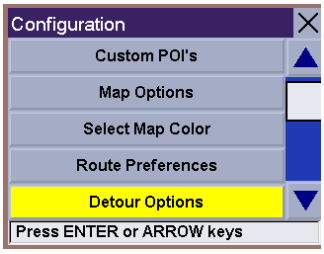

Select the distance of the detour. You can select from a preset distance of three miles, five miles, or 10 miles.

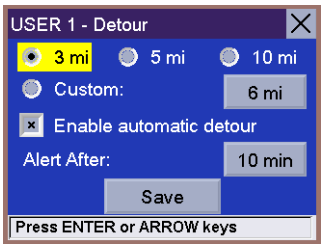

You can also select a custom distance. Select **Custom**, and then select the button to the right to enter a custom distance.

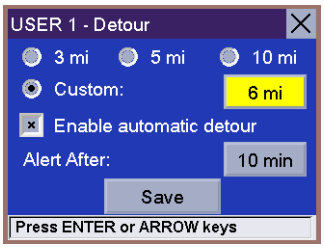

Enter the number of miles and select **OK**.

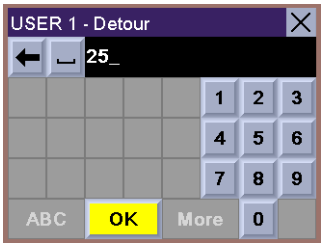

Options

Next, select the amount of time the Magellan RoadMate will wait before alerting you to recalculate the route. Select the **Time** button.

Enter the number of minutes and select **OK**.

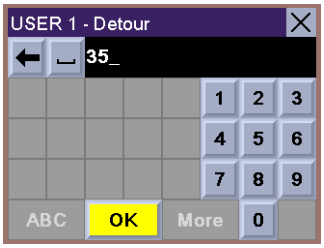

Select **Enable automatic detour**.

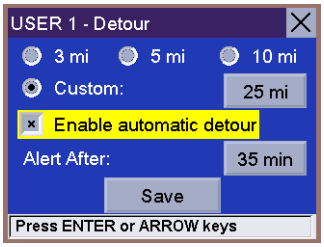

When you have finished, select **Save**.

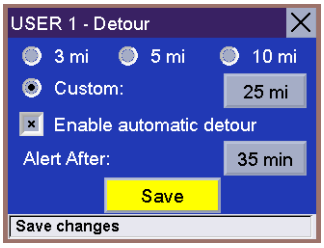

When you encounter traffic, and the set time has elapsed, the Detour icon will flash on the Map screen. Touch the icon on the screen to have the Magellan RoadMate calculate the detour. You can choose to ignore the Detour alert; and after one minute it will stop flashing until the set time has elapsed again when it will alert you once more.

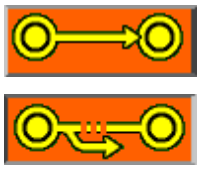

Options

Voice Options

From the voice options menu, you can select to have your voice prompts announced in either a male or a female voice in the language currently enabled (refer to “Language” on page 95). Additionally, you can also have the Magellan RoadMate speak the street name of the next maneuver.

Select **Voice Options**.

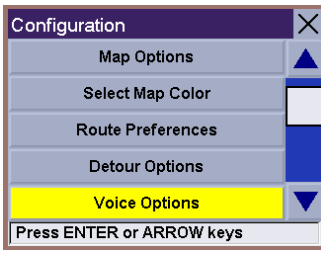

Choose **Male Voice** or **Female Voice**.

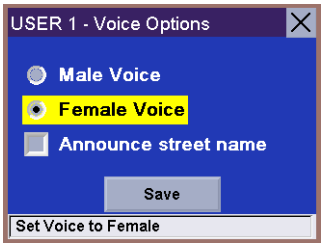

If you wish to have the street names spoken, enable **Announce street name**.

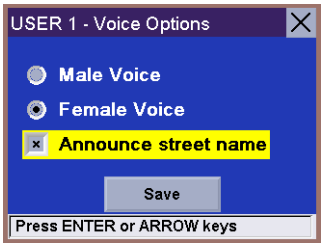

When you are finished, select **Save**.

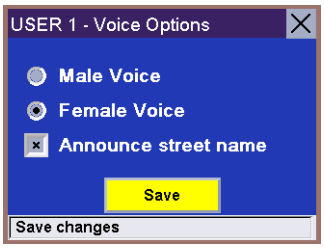

Options

Menu Colors

You can change the color of the menu screens by selecting one of four color schemes.

Select **Menu Colors**.

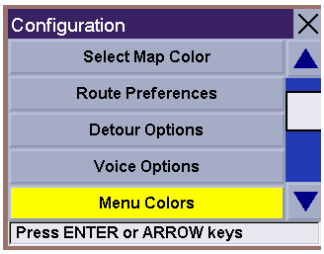

Select the desired color scheme.

When you have finished, select **Save**.

Contrast

Contrast determines the level of difference between light and dark colors.

Select **Contrast**.

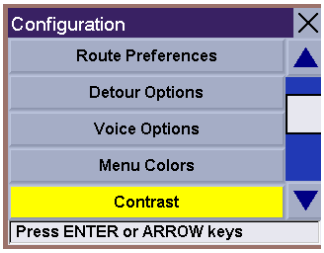

Select the left arrow to decrease the amount of contrast, or select the right arrow to increase the amount of contrast. When you are finished, select **Save**.

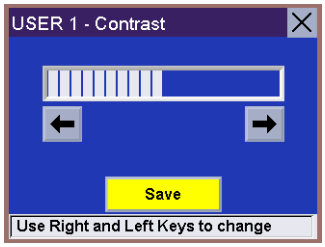

Options

Brightness

Brightness determines how bright or dim the level of the display will be.

Select **Brightness**.

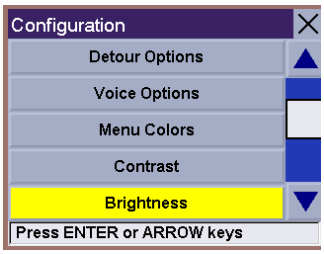

Select the left arrow to decrease the amount of brightness (make the display darker), or select the right arrow to increase the amount of brightness (make the display lighter). When you are finished, select **Save**.

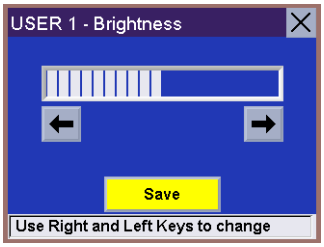

Display Options

The Magellan RoadMate can be configured to automatically adjust the display. When the light sensor detects changes in light levels, it can automatically adjust the contrast and brightness of the display for optimum performance. With the automatic settings enabled, your manual settings will remain the same; however, the display will change, depending on the ambient light levels. If you wish to maintain your manual settings, do not enable Automatic Contrast or Automatic Brightness. Additionally, you can set the Magellan RoadMate to shut off automatically if no movement is detected for 20 minutes.

Select **Display Options**.

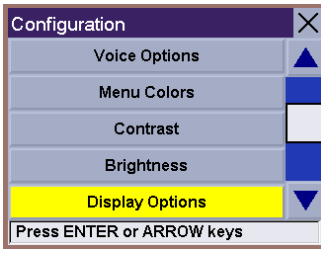

Select **Automatic Brightness**.

Select **Automatic Contrast**.

Options

Select **Auto Power Off**.

When you are finished, select **Save**.

Tone Options

As you approach a maneuver, an audible alert sounds to let you know to make the maneuver.

Select **Tone Options**.

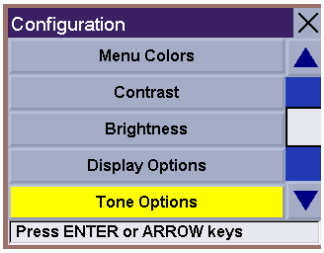

Select either **Bell**, **Chime**, or **Beep**.

When you have finished, select **Save**.

Options

Language

You can select to have the menus displayed in one of 12 languages. Also, audible voice prompts will be spoken in the selected language. Select from US English, UK English, French (Français), German (Deutsch), Dutch (Nederlands), Italian (Italiano), Spanish (Español), Danish (Dansk), Norwegian (Norsk), Finnish (Suomi), Swedish (Svenska), and Portuguese (Português).

Select **Language**.

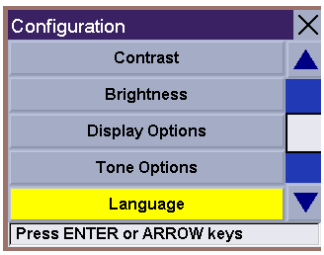

Use the Navigation key to scroll the list up or down and select the desired language.

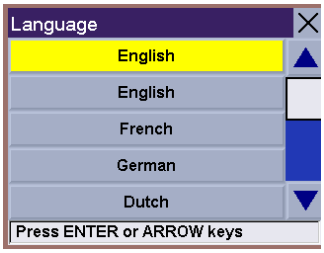

Diagnostics

The Magellan RoadMate comes with built-in system tests and other features to aid in the performance of the unit. If you feel that your unit is not functioning properly, contact our Technical Support Representative before engaging any of the options in the Diagnostics menu.

Select **Diagnostics**.

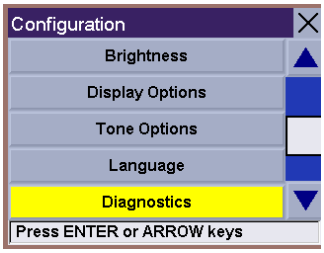

Product Information

Product Information displays information about the hardware and software installed in your Magellan RoadMate. This information aids our Technical Support Representative in finding a solution to whatever problem you may have.

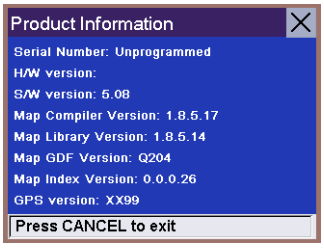

Video Test

Video Test displays random colors to ensure that your display is working properly.

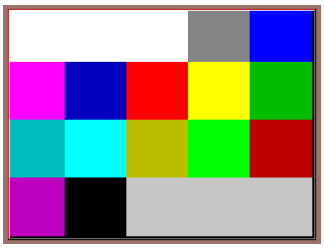

Options

Touch Screen Test

Touch Screen Test checks that the touch screen is calibrated and accurate.

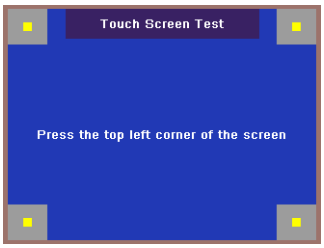

Keypad Test

Keypad Test verifies proper operation of the keypad.

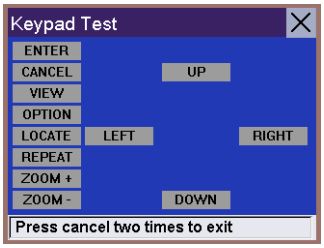

Audio Test checks that the speaker is working correctly.

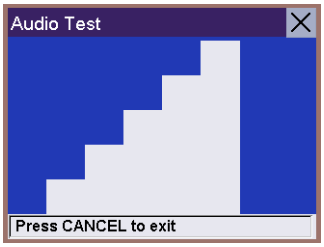

GPS Status monitors the satellite signal. For more information on the GPS Status screens refer to “GPS Status Screen” on page 109.

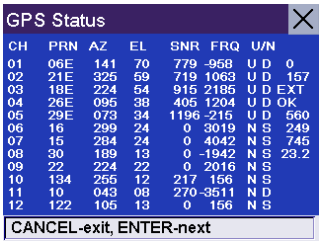

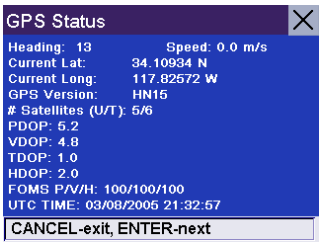

Initialize GPS resets the unit and reacquires the satellite signal. Note: Previously saved satellite data will be reset, and reacquiring the satellite signal may take 15 minutes or more.

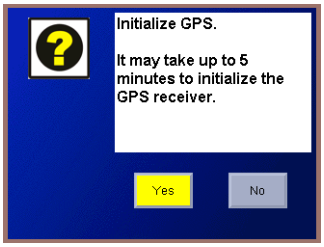

Options

Set GPS Position

Set GPS Position enables you to manually set the location of the Current Position icon. If you have travelled a long distance with the unit off, it may take some time for the unit to reacquire a satellite signal. By manually setting the position of the unit, you are telling the unit where you are and will speed up the satellite signal acquisition. Select **Set GPS Position**.

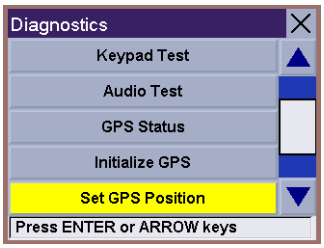

Use the keypad to enter the city name.

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

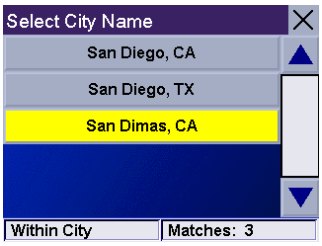

Enter the street name (do not enter prefixes such as “North” or “N”, or suffixes such as “Ave” or “Road” in the street name).

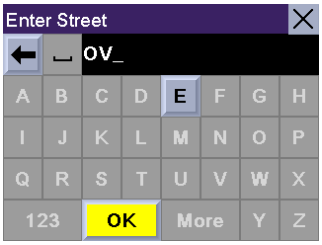

Use the Navigation key to scroll the list up or down (if necessary) and select the desired city.

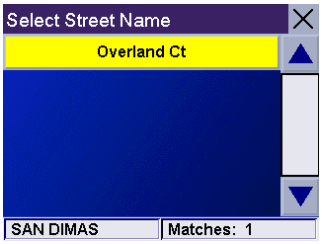

Enter the street address. The acceptable range of numbers is displayed at the top of the screen. If you do not know the exact address, just select **Done** and the Magellan RoadMate will use the lowest number in the range. Select **Done** to continue. You will be returned to the Diagnostics menu.

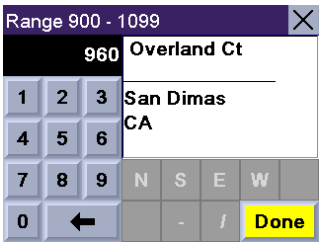

Options

Go to the Map screen. Your current position is now set to the address you entered.

Simulator Mode

In Simulator Mode, you can demonstrate the capabilities of the Magellan RoadMate without actually driving. In order for the simulation to work, you must set a route first. Select **Simulator Mode**.

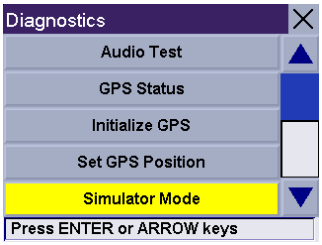

Set the speed variance of the simulation: x1 will “drive” at normal speed using known speed limits; x1.5 will “drive” at one and a half times normal speed; x2 will “drive” at two times normal speed.

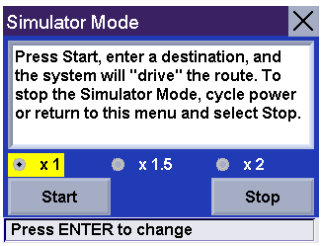
Simulator Mode
Press Start, enter a destination, and the system will "drive" the route. To stop the Simulator Mode, cycle power or return to this menu and select Stop.
x 1
x 1.5
x 2
Start
Stop
Press ENTER to change

Select **Start** to begin the simulation.

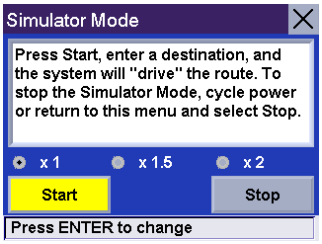
Simulator Mode
Press Start, enter a destination, and the system will "drive" the route. To stop the Simulator Mode, cycle power or return to this menu and select Stop.
x 1
x 1.5
x 2
Start
Stop
Press ENTER to change

Return to the Map screen to view the simulation.

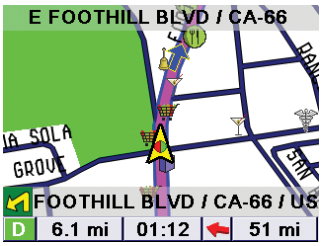

To disable Simulator Mode, select **Stop**, or when the power is turned off the Simulator will stop.

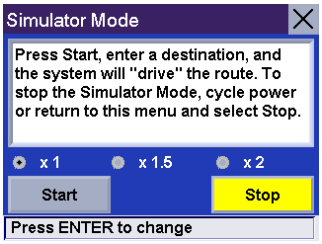
Simulator Mode
Press Start, enter a destination, and the system will "drive" the route. To stop the Simulator Mode, cycle power or return to this menu and select Stop.
x 1
x 1.5
x 2
Start
Stop
Press ENTER to change

Edit User Name

You can customize the name for each of the three users. The name will appear at the Warning/ User Selection screen and in the Configuration selection menus.

Options

Select **Edit User Name**.

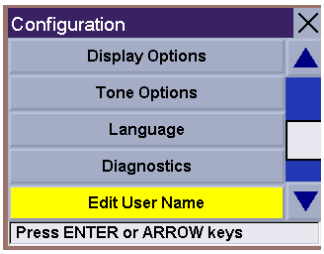

Use the keypad to delete the existing user name and enter the desired name for the selected user. When you have finished, select **OK** and you will be returned to the Configuration menu.

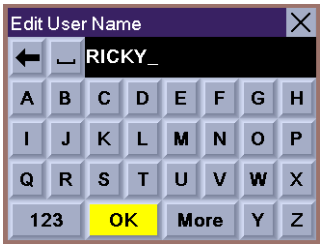

Next time you start your Magellan RoadMate, the name you entered will be displayed.

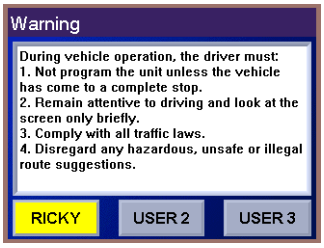
Warning
During vehicle operation, the driver must:
1. Not program the unit unless the vehicle has come to a complete stop.
2. Remain attentive to driving and look at the screen only briefly.
3. Comply with all traffic laws.
4. Disregard any hazardous, unsafe or illegal route suggestions.
RICKY
USER 2
USER 3

In addition, configurable items that are user specific will display the user name in the menu.

Map Regions

The Magellan RoadMate 760 comes preloaded with North American and European map data. If you are travelling to Europe, you can take your Magellan RoadMate with you and use it while you are driving abroad. To unlock the European map, contact our Customer Service department for pricing and unlock-code information.

Select Map Regions.

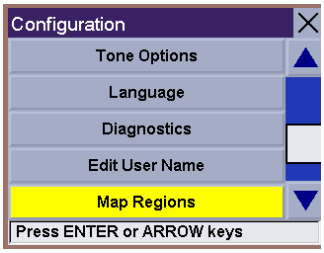

Options

Select Europe and then select **Unlock**.

Select **Code**.

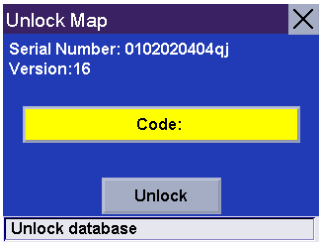

Use the keypad to enter the unlock code. When you have finished, select **OK**.

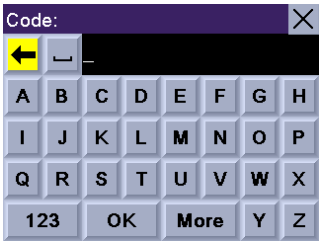

Select **Unlock**.

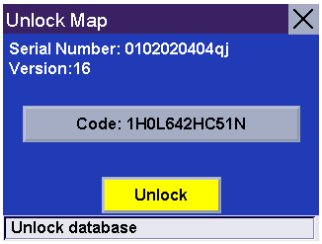

The database is unlocked. Select **OK.**

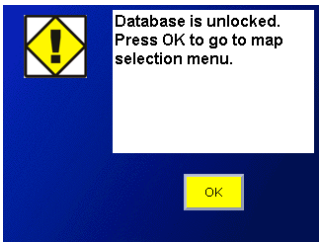

Select **Europe** and then select **Switch**. Note: If you have a Compact Flash (CF) card inserted, you must remove it before switching maps.

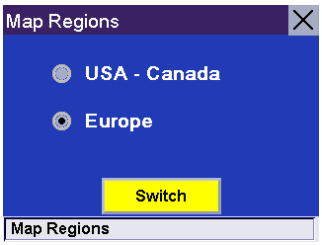

Select **Yes**. After the unit has powered down, turn the unit back on and the new map will begin loading. When it has finished, you will have access to the European maps. Also note that the user interface will be slightly different.

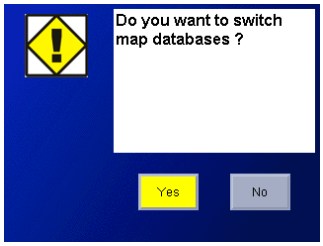

Safety Lockout

The Safety Lockout feature disables any user input while the vehicle is in motion. While this feature can be disabled, the driver should not operate the unit while the vehicle is in motion.

Select **Safety Lockout**.

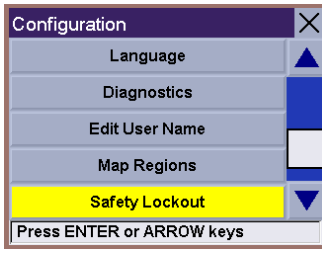

Select **Enable Safety Lockout** and select **Save**.

Password

The Magellan RoadMate has the capability of enabling a password for each of the three users. This will keep other users from accessing and changing your preferences or altering your address book.

Select **Password**.

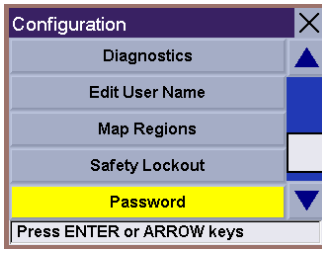

Select **Change**.

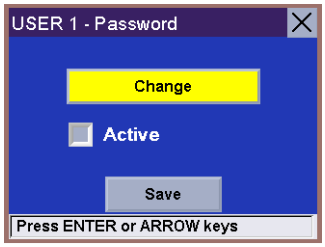

Options

Use the keypad to enter a password of up to six characters. You can use letters or numbers, or a combination of both. When you have finished, select **OK**.

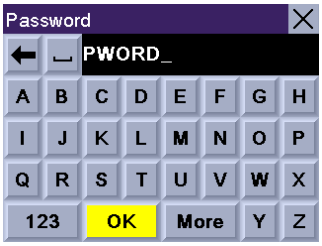

Select **Activate** to enable the password.

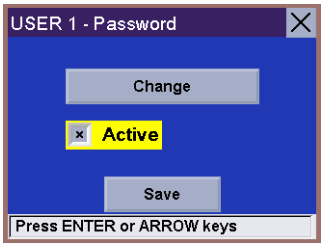

When you have finished, select **Save**.

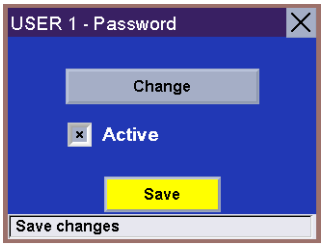

Automatic Volume

The Magellan RoadMate can be set to automatically increase the volume when the vehicle exceeds 45 MPH in order to compensate for road noise.

Select **Automatic Volume**.

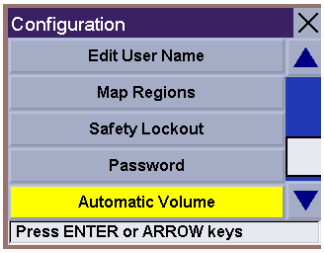

Select the number increment by which to increase the volume.

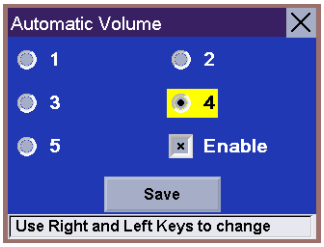

Select **Enable**.

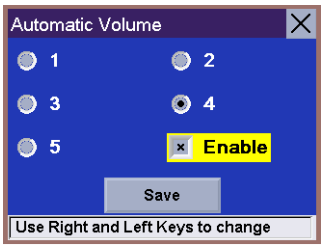

When you have finished, select **Save**.

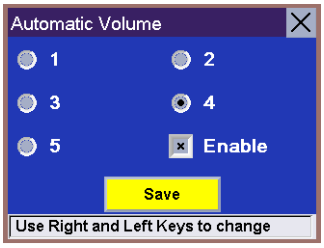

Backup and Restore

The Magellan RoadMate 760 has the capability to back up your information (Address Book, Previous Destinations, etc.) to a Compact Flash (CF) card (not included). When a CF card is inserted in the CF card slot (see “Rear View” on page 5), the information will automatically back up when you power down the unit. In the event that you need to reset your unit, you can also restore the information back to the unit. A minimum-size CF card of 16 MB is required.

Restoring Information and Preferences

Select **Backup and Restore**.

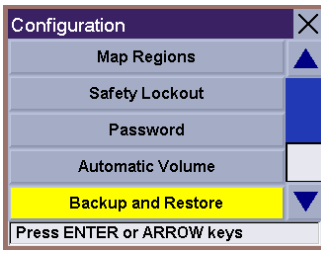

If you do not have a CF card inserted in the CF card slot (see “Rear View” on page 5), you will be prompted to turn the unit off and insert the CF card.

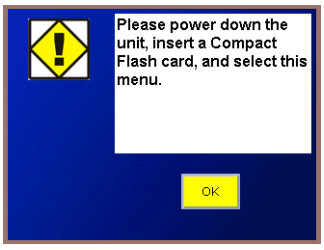

Then, turn the unit back on and reselect **Backup and Restore**.

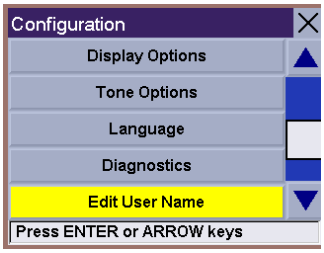

A dialog box will appear, stating that your information is being restored, and the unit will shut off automatically. Turn the unit back on, and your information and preferences are restored.

Options

Tutorial

The Magellan RoadMate has a built-in Tutorial that you can view or refer to anytime the Magellan RoadMate is turned on. Do not use the tutorial while you are driving. If you are operating the vehicle, please come to a complete stop before reviewing the tutorial topics.

From any screen, press the **Option** button and select **Tutorial**.

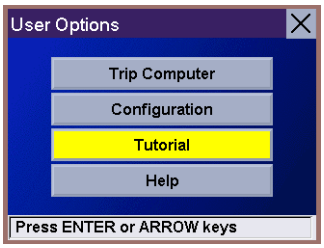

Select the desired topic.

The tutorial includes verbal narration to further aid you in understanding the selected topic. When the tutorial for the selected topic is complete, it will automatically return to the Tutorial menu. You can then select another topic to view or press the **Cancel** button to return to the Option menu.

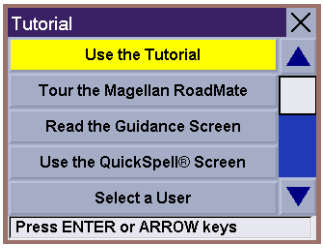

Moving Around the Tutorial

At any time during the tutorial, press the right side of the Navigation key to skip ahead to the next topic.

To go back to the previous topic, press the left side of the Navigation key.

When you are finished viewing the tutorial, press the **Cancel** button to return to the Option menu.

Options

Help

Select **Help**.

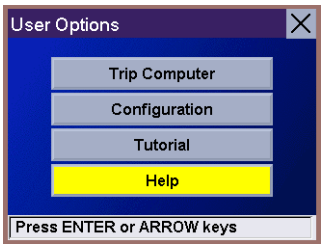

Customer Support phone numbers for United States, Canada, and Europe are displayed.
See page 107 for more information.

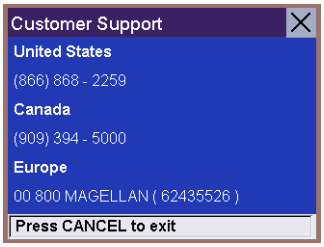

Contact Information

If you need support for your Magellan RoadMate and you wish to contact Thales, please use the following information to direct your questions/comments to the proper person.

Technical Support

If you need technical assistance or "how-to" help, or if you have a technical question about the functionality of your Magellan product, please contact us on the Internet at **www.magellangps.com** or reach us by fax or by phone.

Our Technical Support phone representatives are available Monday through Friday, 6:00 a.m. to 5:00 p.m. PST/PDT. After hours, you may leave a detailed voice mail message that will be returned within the next business day.

Telephone: (**866) 868-2259** or **(909) 394-5000** (Outside North America)

You may also reach Technical Support by Fax: **(909) 394-7050** [Attn: Tech. Support]; or E-Mail: **magellansupport@thalesnavigation.com**

Warranty Service

To obtain warranty service on your unit, you must contact us for a return authorization before you ship the product. Packages arriving at our dock without an RMA will be refused.

To obtain an RMA, simply contact our Technical Support group at: Telephone: **(866) 868-2259** or **(909) 394-5000**; Fax: **(909) 394-7050** [Attn: Tech. Support]; or E-Mail: **magellansupport@thalesnavigation.com**

Customer Service

If you need to order accessories or obtain unlock codes, you can call our Customer Service Department Monday through Friday, 6:00 a.m. to 5:00 p.m. PST/PDT, or visit our Web site at **www.magellangps.com**.

Telephone: (**866) 339-0488** or **(909) 394-5000** (Outside North America); Fax: **(909) 394-7078**.

Appendix A

Adding Addresses from an IrDA-Equipped Device

The Magellan RoadMate comes equipped with an IRDA receiver (see “Front View” on page 4). With this, you can “beam” addresses from your Palm or other equipped device.

Do not attempt to transfer addresses while you are driving, at a stop, or in traffic. Address transfer should be done only while the vehicle is parked.

Make sure the Magellan RoadMate is turned on and at the Select Destination screen.

From your Palm or other IrDA-equipped device, select the address you wish to transfer to the Magellan RoadMate and select the IrDA transfer function.

Aim the device directly at the IRDA receiver on the Magellan RoadMate.

If the transfer was successful, the Magellan RoadMate will begin “searching” for the address in its database.

The Address Book screen will appear with the information from your device.

You can then choose to edit the information. Or, if you are satisfied with the entry, select **Save**.

The entry is stored in your address book.

Appendix B

GPS Status Screen

GPS STATUS Screen Structure-first page

CH	PRN	AZ	EL	SNR	FRQ	U/N		
01	d1	d2	d3	d4	d5	c1	c2	d6
02	d1	d2	d3	d4	d5	c1	c2	d7
03	d1	d2	d3	d4	d5	c1	c2	
04	d1	d2	d3	d4	d5	c1	c2	
05	d1	d2	d3	d4	d5	c1	c2	
06	d1	d2	d3	d4	d5	c1	c2	
07	d1	d2	d3	d4	d5	c1	c2	
08	d1	d2	d3	d4	d5	c1	c2	
09	d1	d2	d3	d4	d5	c1	c2	
10	d1	d2	d3	d4	d5	c1	c2	
11	d1	d2	d3	d4	d5	c1	c2	
12	d1	d2	d3	d4	d5	c1	c2	
13	d1	d2	d3	d4	d5	c1	c2	
14	d1	d2	d3	d4	d5	c1	c2	

It is ordered by the channel number from 1 to 12.

Where:

d1: Satellite PRN number, with “e” or “E” to the right means got ephemeris data, “v” or “V” to the right means got verified ephemeris data (double check). “E” or “V” also means got satellite time for this channel.

d2: Azimuth, in degrees

d3: Elevation angle, in degrees

d4: SNR (signal to noise ratio), it is ratio-Hz, not dB unit

d5: Searching Frequency Offset (Hz)

c1: U – Used for position fix, U – Not used for position fix

c2: Mode of the channel: I- Idle, S-searching, B – Bit sync, R- Reacquisition, T- Tracking, D-tracking and collecting data

d6: Last Bad fix code. 0 means getting fixes. A non-zero value is either waiting for a fix or has a bad fix

d7: Clock Offset (Hz).

Bad fix code

0 PVT_OK :good fix

2 ILLEGAL_ALT: illegal altitude < -10km or > 17.5km

4 POSITION_JUMP: too big position jump between two epoch (300 miles)

5 ILLEGAL_VELOCITY_OR_ALT: max velocity 951mile

7 TOO_BIG_ACCELERATION max 15m around 1.5g

8 TOO_SMALL_ALTITUDE -10000 m

9 TOO_BIG_ALTITUDE 17,500 m

10 TOO_BIG_PDOP max PDOP 50

11 SATS_BELOW_MASK_ANGLE satellite elevation angle is below mask angle

16 ILL_DEFINED_3D_MATRIX 3X3 matrix can not be inverted in 3D fix

Appendix B

17 ILL_DEFINED_2D_MATRIX 2X2 matrix can not be inverted in 2D fix

20 NO_SAT_TIME no satellite time

23 NOT_ENOUGH_SATS no enough satellite for 2D or 3D fix

24 CANNOT_SELECT_FIX_TYPE

30 VELOCITY_2D_ONLY 2 satellite fix only for velocity, no position fix

31 BAD_VELOCITY_PDOP 50 too big pdop for velocity

32 TOO_MANY_SATS_FOR_2D_VEL there are 4 or more satellites, but 2D fix provided

51 WRONG_NUMSAT number of satellite for fix > 12 or less 2

56 LOOP_3D_NOT_CONVERGING 3D initial fix is not convergent

57 MILLISECOND_ERROR millisecond jump happened

58 LOOP_2D_NOT_CONVERGING 2Dinitial fix is not convergent

59 BAD_RANGE_CHITEST; range post-fix residuals chi-test failed

60 BAD_DOPPLER_CHITEST doppler post-fix residuals chi-test failed

61 OSC_DRIFT_ERR too much clock drift 60HZ for XO, 7.5HZ for TCXO

62 BAD_DOPPLER_ERR too big Doppler errors 4m/s

63 BIG_RANGE_RESID 110m/40m depend on virtual ttagl/ DGPS factors

64 BIG_DOPPLER_RESID 0.7m/s

65 HUGE_RANGE_RESID 10km normal for postfit residuals for range

66 HUGE_DOPPLER_RESID 100m/s normal for postfit residuals for doppler

Usually, Bad code is 20 and 23. If fix is good, it would be 0.

GPS STATUS Screen Structure - second page

Heading XXX (degree) Speeding XX.X (meter per second)

Current Lat: DDD.DDDDD W/E (current latitude, degree)

Current Long: DDD.DDDDD N/S (current longitude, degree)

Current altitude XXXX (altitude in mean sea level meter) TTFF XXXXs (Time-To-First-Fix in second)

#Satellite (U/T) XX/XX (the number of satellite used and tracked)

PDOP XX.X (Position Dilution Of Precision)

VDOP XX.X (Vertical Dilution of Precision)

TDOP XX.X (Time Dilution of Precision)

HDOP XX.X (Horizontal Dilution of Precision)

FOMS P/V/H (Figures Of Merits for position, velocity and heading in map matching)

UTC TIME MM/DD/YY HH:MM:SS(UTC time without local zone)

Appendix B

Typical GPS STATUS Screen Display

First Page

CH	PRN	AZ	EL	SNR	FRQ	U/N		
01	27V	311	54	334	1712	U	D	0
02	03E	078	29	135	-702	U	D	941
03	13e	079	81	204	-704	U	D	
04	20e	175	06	90	-1952	N	S	
05	31v	119	34	179	1525	U	D	
06	01V	120	53	316	-1954	U	D	
07	28V	220	13	152	3677	U	D	
08	08V	282	29	182	2848	U	D	
09	02V	046	27	173	2120	N	D	
10	84	255	12	0	934	N	S	
11	10	325	06	47	2257	N	S	
12	72	105	13	34	934	N	S	
13	134	255	12	50	171	N	S	
14	122	105	13	63	169	N	S	

Second Page

Heading 0Speeding 0.0 m/s

Current Lat: 34.10939 N

Current Long:117.82599 W

Current altitude 255 TTFF 116s

#Satellite (U/T) 11/12

PDOP 2.3

VDOP 1.7

TDOP 0.0

HDOP 1.3

FOMS P/V/H 2

UTC TIME 08/16/2004 22:56:53

Appendix C

POI Categories

The Magellan RoadMate POI database has 37 different categories. The icons will appear on the Map screen (if enabled):

	Restaurant	Fast food, diners, and food marts
	Bank/ATM	Most financial services
	Gas Station	Most fuel services
	Roadside Assistance	Towing companies
	Hospital/Polyclinic	Most medical services
	Vehicle Services	Repair shops, tire stores, and oil changes
	Airport	International and Municipal airports
	Camping & RV	Campgrounds, camping areas, and RV parks
	Car Rental	Car rental companies
	Casino	Gambling venues
	City Center	The geographical center of a selected city
	Clothing	Clothing retail stores
	Convention Center	Major Convention Centers
	Education	Schools, Colleges, and other learning institutions
	Emergency Services	Police, FIre, and Emergency Rooms
	Entertainment	Movie theaters, live performance venues
	Golf Course	Private and public courses
	Grocery Store	Major chains and local markets
	Hair & Beauty	Salons and beauty parlors
	Health Care	Doctors' offices and pharmacies
	Home & Garden	Nurseries and do-it-yourself centers
	Hotel or Motel	Most overnight stay locations
	Marina	Docks and harbors
	Misc. Services	Other services not categorized
	Nightlife	Dance halls, pubs, nightclubs
	Open Parking Area	Parking lots and garages
	Parks	County, regional, and local parks
	Professional Services	Business office locations

Appendix C

	Public Buildings	Libraries, museums, and government buildings
	Rest Area	Rest stops along major highways
	Shopping	Malls and other retail stores
	Ski Resorts	Most major ski resorts
	Sports & Recreation	Stadiums, parks, lakes
	Tourist Attraction	Places most visited by tourists
	Transportation	Bus and train stations
	Winery	Vinyards and tasting locations
	Worship	Churches, temples, mosques

When selecting restaurants, you can further narrow the search by cuisine type such as French, Italian, Greek, Mexican, etc.

Appendix D

Specifications

DImensions:	3.3” x 6.6” x 1.5”
	8.4cm x 16.8cm x 3.8cm
Weight:	13 oz.
	368g
Display:	3.8” anti-glare TTF color touch screen, 2.25” x 3.0”
Screen Resolution:	320 x 240 QVGA; 32,000 colors
Storage:	20 GB Hard Drive
Audio:	Integrated Speaker
GPS Antenna:	Integrated, detachable for optional external antenna connection

THALES CONSUMER PRODUCTS GPS RECEIVER
END USER SOFTWARE LICENSE

All Thales global positioning system (GPS) receivers are navigation aids, and are not intended to replace other methods of navigation. Purchaser is advised to perform careful position charting and use good judgment. READ THE USER GUIDE CAREFULLY BEFORE USING THE PRODUCT.

1. THALES WARRANTY

Thales warrants their GPS receivers and hardware accessories to be free of defects in material and workmanship and will conform to our published specifications for the product for a period of one year from the date of original purchase. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER OF THIS PRODUCT.

In the event of a defect, Thales will, at its option, repair or replace the hardware product with no charge to the purchaser for parts or labor. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer. Thales warrants that software products or software included in hardware products will be free from defects in the media for a period of 30 days from the date of shipment and will substantially conform to the then-current user documentation provided with the software (including updates thereto). Thales's sole obligation shall be the correction or replacement of the media or the software so that it will substantially conform to the then- current user documentation. Thales does not warrant the software will meet purchaser's requirements or that its operation will be uninterrupted, error-free or virus-free. Purchaser assumes the entire risk of using the software.

2. PURCHASER'S REMEDY

PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT Thales' OPTION, OF ANY DEFECTIVE PART OF THE RECEIVER OR ACCESSORIES WHICH ARE COVERED BY THIS WARRANTY. REPAIRS UNDER THIS WARRANTY SHALL ONLY BE MADE AT AN AUTHORIZED THALES SERVICE CENTER. ANY REPAIRS BY A SERVICE CENTER NOT AUTHORIZED BY THALES WILL VOID THIS WARRANTY.

3. PURCHASER'S DUTIES

To obtain service the purchaser must obtain a Return Materials Authorization (RMA) number from Thales prior to shipping by calling +1 800-707-7845, or by sending an e-mail to magellanrma@thalesnavigation.com. The purchaser must return the product postpaid with a copy of the original sales receipt, purchaser's return address and the RMA number clearly printed on the outside of the package to the Authorized Thales Service Center address provided by Thales with the RMA number.

Thales reserves the right to refuse to provide service free-of-charge if the sales receipt is not provided or if the information contained in it is incomplete or illegible or if the serial number is altered or removed. Thales will not be responsible for any losses or damage to the product incurred while the product is in transit or is being shipped for repair. Insurance is recommended. Thales suggests using a trackable shipping method such as UPS or FedEx when returning a product for service.

4. LIMITATION OF IMPLIED WARRANTIES

Except as set forth in item 1 above, all other expressed or implied warranties, including those of fitness for any particular purpose or merchantability, are hereby disclaimed AND IF APPLICABLE, IMPLIED WARRANTIES UNDER ARTICLE 35 OF THE UNITED NATIONS CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS.

Some national, state, or local laws do not allow limitations on implied warranty or how long an implied warranty lasts, so the above limitation may not apply to you.

5. EXCLUSIONS

The following are excluded from the warranty coverage:

(1) periodic maintenance and repair or replacement of parts due to normal wear and tear;

(2) batteries;

(3) finishes;

(4) installations or defects resulting from installation;

(5) any damage caused by (i) shipping, misuse, abuse, negligence, tampering, or improper use; (ii) disasters such as fire, flood, wind, and lightning; (iii) unauthorized attachments or modification;

(6) service performed or attempted by anyone other than an authorized Thales
Service Center;

(7) any product, components or parts not manufactured by Thales,

(8) that the receiver will be free from any claim for infringement of any patent, trademark, copyright or other proprietary right, including trade secrets

(9) any damage due to accident, resulting from inaccurate satellite transmissions. Inaccurate transmissions can occur due to changes in the position, health or geometry of a satellite or modifications to the receiver that may be required due to any change in the GPS. (Note: Thales GPS receivers use GPS or GPS+GLONASS to obtain position, velocity and time information. GPS is operated by the U.S. Government and GLONASS is the Global Navigation Satellite System of the Russian Federation, which are solely responsible for the accuracy and maintenance of their systems. Certain conditions can cause inaccuracies which could require modifications to the receiver. Examples of such conditions include but are not limited to changes in the GPS or GLONASS transmission.).

Opening, dismantling or repairing of this product by anyone other than an authorized Thales Service Center will void this warranty.

6. EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES

THALES SHALL NOT BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DAMAGES RESULTING FROM DELAY OR LOSS OF USE, LOSS OF OR DAMAGES ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY EVEN THOUGH

CAUSED BY NEGLIGENCE OR OTHER FAULT OFTHALES OR NEGLIGENT USAGE OF THE PRODUCT. IN NO EVENT WILL THALES BE RESPONSIBLE FOR SUCH DAMAGES, EVEN IF THALES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some national, state, or local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

7. COMPLETE AGREEMENT

This written warranty is the complete, final and exclusive agreement between Thales and the purchaser with respect to the quality of performance of the goods and any and all warranties and representations. THIS WARRANTY SETS FORTH ALL OF Thales' RESPONSIBILITIES REGARDING THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM LOCALITY TO LOCALITY AND CERTAIN LIMITATIONS CONTAINED IN THIS WARRANTY MAY NOT APPLY TO YOU.

8. CHOICE OF LAW.

This limited warranty is governed by the laws of the State of California, without reference to its conflict of law provisions or the U.N. Convention on Contracts for the International Sale of Goods, and shall benefit Thales, its successors and assigns.

This warranty does not affect the consumer's statutory rights under applicable laws in force in their locality, nor the customer's rights against the dealer arising from their sales/purchase contract.

For further information concerning this limited warranty, please call or write:

Thales, Inc. - 960 Overland Court - San Dimas, California, U.S.A. 91773

Phone: +1 909-394-5000, Fax: +1 909-394-7050

THALES CONSUMER PRODUCTS PRODUCTS LIMITED WARRANTY

All Thales global positioning system (GPS) receivers are navigation aids, and are not intended to replace other methods of navigation. Purchaser is advised to perform careful position charting and use good judgment. READ THE USER GUIDE CAREFULLY BEFORE USING THE PRODUCT.

1. THALES WARRANTY

Thales warrants their GPS receivers and hardware accessories to be free of defects in material and workmanship and will conform to our published specifications for the product for a period of one year from the date of original purchase. THIS WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER OF THIS PRODUCT.

In the event of a defect, Thales will, at its option, repair or replace the hardware product with no charge to the purchaser for parts or labor. The repaired or replaced product will be warranted for 90 days from the date of return shipment, or for the balance of the original warranty, whichever is longer. Thales warrants that software products or software included in hardware products will be free from defects in the media for a period of 30 days from the date of shipment and will substantially conform to the then-current user documentation provided with the software (including updates thereto). Thales's sole obligation shall be the correction or replacement of the media or the software so that it will substantially conform to the then- current user documentation. Thales does not warrant the software will meet purchaser's requirements or that its operation will be uninterrupted, error-free or virus-free. Purchaser assumes the entire risk of using the software.

2. PURCHASER'S REMEDY

PURCHASER'S EXCLUSIVE REMEDY UNDER THIS WRITTEN WARRANTY OR ANY IMPLIED WARRANTY SHALL BE LIMITED TO THE REPAIR OR REPLACEMENT, AT Thales' OPTION, OF ANY DEFECTIVE PART OF THE RECEIVER OR ACCESSORIES WHICH ARE COVERED BY THIS WARRANTY. REPAIRS UNDER THIS WARRANTY SHALL ONLY BE MADE AT AN AUTHORIZED THALES SERVICE CENTER. ANY REPAIRS BY A SERVICE CENTER NOT AUTHORIZED BY THALES WILL VOID THIS WARRANTY.

3. PURCHASER'S DUTIES

To obtain service the purchaser must obtain a Return Materials Authorization (RMA) number from Thales prior to shipping by calling +1 800-707-7845, or by sending an e-mail to magellanrma@thalesnavigation.com. The purchaser must return the product postpaid with a copy of the original sales receipt, purchaser's return address and the RMA number clearly printed on the outside of the package to the Authorized Thales Service Center address provided by Thales with the RMA number.

Thales reserves the right to refuse to provide service free-of-charge if the sales receipt is not provided or if the information contained in it is incomplete or illegible or if the serial number is altered or removed. Thales will not be responsible for any losses or damage to the product incurred while the product is in transit or is being shipped for repair. Insurance is recommended. Thales suggests using a trackable shipping method such as UPS or FedEx when returning a product for service.

4. LIMITATION OF IMPLIED WARRANTIES

Except as set forth in item 1 above, all other expressed or implied warranties, including those of fitness for any particular purpose or merchantability, are hereby disclaimed AND IF APPLICABLE, IMPLIED WARRANTIES UNDER ARTICLE 35 OF THE UNITED NATIONS CONVENTION ON CONTRACTS FOR THE INTERNATIONAL SALE OF GOODS.

Some national, state, or local laws do not allow limitations on implied warranty or how long an implied warranty lasts, so the above limitation may not apply to you.

5. EXCLUSIONS

The following are excluded from the warranty coverage:

(1) periodic maintenance and repair or replacement of parts due to normal wear and tear;

(2) batteries;

(3) finishes;

(4) installations or defects resulting from installation;

(5) any damage caused by (i) shipping, misuse, abuse, negligence, tampering, or improper use; (ii) disasters such as fire, flood, wind, and lightning; (iii) unauthorized attachments or modification;

(6) service performed or attempted by anyone other than an authorized Thales Service Center;

(7) any product, components or parts not manufactured by Thales,

(8) that the receiver will be free from any claim for infringement of any patent, trademark, copyright or other proprietary right, including trade secrets

(9) any damage due to accident, resulting from inaccurate satellite transmissions. Inaccurate transmissions can occur due to changes in the position, health or geometry of a satellite or modifications to the receiver that may be required due to any change in the GPS. (Note: Thales GPS receivers use GPS or GPS+GLONASS to obtain position, velocity and time information. GPS is operated by the U.S. Government and GLONASS is the Global Navigation Satellite System of the Russian Federation, which are solely responsible for the accuracy and maintenance of their systems. Certain conditions can cause inaccuracies which could require modifications to the receiver. Examples of such conditions include but are not limited to changes in the GPS or GLONASS transmission.).

Opening, dismantling or repairing of this product by anyone other than an authorized Thales Service Center will void this warranty.

6. EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES

THALES SHALL NOT BE LIABLE TO PURCHASER OR ANY OTHER PERSON FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DAMAGES RESULTING FROM DELAY OR LOSS OF USE, LOSS OF OR DAMAGES ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY EVEN THOUGH CAUSED BY NEGLIGENCE OR OTHER FAULT OFTHALES OR NEGLIGENT USAGE OF THE PRODUCT.

IN NO EVENT WILL THALES BE RESPONSIBLE FOR SUCH DAMAGES, EVEN IF THALES HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some national, state, or local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

7. COMPLETE AGREEMENT

This written warranty is the complete, final and exclusive agreement between Thales and the purchaser with respect to the quality of performance of the goods and any and all warranties and representations. THIS WARRANTY SETS FORTH ALL OF Thales' RESPONSIBILITIES REGARDING THIS PRODUCT.

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH VARY FROM LOCALITY TO LOCALITY AND CERTAIN LIMITATIONS CONTAINED IN THIS WARRANTY MAY NOT APPLY TO YOU.

8. CHOICE OF LAW.

This limited warranty is governed by the laws of the State of California, without reference to its conflict of law provisions or the U.N. Convention on Contracts for the International Sale of Goods, and shall benefit Thales, its successors and assigns.

This warranty does not affect the consumer's statutory rights under applicable laws in force in their locality, nor the customer's rights against the dealer arising from their sales/purchase contract.

For further information concerning this limited warranty, please call or write:

Thales S.A. - 960 Overland Court - San Dimas, California, U.S.A. 91773

Phone: +1 909-394-5000, Fax: +1 909-394-7050

Before installing the windshield mount, use the alcohol pad (supplied) to clean the suction cup and the area of the windshield where you will place the windshield mount.

Avant d'installer le support de fixation pour pare-brise, nettoyez la zone de son emplacement ainsi que la ventouse avec le tampon alcoolisé (fourni).

Reinigen Sie vor der Installation der Windschutzscheibenhalterung den Saugnapf und den Bereich der Windschutzscheibe, an dem Sie die Halterung anbringen möchten, mit einem alkoholgetränkten Tuch (mitgeliefert).

Antes de instalar el soporte de parabrisas, utilice el paño con alcohol (incluido) para limpiar la ventosa y la zona del parabrisas donde va a colocar el soporte de parabrisas.

Voordat u de voorruitmontage installeert, moet u het meegeleverde alcoholdoekje gebruiken om de zuignap en de plaats op de voorruit waar u het systeem zal aanbrengen, te reinigen.

Prima di installare la staffa di montaggio per parabrezza, pulire la ventosa e la zona del parabrezza in cui si installerà la staffa utilizzando la salvietta imbevuta di alcol fornita in dotazione.

Register your Magellan product on the World Wide Web.

Go to www.magellangps.com for details

[Français] Enregistrez votre produit Magellan sur Internet. Rendez-vous sur www.magellangps.com pour en savoir plus.

[Español] Registre su producto Magellan a través de Internet. Vaya a www.magellangps.com para más detalles.

[Deutsch] Registrieren Sie Ihr Magellan-Produkt im Internet. Gehen Sie zu www.magellangps.com.

[Italiano] Registrazione del prodotto Magellan nel World Wide Web. Indirizzo: www.magellangps.com per maggiori dettagli.

[Português] Registe o seu produto Magellan na World Wide Web. Vá para www.magellangps.com para obter mais informações.

[Dansk] Registrer din Magellan-produkt på World Wide Web. Se flere oplysninger på adressen www.magellangps.com.

[Nederlands] Registreer uw Magellan-product op het internet. Ga naar www.magellangps.com voor meer informatie.

[Suomi] Rekisteröi Magellan-tuotteesi internetissä. Lisätietoja löydät osoitteesta www.magellangps.com.

[Norsk] Registrer ditt Magellan-produkt på Internett. Gå til www.magellangps.com for detaljer.

[Svenska] Registrera din Magellan-produkt på World Wide Web. Gå till www.magellangps.com för mer information.

MAGELLAN®

Any Questions?

Dear Customer,

Congratulations! Thank you for purchasing your Magellan® RoadMate™ portable vehicle navigation system.

Your Magellan RoadMate has been manufactured with the greatest care and highest standard of quality for your satisfaction. We would like to ensure that you have the best possible experience using your new GPS system. However, in the unlikely event that you experience technical difficulties in using this product, our support staff will be happy to help answer any questions you may have. **Please contact us before deciding to return your product to the store where you purchased it.**

Operating hours: 6:00 A.M. to 5:00 P.M. Monday through Friday (Pacific Standard Time)
E-mail address: **magellansupport@thalesnavigation.com**
Phone number (toll free): **(866) 868-2259**

Additional support can be conveniently accessed on our website at www.magellangps.com. There you can get the latest product information, firmware and register your new Magellan RoadMate. **Registering your product will keep you informed of the latest available updates and make phone and email support quicker and easier.**

Thank you for allowing us to assist you.

©2004 Thales Navigation, Inc. All rights reserved. The Magellan logo, Magellan, and Magellan RoadMate are trademarks of Thales Navigation.

Part #204581-98 A

THALES NAVIGATION MAGELLAN ROADMATE 700 PRODUCT SOFTWARE LICENSE

IMPORTANT - READ CAREFULLY BEFORE USING THE SOFTWARE

By clicking the acceptance button or using the pre-loaded software, you are agreeing to be bound by all of the terms and conditions of this software license agreement ("Agreement") which is provided with the pre-loaded software program and data (together the "Software") including, without limitation, the use restrictions, warranty disclaimer and limitation of liability set forth therein. If you do not agree to be bound by all of the terms and conditions of the Agreement, you should immediately STOP USE of the Software and refer any questions in writing to: Thales Navigation Customer Support, 960 Overland Court, San Dimas, CA 91773.

The license is not a sale of the Software. This Software and the accompanying documentation are copyrighted works of authorship and contain valuable secret and confidential information proprietary to Thales Navigation ("Licensor") and its third-party suppliers, including data supplied by Navigation Technologies ("NAVTEQ"), each of whom retain the ownership of the information and all copyrights and other proprietary rights therein. You agree to exercise all reasonable efforts to protect these rights. Copyright law prohibits making copies of the Software for any reason, nor may you copy the written material accompanying the Software.

Under the Agreement, you have a limited, non-exclusive, non-transferable license to use the Software contained in with the product only for your personal use subject to the User Restrictions below. You may not sublicense, rent or lease the Software, but you may permanently transfer your license to use the Software and accompanying materials by delivering to another party the original copy of the Software package, including this Agreement, together with the hardware. The transferee must then confirm, in writing to Licensor, its agreement to all terms and conditions outlined in this Software License. Such transfer terminates your license to use the Software. Licensor and its third-party suppliers retain all rights to the Software.

User Restrictions: The Software must remain upon a single Magellan RoadMate 700 product owned by you. You may not operate the Software in a time-sharing or service bureau operation, dispatch or fleet management, on a temporary or permanent basis, without the prior written consent of Licensor. You agree not to translate, modify, adapt, disassemble, decompile, or reverse engineer the Software, or create derivative works of the Software or documentation or any portion thereof. Unauthorized reproduction or distribution of this Software, or any portion of it, may result in civil and criminal penalties and will be prosecuted to the maximum extent possible under the law. End User shall indemnify and save harmless, the

Licensor and its third-party suppliers (and their third-party suppliers) and their officers, employees and agents from and against any claim, demand or action, irrespective of the nature or the cause of the claim, demand or action, alleging loss, costs, expenses, damages or injuries (including injuries resulting in death) arising out of the use or possession of the Software.

The license is effective until terminated. The license will terminate without any notice from Licensor if you fail to comply with any provisions of the Agreement. Upon termination, you must cease all use of the Software and documentation and return the product incorporating the Software to Licensor. The Agreement is governed by and construed in accordance with the laws of the State of California without regard to conflict of laws provisions thereof and without regard to the United Nations Convention on Contracts for the International Sale of Goods.

DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY: EXCEPT AS SET FORTH IN THE LIMITED WARRANTY THAT ACCOMPANIES THE PRODUCT, LICENSOR AND ITS THIRD-PARTY SUPPLIERS (AND THEIR THIRD-PARTY SUPPLIERS) MAKE NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, REGARDING THE SOFTWARE, MEDIA, DOCUMENTATION, RESULTS OR ACCURACY OF THE SOFTWARE AND HEREBY EXPRESSLY DISCLAIM ANY WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. THE SOFTWARE IS PROVIDED "AS IS" AND LICENSOR AND ITS THIRD PARTY SUPPLIERS (AND THEIR THIRD PARTY SUPPLIERS) DO NOT WARRANT THE SOFTWARE WILL MEET YOUR REQUIREMENTS OR THAT ITS OPERATION WILL BE UNINTERRUPTED OR ERROR-FREE. This product does not replace the need for good judgment while navigating and should never be relied upon as the sole means of navigation.

Licensor and its third-party suppliers (and their third-party suppliers) shall have no liability to you or any third party for special, incidental, indirect or consequential damages (including, but not limited to, loss of profits or savings, downtime, damage to or replacement of equipment and property, or recovery or replacement of computers or data) arising from claims based in warranty, contract, tort (including negligence), strict liability, or otherwise even if Licensor or its third-party suppliers (and their third-party suppliers) have been advised of the possibility of such claim or damages. The liability of Licensor and its third-party suppliers (and their third-party suppliers) for damages shall not exceed the actual amount paid for the Software.

Some states do not allow the exclusion of limitation of implied warranties or liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you.

U.S. Government Restricted Rights: The software is provided with Restricted Rights or Limited Rights. Use, duplication or disclosure by the U.S. Government is subject to the restrictions as set forth in subparagraphs (b)(3) and (c)(1)(ii) of the Rights in Technical Data Noncommercial Items clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software-Restricted Rights clause at 48 CFR 52.227-19, as applicable. Manufacturer is Thales Navigation, Inc., 471 El Camino Real, Santa Clara, CA 95050.

WARNING
The Software data reflect conditions as they existed at various points in time before you purchased the product incorporating the Software. Accordingly, the Software may contain inaccurate or incomplete data or information due to the passage of time, road construction, and changing conditions or otherwise. The Software does not include, analyze, process, consider or reflect any of the following: legal restrictions (such as vehicular type, weight, height, width, load and speed restrictions); road slope or grade; bridge height, width, weight or other limits; population density; neighborhood quality or safety; availability or proximity of law enforcement, emergency rescue, medical or other assistance; construction work zones or hazards; road or lane closures; road, traffic or traffic facilities safety or condition; weather conditions; pavement characteristics or conditions; special events; traffic congestion; travel time.

© 2004 Thales Navigation, Inc. All rights reserved.
Included data © 2004 Navigation Technologies Corporation. All rights reserved.
The Software may include information taken with the permission from Canadian authorities, and include © Her Majesty the Queen in Right of Canada, © Queen's printer for Ontario.

For information on language translations or distribution outside the United States of America, contact Thales Navigation at the address shown below.

Thales Navigation, Inc., 960 Overland Court, San Dimas, California 91773

Hot Line: 866-868-2259
Voice: 909-394-5000
FAX: 909-394-7050

Magellan® RoadMate™ 760

Documentation

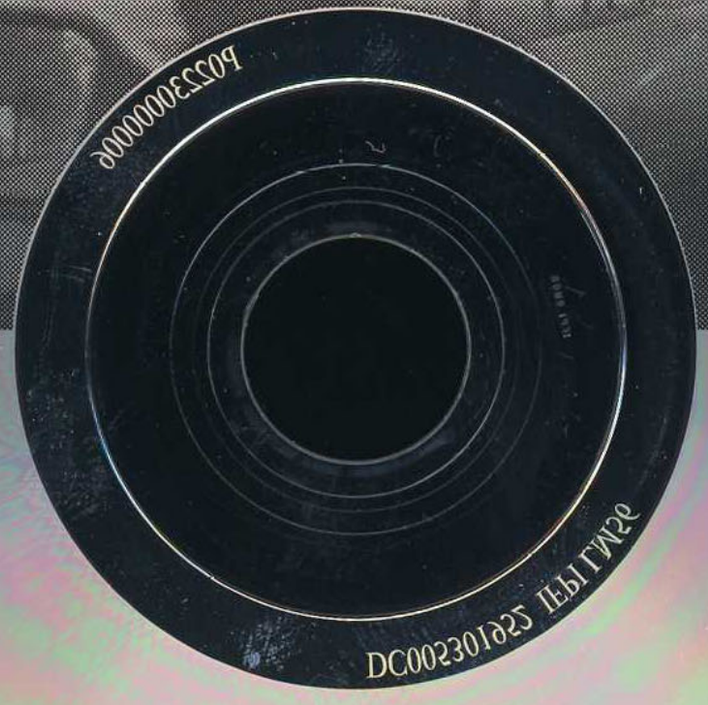

COMPACT disc

Requires Adobe® Reader® 6.0 or higher

P/N 500205
V1.00
North America

MAGELLAN®

© 2005 Thales S.A. All rights reserved. The Magellan logo, Magellan, and Magellan RoadMate are trademarks of Thales. All other product and brand names are trademarks of their respective holders.

Magellan® RoadMate™ 760

POI Manager

COMPACT disc

P/N 500188
V1.07

MAGELLAN®

© 2005 Thales S.A. All rights reserved. The Magellan logo, Magellan, and Magellan RoadMate are trademarks of Thales.

MAGELLAN

Magellan® RoadMate™

Please check the Magellan web site, www.magellangps.com, for accessories available for your Magellan RoadMate. Accessories can be purchased at the Magellan Online Store, by phone or from your local dealer.

Magellan Online Store — www.magellangps.com/en/store/

Direct your web browser to www.magellangps.com/en/store/ to enter the Magellan Online Store. There you will find information about accessories that work with your new Magellan RoadMate.

Online orders from the Magellan store are currently only available in the United States, can only be shipped to US addresses and be paid for in US dollars.

Order By Phone (North America only) — 1-866-339-0488

You can also purchase accessories for your Magellan RoadMate by using the Magellan Products Order Desk toll-free number. All major credit cards are accepted.

From Your Dealer

Contact your Magellan dealer to purchase accessories for your Magellan RoadMate. To help you locate other Magellan dealers in your area, you can access the Dealer Locator in the Magellan GPS web site. The web page for the Dealer Locator is www.magellangps.com/en/store/dealerlocator/.

Magellan Extended Warranty Program

Take advantage of this great opportunity to extend the life of your Magellan® product warranty for two additional years[1]. The Magellan Extended Warranty Program provides you with a single point of contact for reliable end-to-end service and avoids expensive time and material repairs.

Choose the product you want to cover:

Product	Extended Warranty Price
SporTrak Basic	$ 29.95
SporTrak Map	$ 29.95
SporTrak Pro	$ 29.95
SporTrak Pro Marine	$ 29.95
SporTrak Topo	$ 39.95
SporTrak Color	$ 49.95
Merdian Gold	$ 29.95
Meridian Marine	$ 39.95
Meridian Platinum	$ 39.95
Meridian Color	$ 49.95
FX324 Mono Display	$ 49.95
FX324 Color Display	$ 79.95
Magellan RoadMate 300	$ 69.95
Magellan RoadMate 500	$ 99.95
Magellan RoadMate 700	$129.95

To sign up, simply follow these steps within 90 days of the purchase date of your unit:

Step 1: Complete the attached application form – be sure to include your product serial number

Step 2: Attach a copy of your dated sales receipt and a copy of the UPC code from the product box

Step 3: Mail or fax the application form, sales receipt and UPC code, complete with credit card payment[2] information to:

Thales Navigation, Inc.
Attn: Extended Warranty Customer Service
P.O. Box 869, San Dimas, CA 91773
Fax (909) 394-7070

Your serial number is located on a label affixed to your GPS product. Some labels are located inside the battery bay. All serial numbers begin with the letters S/N.

For more information call 888-550-7628 or check our website

www.magellangps.com/extendedwarranty

[1] In accordance with the Terms and Conditions on the reverse. Program is subject to change or cancellation without notice.

[2] Only Visa, MasterCard, American Express and Discover accepted, no checks or cash.

---- Offer Valid in United States Only ---

Complete this section and return to Thales Navigation.

Magellan Products Extended Warranty Program Application

Name _____ Telephone _____

Address _____ Fax _____

City _____ State _____ Zip _____ E-mail _____

Product _____ Extended Warranty Price _____

Serial # _____ Purchase Date _____

Credit Card Number _____ Expiration Date _____

Name as it appears on Credit Card _____

Signature _____

830329 A

MAGELLAN PRODUCTS EXTENDED WARRANTY TERMS AND CONDITIONS

This Extended Warranty is an agreement between Thales Navigation, Inc., 471 El Camino Real, Santa Clara, CA 95050, which is the obligor and administrator, and you, the purchaser. This document, together with the Thales Navigation Magellan Products Limited Warranty (Limited Warranty) that accompanied the products when purchased, sets forth the entire Extended Warranty and may not be modified except by written agreement by Thales Navigation.

HOW LONG IS COVERAGE? Coverage begins on the original product purchase date and expires 3 years later. KEEP YOUR ORIGINAL RECEIPT AS PROOF OF DATE OF PURCHASE. This Extended Warranty (2 years) is inclusive of the original Limited Warranty period (1 year). THIS WARRANTY APPLIES ONLY TO THE ORIGINAL PURCHASER.

WHAT IS COVERED? This Extended Warranty covers products listed in the Extended Warranty Application, purchased as new, and manufactured for use in the United States (Covered Products). We warrant Covered Products to be free of defects in material and workmanship and that Covered Products will conform to our published specifications for the product for the duration of the Extended Warranty.

Under this Extended Warranty we will maintain your Covered Product in good operating condition, providing parts and labor at no charge. At our option, we will repair or replace the defective Covered Product with a product of like kind or quality, which may be new or reconditioned. The repaired or replaced Covered Product will be warranted for 90 days from the date of return shipment, or for the balance of the Extended Warranty, whichever is longer. If while under extended warranty, the Covered Product is not repairable and a replacement product is not available, we will refund to you the Extended Warranty purchase price and this contract will be terminated.

EXCLUSIONS The following are excluded from the Extended Warranty coverage: (1) periodic maintenance and repair or replacement of parts due to normal wear and tear; (2) batteries, peripherals, cables, cords, finishes, optional software, or accessories; (3) damage caused by shipping, installation, unauthorized attachments or modification, misuse, abuse, negligence, tampering, dropped product, collision with another object; loss of power or improper use, including improper use of electrical/power supply; (4) damage caused by disasters such as fire, flood, wind, and lightning; (5) Covered Products with removed or altered serial numbers; (6) any damage due to accident, resulting from inaccurate satellite transmissions. Inaccurate transmissions can occur due to changes in the position, health or geometry of a satellite or modifications to the receiver that may be required due to any change in the GPS used to obtain position, velocity and time information. (Note: GPS is operated by the U.S. Government and GLONASS is the Global Navigation Satellite System of the Russian Federation, which are solely responsible for the accuracy and maintenance of their systems. Certain conditions can cause inaccuracies that could require modifications to the receiver not covered by this Extended Warranty.). Opening, dismantling or repairing of this product by anyone other than an authorized Thales Navigation Service Center will void this warranty.

This Extended Warranty does not cover any fees related to third party contacts or no problem found diagnosis. If your Covered Product experiences a defect or damage that is excluded from coverage or if no covered defect or damage is found, you are responsible for all repair costs.

IF YOUR PRODUCT NEEDS REPAIR To obtain service, call 888-550-7628. You will be given a return authorization (RA) number. For faster service, please have your Extended Warranty Card available when you place the call. Do not return the product to your retailer. Your service representative will direct you to send your product to a designated service center. Ship the Covered Product (postage pre-paid and insured) to the designated service center. The name, address and phone number for returning the product to you must be included. The RA number should be written legibly on the front of the box. We suggest using a trackable shipping method such as UPS or FedEx when returning a Covered Product for service.

We will return repaired or replaced Covered Product by ground shipping. While we try to complete service as quickly as possible, we are not responsible for delays caused by factors beyond our control, including but not limited to shipping delays or acts of God.

We are not responsible for software or data stored in the Covered Product returned for service. Back up all software and your data before returning the Covered Product for repair.

DISCLAIMER OF CERTAIN LIABILITIES UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO LOST PROFITS, DAMAGES RESULTING FROM DELAY OR LOSS OF USE, LOSS OF OR DAMAGES ARISING OUT OF BREACH OF THIS WARRANTY OR ANY IMPLIED WARRANTY EVEN THOUGH CAUSED BY NEGLIGENCE OR OTHER FAULT OF THALES NAVIGATION, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS EXTENDED WARRANTY IS NOT INTENDED TO CREATE ANY IMPLIED WARRANTIES, WHICH MAY OR MAY NOT EXIST UNDER APPLICABLE LAW. ALL OTHER EXPRESSED OR IMPLIED WARRANTIES, INCLUDING FITNESS FOR ANY PARTICULAR PURPOSE OR MERCHANTABILITY, ARE HEREBY DISCLAIMED. Some national, state, or local laws do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

CANCELLATION We may cancel this Extended Warranty for fraud, material misrepresentation, or unauthorized repair of Covered Products. Written notice of cancellation will be mailed to you at your last known address not less than 60 days before cancellation is effective.

You can cancel this Extended Warranty at any time for any reason by mailing written notice of cancellation. If this Extended Warranty is cancelled: (a) within 30 days of the effective date of this Extended Warranty, you will receive a full refund of the price paid for the Extended Warranty provided no service has been performed, or (b) more than 30 days after the effective date of the Extended Warranty or after service has been performed, you will receive a pro rata refund less the cost of any service received. Deliver cancellation request along with your Extended Warranty Card to: Thales Navigation, Attn: Extended Warranty Customer Support, P.O. Box 869, San Dimas, CA 91773.

IMPORTANT CONSUMER INFORMATION This Extended Warranty is deemed a service contract under federal law. Should repair parts become unavailable during the coverage period of this Extended Warranty, we will be excused from performance and you will receive a refund of the purchase price paid by you for the Extended Warranty less claims paid, if any. In no event will we be liable for any damages as a result of the unavailability of repair parts.

Although we maintain a record of your Extended Warranty purchase on a computer retrieval system, you must retain in your possession your validated Extended Warranty Card and all original receipts to receive product replacements or exchanges.

THIS WARRANTY GIVES YOU SPECIFIC RIGHTS. YOU MAY HAVE OTHER RIGHTS AND CERTAIN LIMITATIONS CONTAINED IN THIS WARRANTY MAY NOT APPLY TO YOU.

The laws of the State of California govern this Extended Warranty, without reference to its conflict of law provisions or the U.N. Convention on Contracts for the International Sale of Goods.

SPECIAL STATE REQUIREMENTS The following terms apply only in the state indicated if inconsistent with the terms above:

ARIZONA: You may cancel this service contract at anytime prior to the expiration date by sending written notice to the Thales Navigation, P.O. Box 869, San Dimas, CA 91773. You will receive a pro-rata refund. No claims incurred or paid will be subtracted from this refund.

CALIFORNIA: If you purchase your contract in California you may cancel this Extended Warranty by providing written notice to Thales Navigation. If your request for cancellation is made more than 30 days after the date of receiving the Extended Warranty card, you will receive a pro-rata refund of the Extended Warranty purchase price, less the cost of repairs made (if any), and less an administrative fee of 10% of the Extended Warranty, price up to $25.00.

CONNECTICUT: The expiration date of this Extended Warranty shall automatically be extended by the duration that the product is in our custody while being repaired. In the event of a dispute with Thales Navigation, you may contact The State of Connecticut, Insurance Department, P.O. Box 816, Hartford, CT 06142-0816, Attn: Consumer Affairs. The written complaint must contain a description of the dispute, the purchase price of the product, the cost of repair of the product and a copy of the Extended Warranty contract.

GEORGIA: Cancellation will comply with Section 33-24-44 of the Georgia Code.

KANSAS: This Extended Warranty is not an insurance policy.

MARYLAND: The expiration date of this Extended Warranty shall automatically be extended by the duration that the product is in our custody while being repaired.

NEVADA: If you cancel this Extended Warranty, no deduction will be made from the refund for the cost of any service received.

NORTH CAROLINA: The purchase of an Extended Warranty is not required in order to purchase or obtain financing for the product. You may cancel this Extended Warranty at any time after purchase. You will receive a pro-rata refund of the Extended Warranty purchase price less the cost of repairs made.

SOUTH CAROLINA: To prevent any further damage, please refer to the owner's manual. If you have any questions regarding this Extended Warranty, or a complaint against Thales Navigation, you may contact the South Carolina Department of Insurance, P.O. Box 100105, Columbia, SC 29202-3105, (803) 737-6180, (800) 768-3467.

TENNESSEE: The expiration date of this Extended Warranty shall automatically be extended by the duration that the product is in our custody while being repaired.

TEXAS: If you have a complaint against Thales Navigation, you may contact the Texas Department of Licensing & Regulation, 920 Colorado, P.O. Box 12157, Austin, Texas 78711, (800) 803-9202.

UTAH: The Utah Property and Casualty Guarantee Association does not guarantee coverage afforded under this Extended Warranty.

WISCONSIN: THIS EXTENDED WARRANTY IS ONLY SUBJECT TO LIMITED REGULATION BY THE WISCONSIN OFFICE OF THE COMMISSIONER OF INSURANCE. This Extended Warranty shall not be canceled due to unauthorized repair of the covered equipment. If you cancel this Extended Warranty, no deduction shall be made from the refund for the cost of any service received.